


Coupling



(2.6)

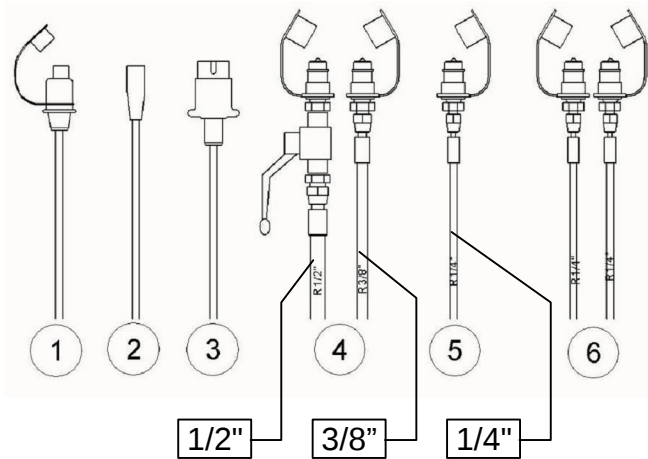

1. 3-pin plug (EURO) Tractor battery
2. CAN-plug for K-Plus display
3. 7-pin plug for tail lights
4. Lifting of Flexi Drill Double acting
5. Rear wheel setting and coulter pressure Single acting
6. Front tool Double acting

Rear wheel and coulter sections

(5.5)

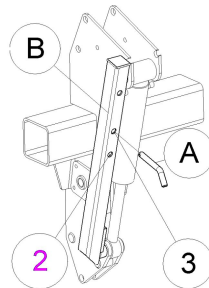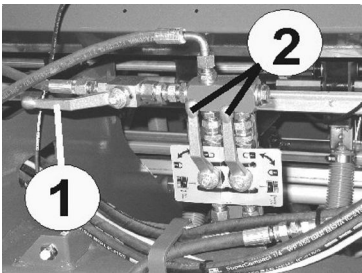


- a. Park at levelled, horizontal surface
- b. Connect 1/2" and 3/8" hoses to double acting
- c. Connect 1/4" hose to single acting
- d. Put 1/2" outlet to floating

- e. Open ball valve at 1/2"
- f. Open ball valves 1 and 2
- g. Apply pressure: 1/4" – FD is lifting
- h. Put pin bolts A in safety bracket B pos. 3
- i. Lower FD and close ball valves 1 and 2
- j. Lift FD normally (Apply pressure: 1/2")
- k. Move pin bolts A to safety bracket pos. 2
- l. Check height of frame 650-670 mm
- m. Check frame horizontal

Coulter pressure

(5.7.2)

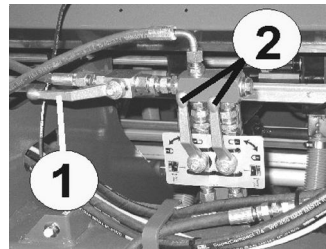

- a. Coulter pressure is applied by hose 5 (1/4")
- b. Close ball valve 1 when correct pressure is reached

Ploughed land	30-40 bar
Cultivated stubble	40-55 bar
Direct drilling (no-till)	55-70 bar
Max. pressure	70 bar


Tyre pressure

(7.4)

Front wheel	117 kPa	1,2 bar
Drive Wheel	136 kPa	1,4 bar
Rear wheel	136 kPa	1,4 bar
Middle packer	136 kPa	1,4 bar

Middle wall

(5.8.1)

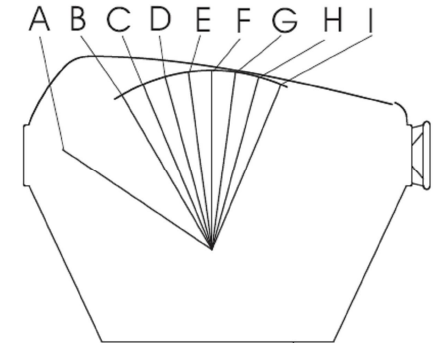


FD 3000	A	B	C	D	E	F	G	H	I
Fertilizer	0	1270	1390	1520	1630	1170	1880	1980	2140
Seed	2410	1830	1670	1560	1460	1360	1260	1150	1080
Seed w fine seed box	2080	1500	1340	1230	1130	1030	930	820	750


FD 4000	A	B	C	D	E	F	G	H	I
Fertilizer	0	1690	1910	2080	2240	2420	2570	2720	2850
Seed	3310	2430	2290	2130	2000	1860	1720	1580	1430
Seed w fine seed box	2860	1980	1840	1680	1550	1410	1270	1130	980

Shutters and bottom flaps

(5.9)(8.4)

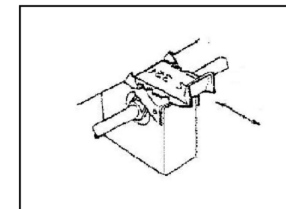

Shutter

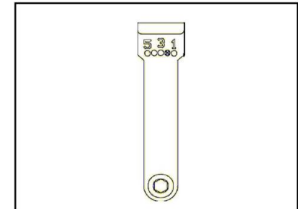


Bottom flaps


		Shutters	Flaps	
Fertilizer	Urea	2	3	
	Granulate	2	3	
Seed	Cereals	2	2	
	Small seed	2	2	
	Peas	2	4	
Start fertilizer	Granulate	2	2	Optional
Fine seed	Fine seed	2	2	

Calibration (5.10)(8.4)(8.5)

Seed/Fertilizer (basic machine)

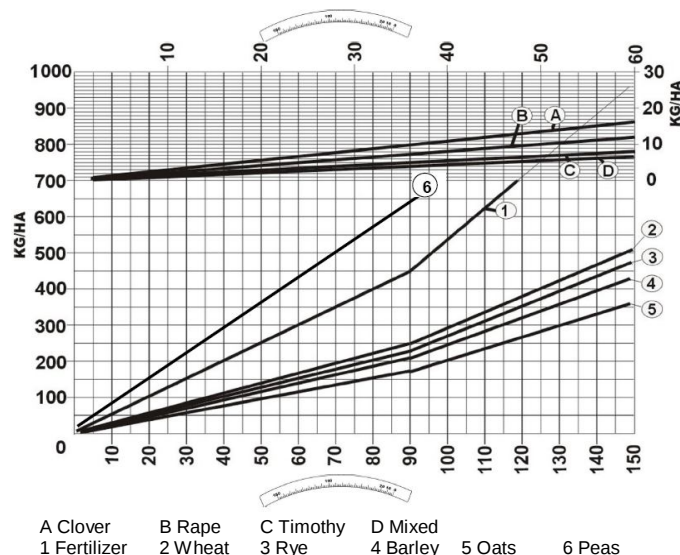

Fine seed box (option)

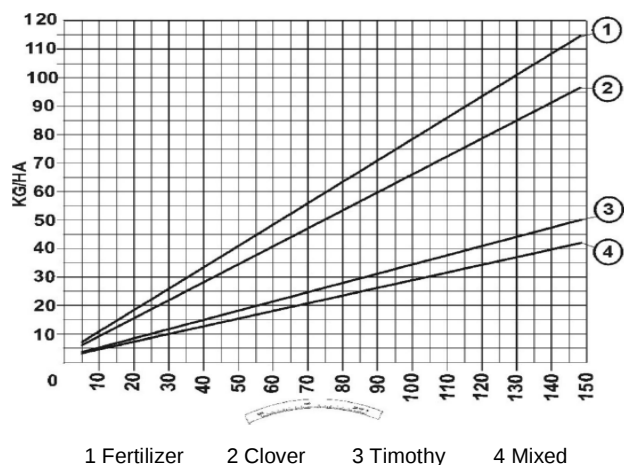

	1/100 hectare	
FD 3000	15 2/3 revs.	33,3 m
FD 4000	11 3/4 revs.	25 m
	Handle	Driving

Calibration – Electrical remote control (8.5)

Seed

Press A4

Press B4

Observe value

Set value 80

Calibrate

Press A3

Enter kg

Press B3


Enter kg/ha

Return

Check – new calibration

Goto Operations

Adjust

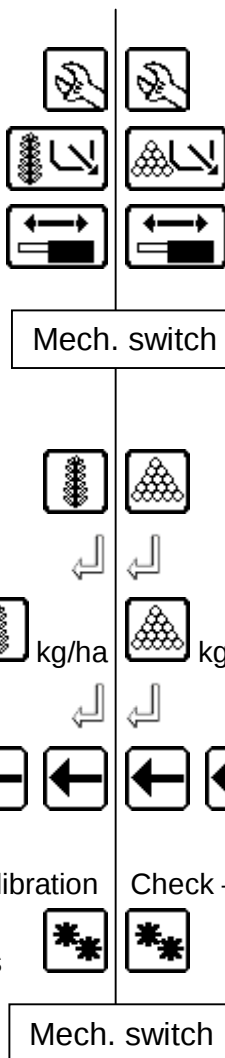

Fertilizer

Press A4

Press B2

Observe value

set value 80

Calibrate

Press A3

Enter kg

Press B3

Enter kg/ha

Return

Check – new calibration

Goto Operations

Adjust

K-Plus


(5.6)(8.1)(8.2)(8.5)

Operation

Settings

Display

Return

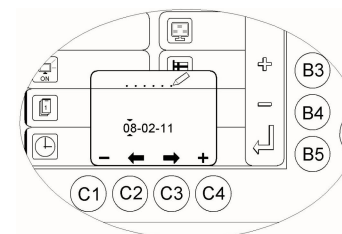

C2, ←,

C3, →

C1, -

C4, +

B5, ↵

B1, ESC

Alarms

Information

Forward

Select digit

Change

Enter

Esc

Tramlining

(8.1)

Setting

Press A2

Press A4

Press A4

Enter interval



Manually counting

Press A2

Press A4

Press A5, - / B5, +

Count inactive/active

In Operation: Press A5

Alarms

(8.2)

Reset (Operation)

Press B5



Deactivate

Press A3

Active

Inactive



Kongskilde U.K. Ltd.

Norfolk NR 25 6 EE

Tlf. +44 1263 713291 • Fax +44 1263 712922

mail@kuk.kongskilde.com

www.kongskilde.com

552500104
01.04.2011