



## 2800 RES-TILL FIELD CULTIVATOR

Kongskilde  
2800 Series



\*Model may not be exactly as shown.

Kongskilde reserves the right to make changes to product designs and specifications without notice or obligation to rework.

See your local Kongskilde representative for current product specifications, instructions and options.

Assembly Notes / Tine Patterns

# Index


|                                           |    |
|-------------------------------------------|----|
| General Notes: .....                      | 3  |
| Disc Gang Assembly Notes: .....           | 4  |
| 2810-50 (16ft Narrow Center) 4inch: ..... | 5  |
| 2810-50 (16ft Narrow Center) 6inch: ..... | 6  |
| 2810-60 (20ft Narrow Center) 4inch: ..... | 7  |
| 2810-60 (20ft Narrow Center) 6inch: ..... | 8  |
| 2810-70 (23ft Narrow Center) 4inch: ..... | 9  |
| 2810-70 (23ft Narrow Center) 6inch: ..... | 10 |
| 2813-70 (23ft Wide Center) 4inch: .....   | 11 |
| 2813-70 (23ft Wide Center) 6inch: .....   | 12 |
| 2813-80 (26ft Wide Center) 4inch: .....   | 13 |
| 2813-80 (26ft Wide Center) 6inch: .....   | 14 |
| 2813-90 (29ft Wide Center) 4inch: .....   | 15 |
| 2813-90 (29ft Wide Center) 6inch: .....   | 16 |
| 2813-100 (33ft Wide Center) 4inch: .....  | 17 |
| 2813-100 (33ft Wide Center) 6inch: .....  | 18 |

## General Notes:



This cultivator has three hinges on each wing. Pin the front hinge first, followed by the middle and then the rear. Leave all of the hinge bolts loose until all 3 hinge pins have been installed.

Use a 1" washer inside the roll pin on all three hinge pins.

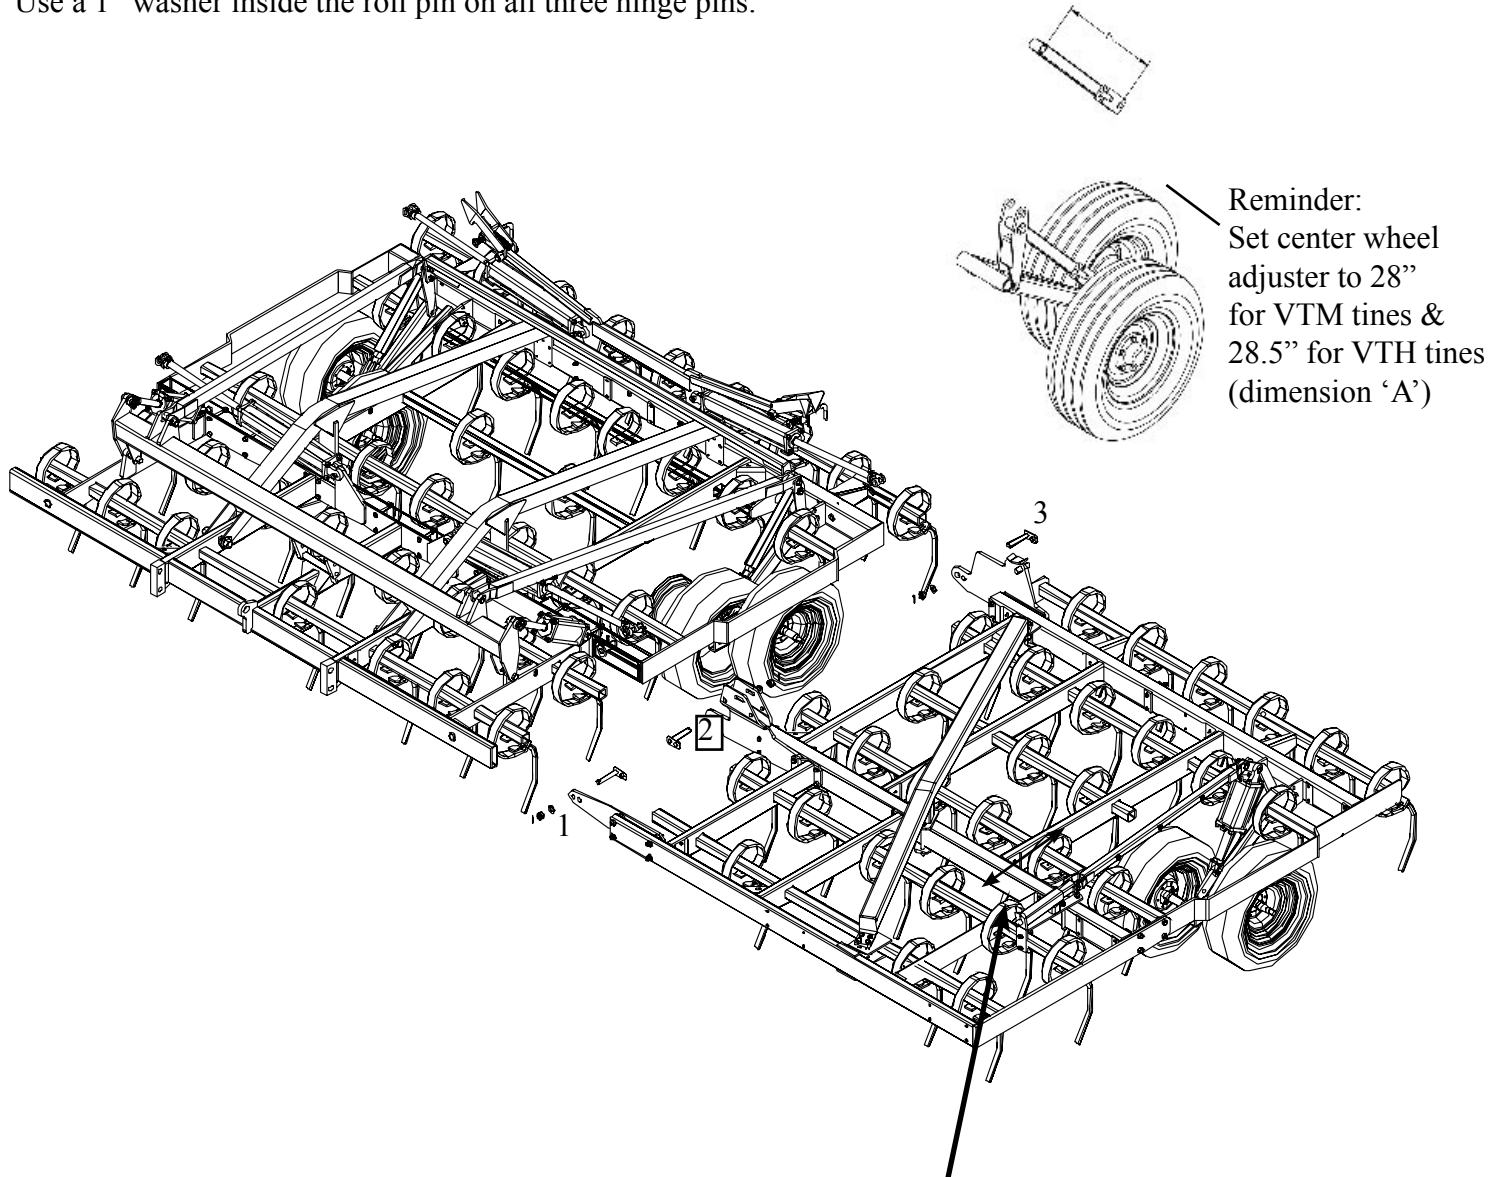

Make sure the wing adjustment slider is cranked out to 7 - 8" *before* raising the machine with the cylinder. If not, a tine could hook itself over the wheel axel, requiring you to remove the tine to unhook it.


This is due to the fact that the Res-Till has high lift when turning in the field.

## Disc Gang Assembly Notes:


Do not attach the hitch extension until the disc gangs have been attached. This will leave more flexibility to work on the disc gangs.



When the flange bolts are tightened down, the disc gang tubes bow slightly. Leave the flange bolts loose until the pillow blocks have been tightened down.




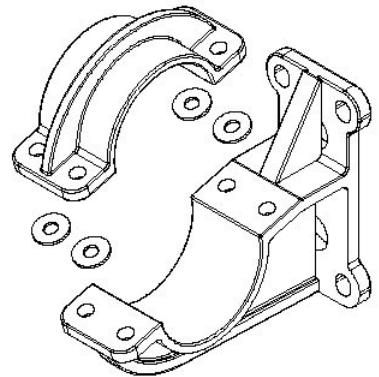


Place 4 1/2" washers between the top and bottom of the 'pillow block' castings.




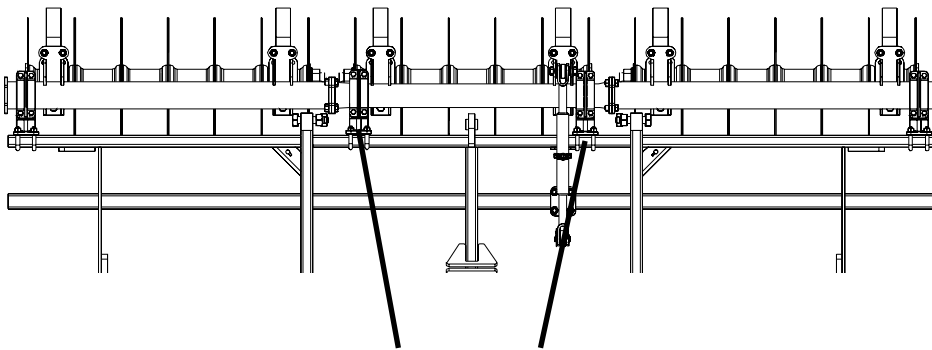


Make sure the pillow blocks are not in contact with the flange bolts or they will catch.


# 2810-50 (16' NARROW CENTER) RESTILL DISC TUBE BEARING AND TINE SPACING - 4"

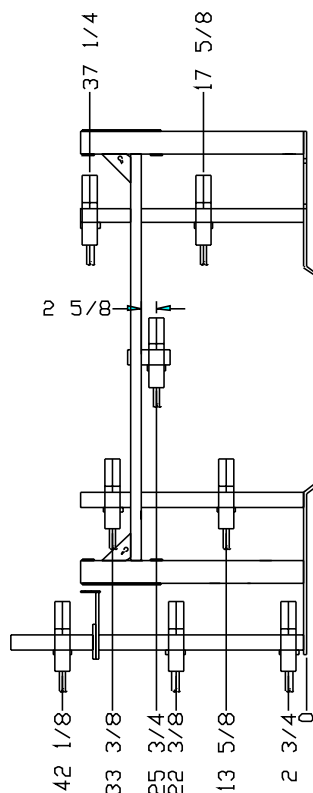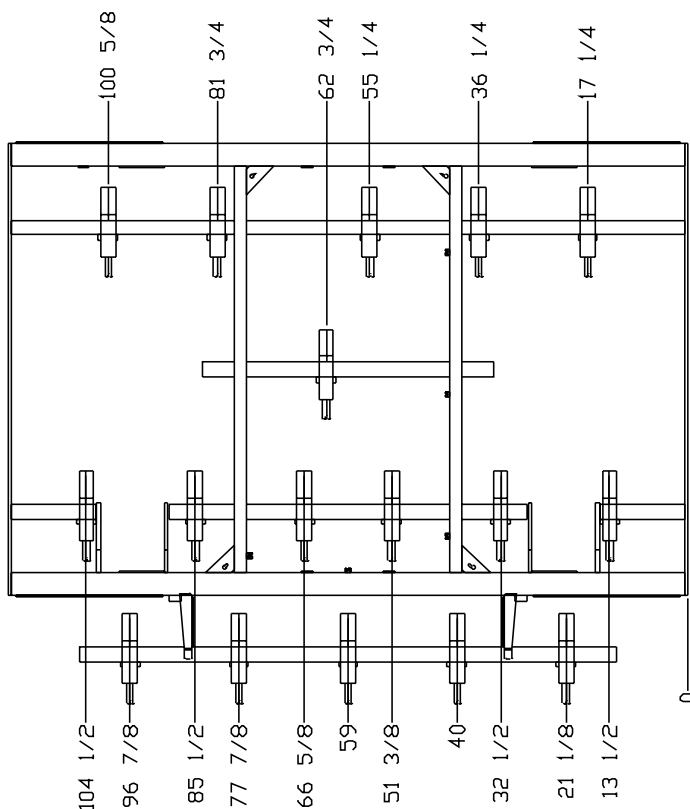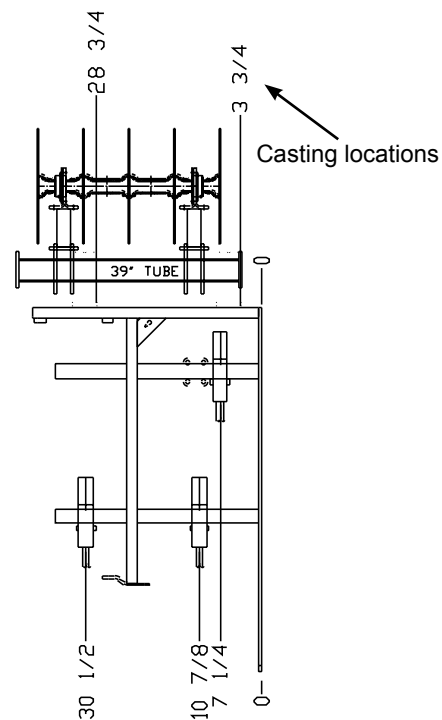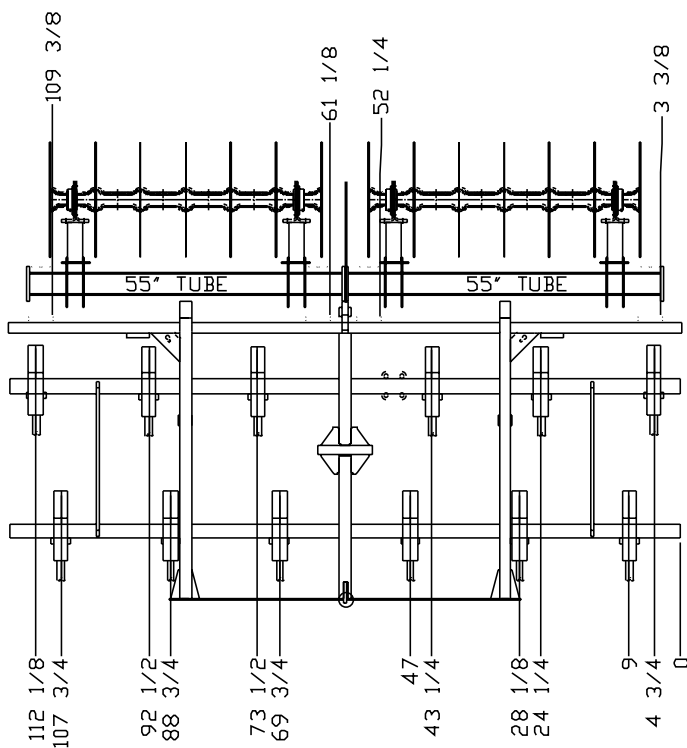




# 2810-50 (16' NARROW CENTER) RESTILL DISC TUBE BEARING AND TINE SPACING - 6"

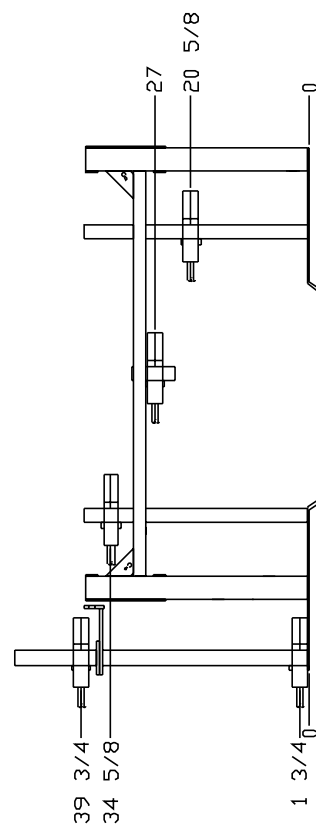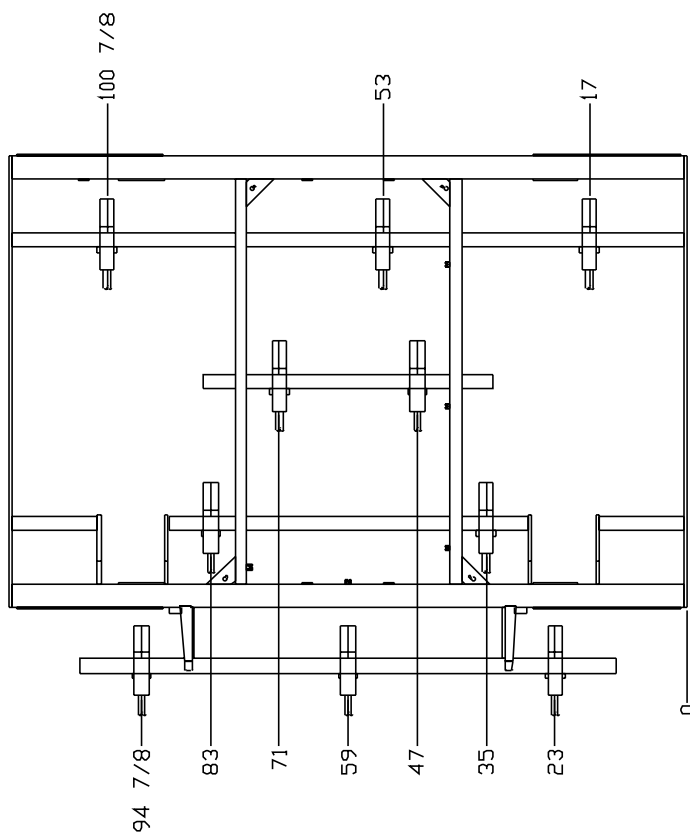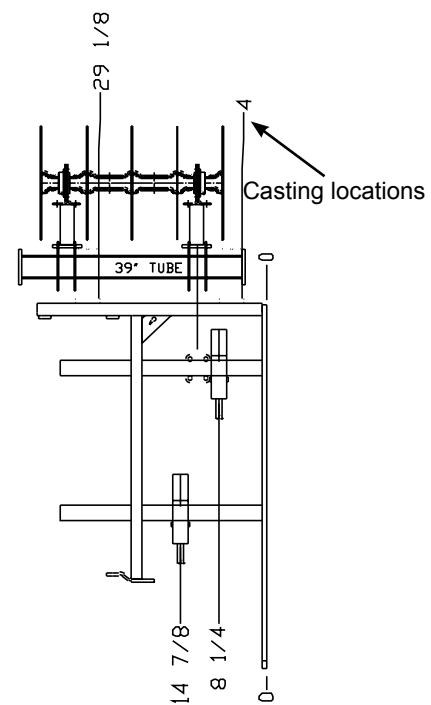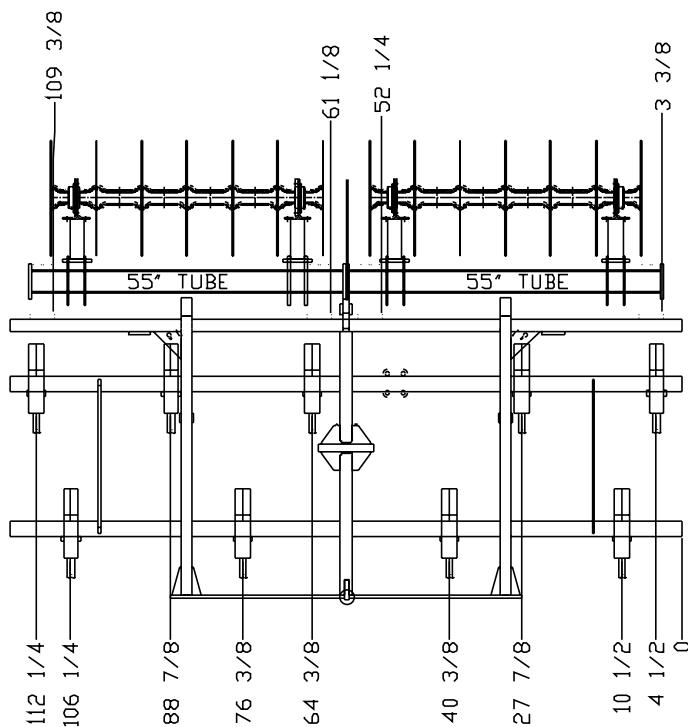




# 2810-60 (20' NARROW CENTER) RESTILL DISC TUBE BEARING AND TINE SPACING - 4"

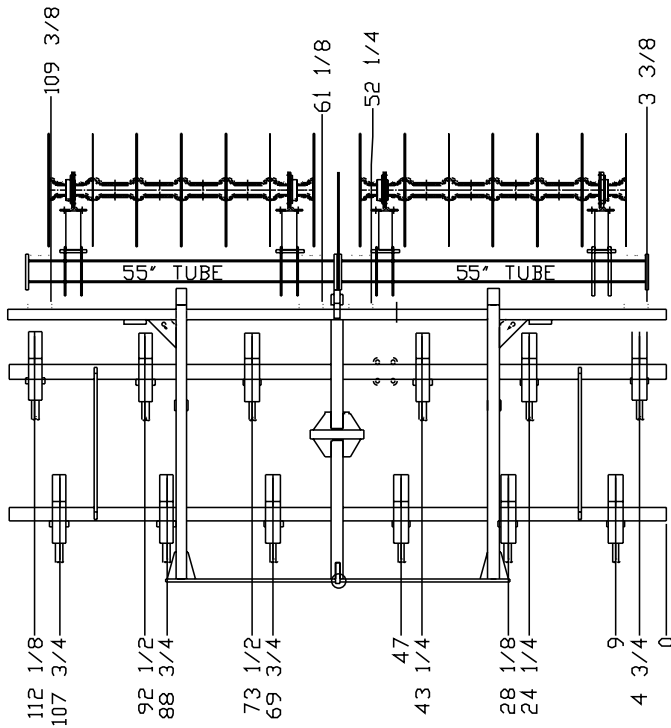


Casting locations

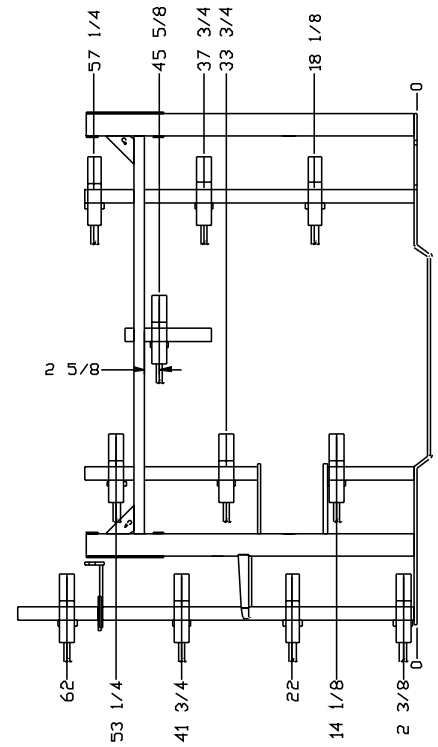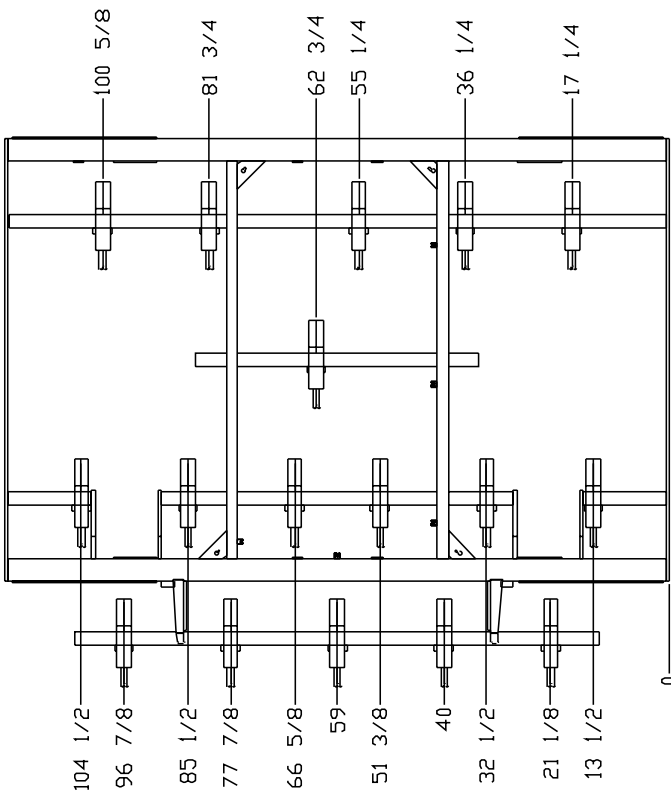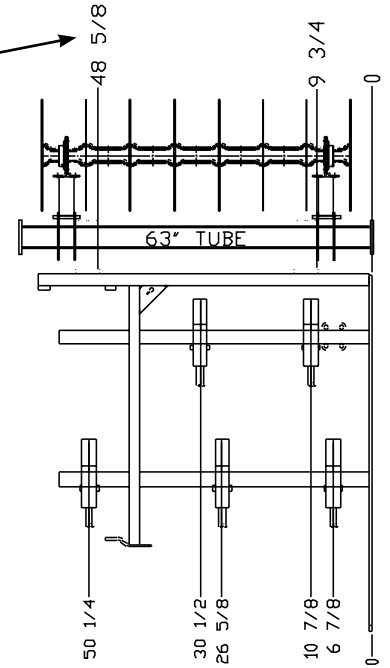




# 2810-60 (20' NARROW CENTER) RESTILL DISC TUBE BEARING AND TINE SPACING - 6"

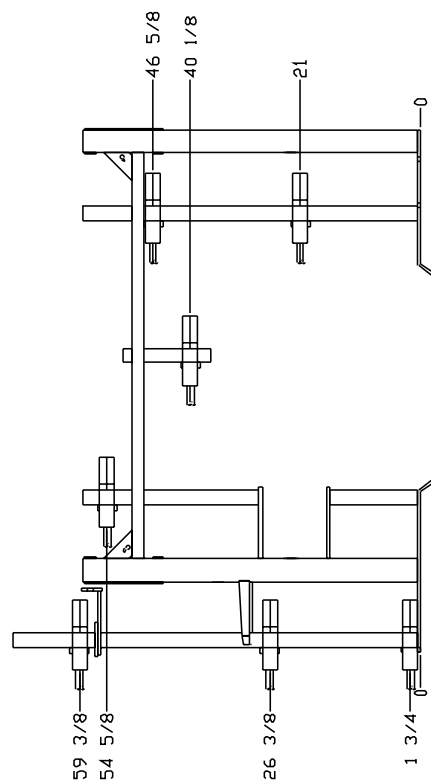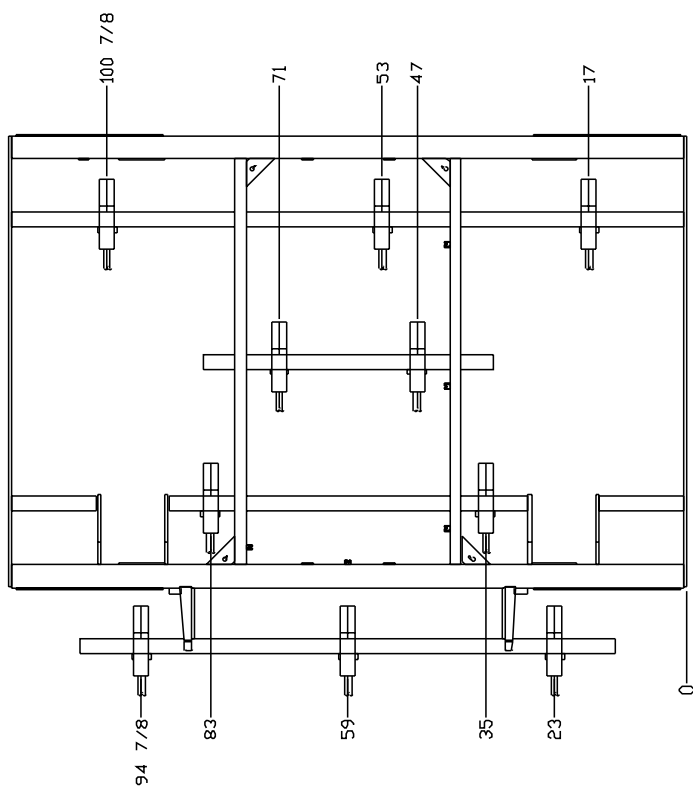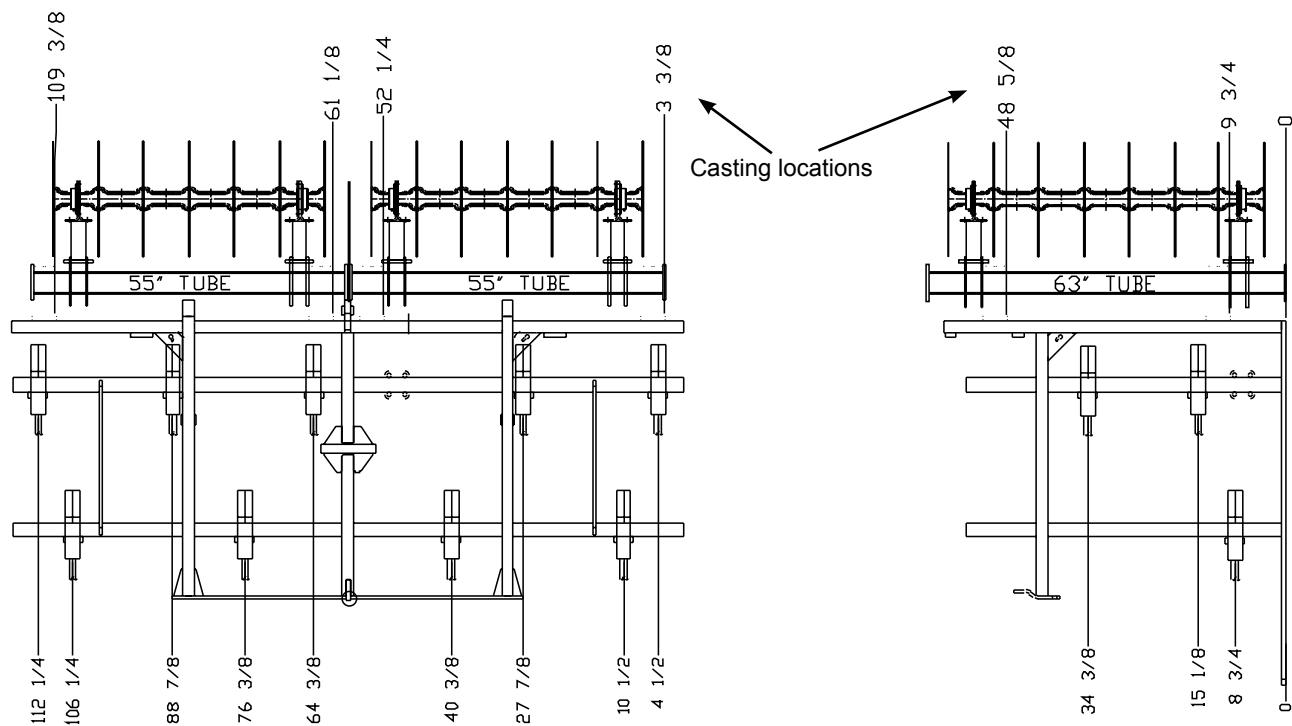


# 2810-70 (23' NARROW CENTER) RESTILL DISC TUBE BEARING AND TINE SPACING - 4"

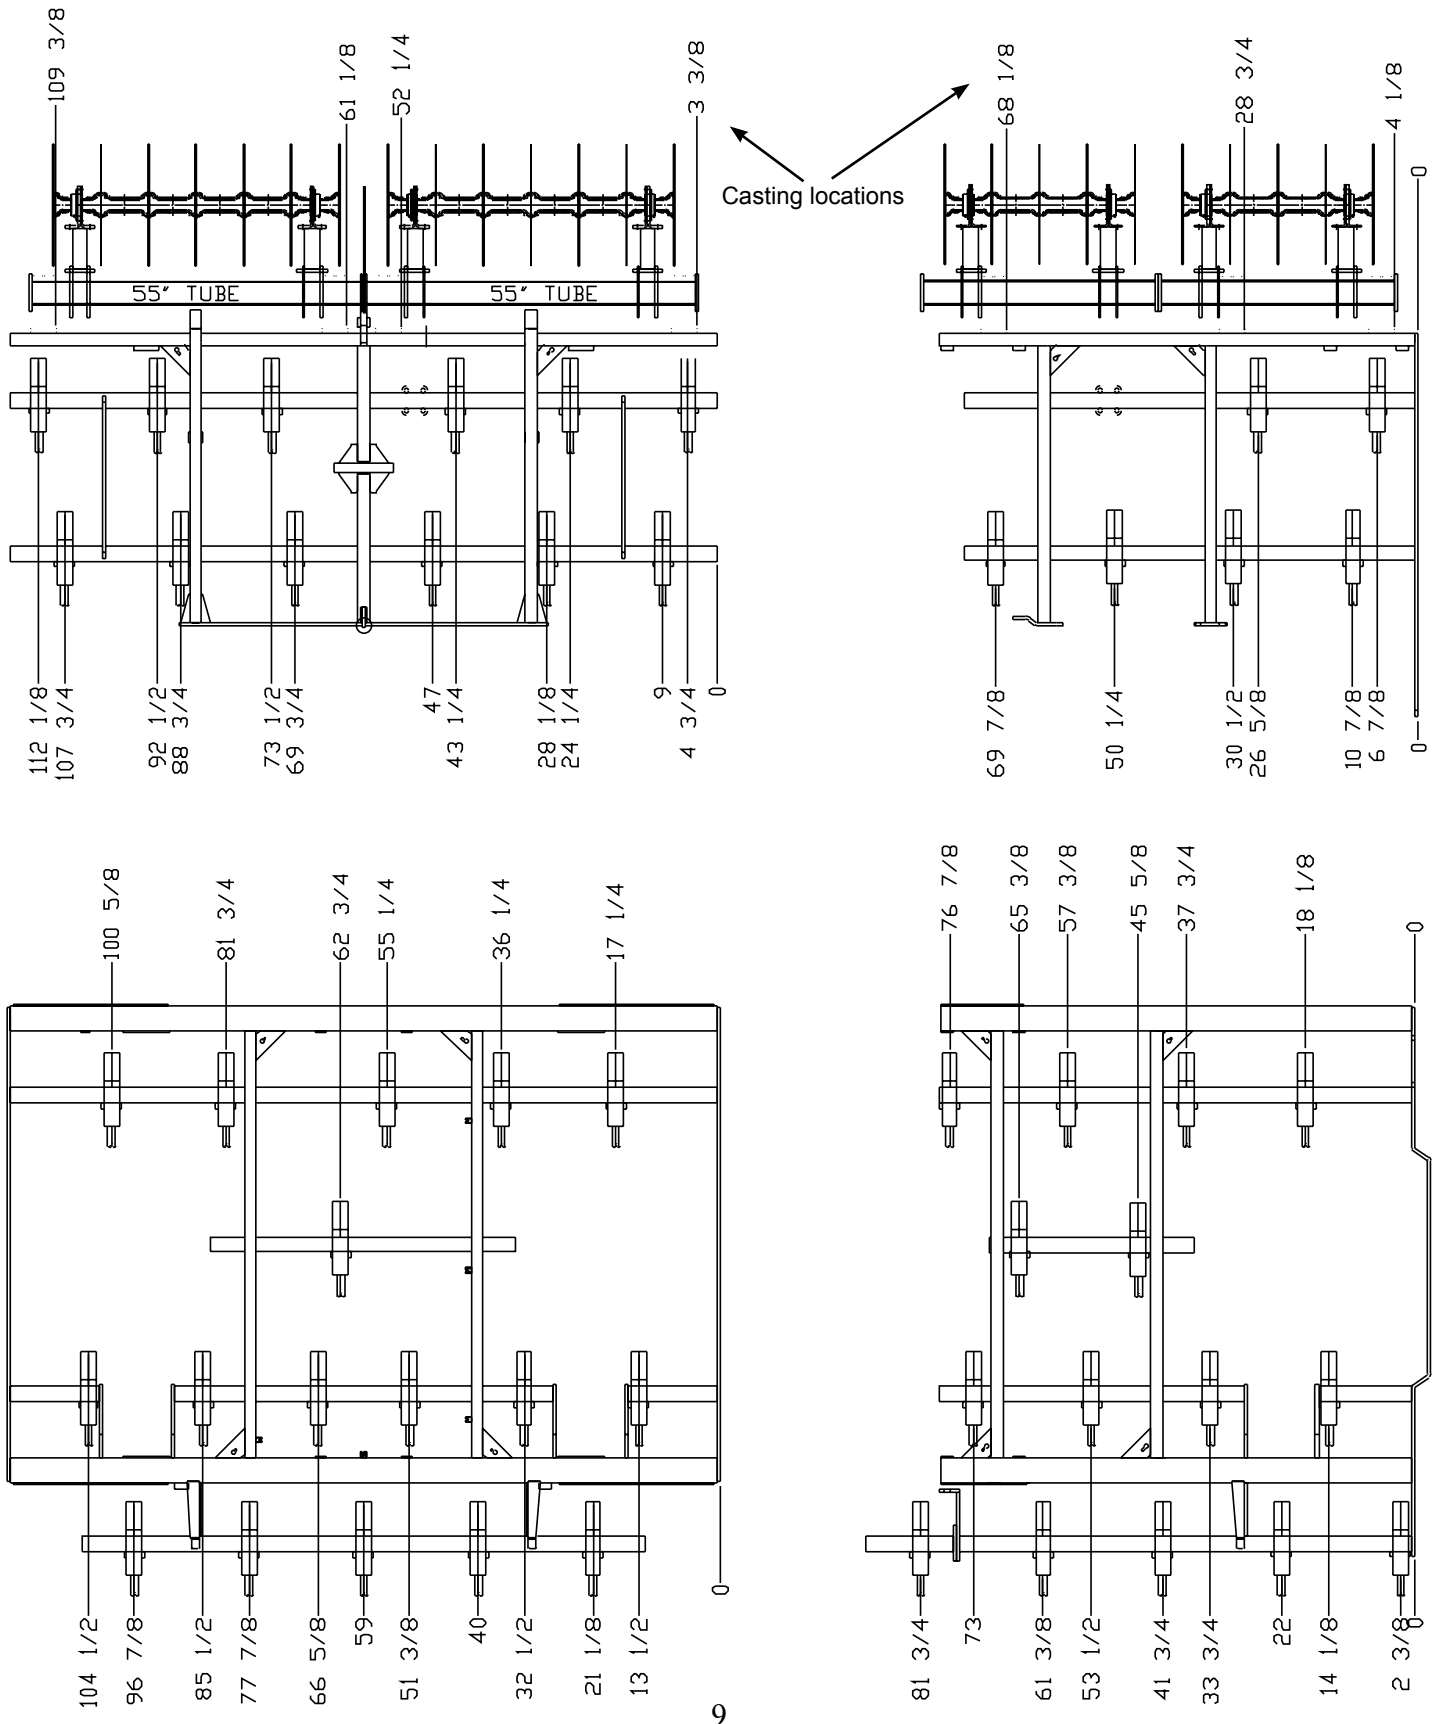


# 2810-70 (23' NARROW CENTER) RESTILL DISC TUBE BEARING AND TINE SPACING - 6"

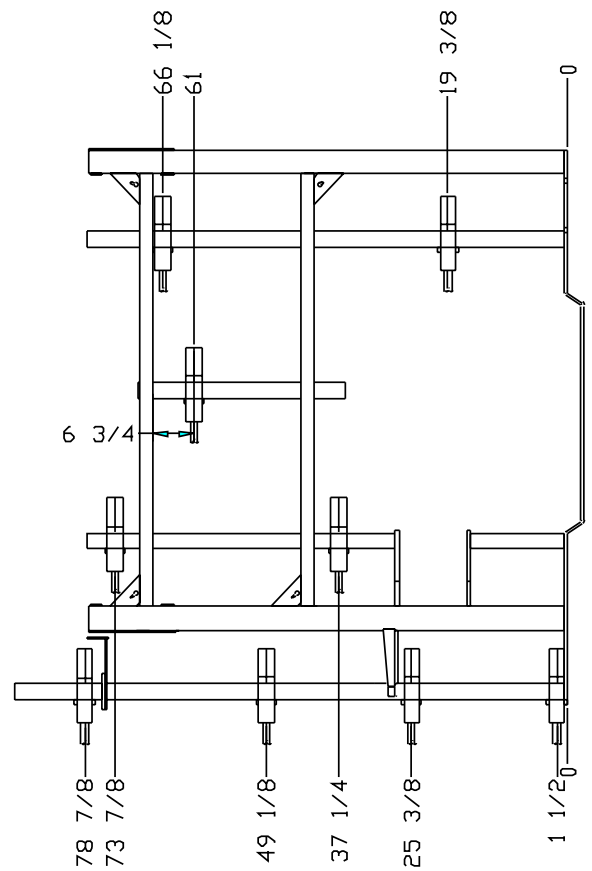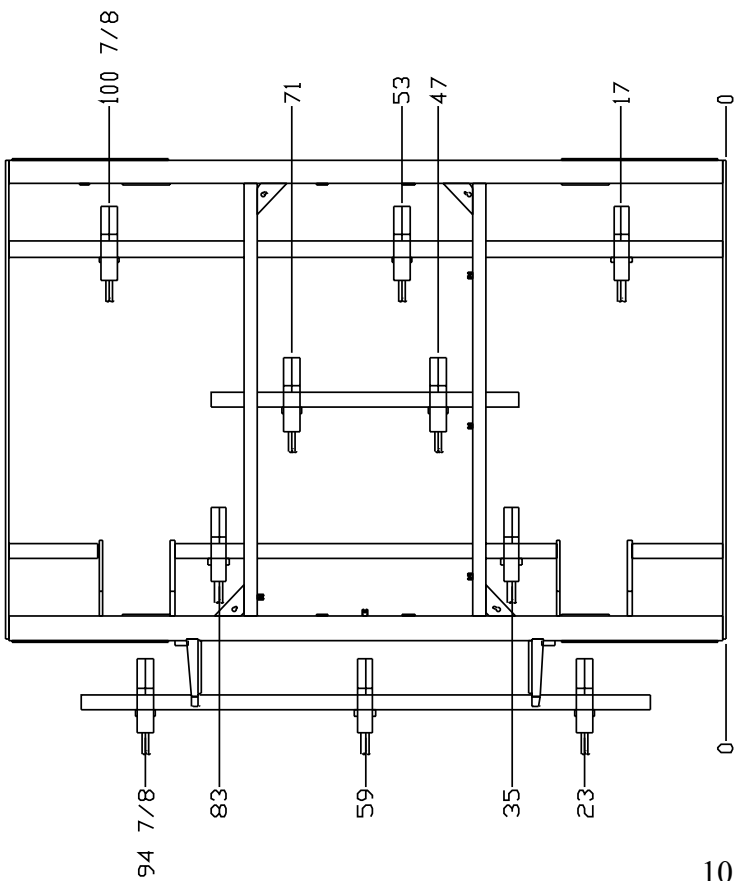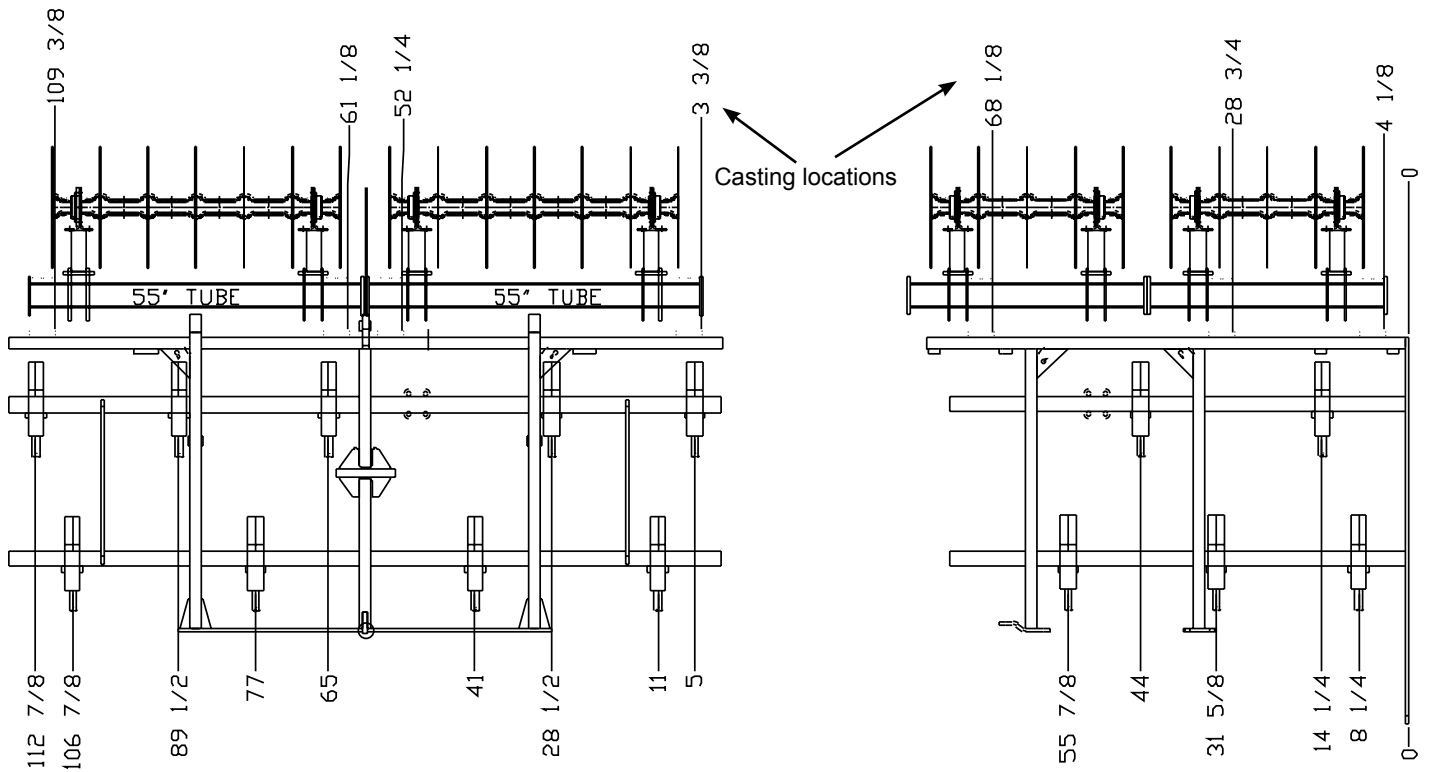


# 2813-70 (23' WIDE CENTER) RESTILL DISC TUBE BEARING AND TINE SPACING - 4"

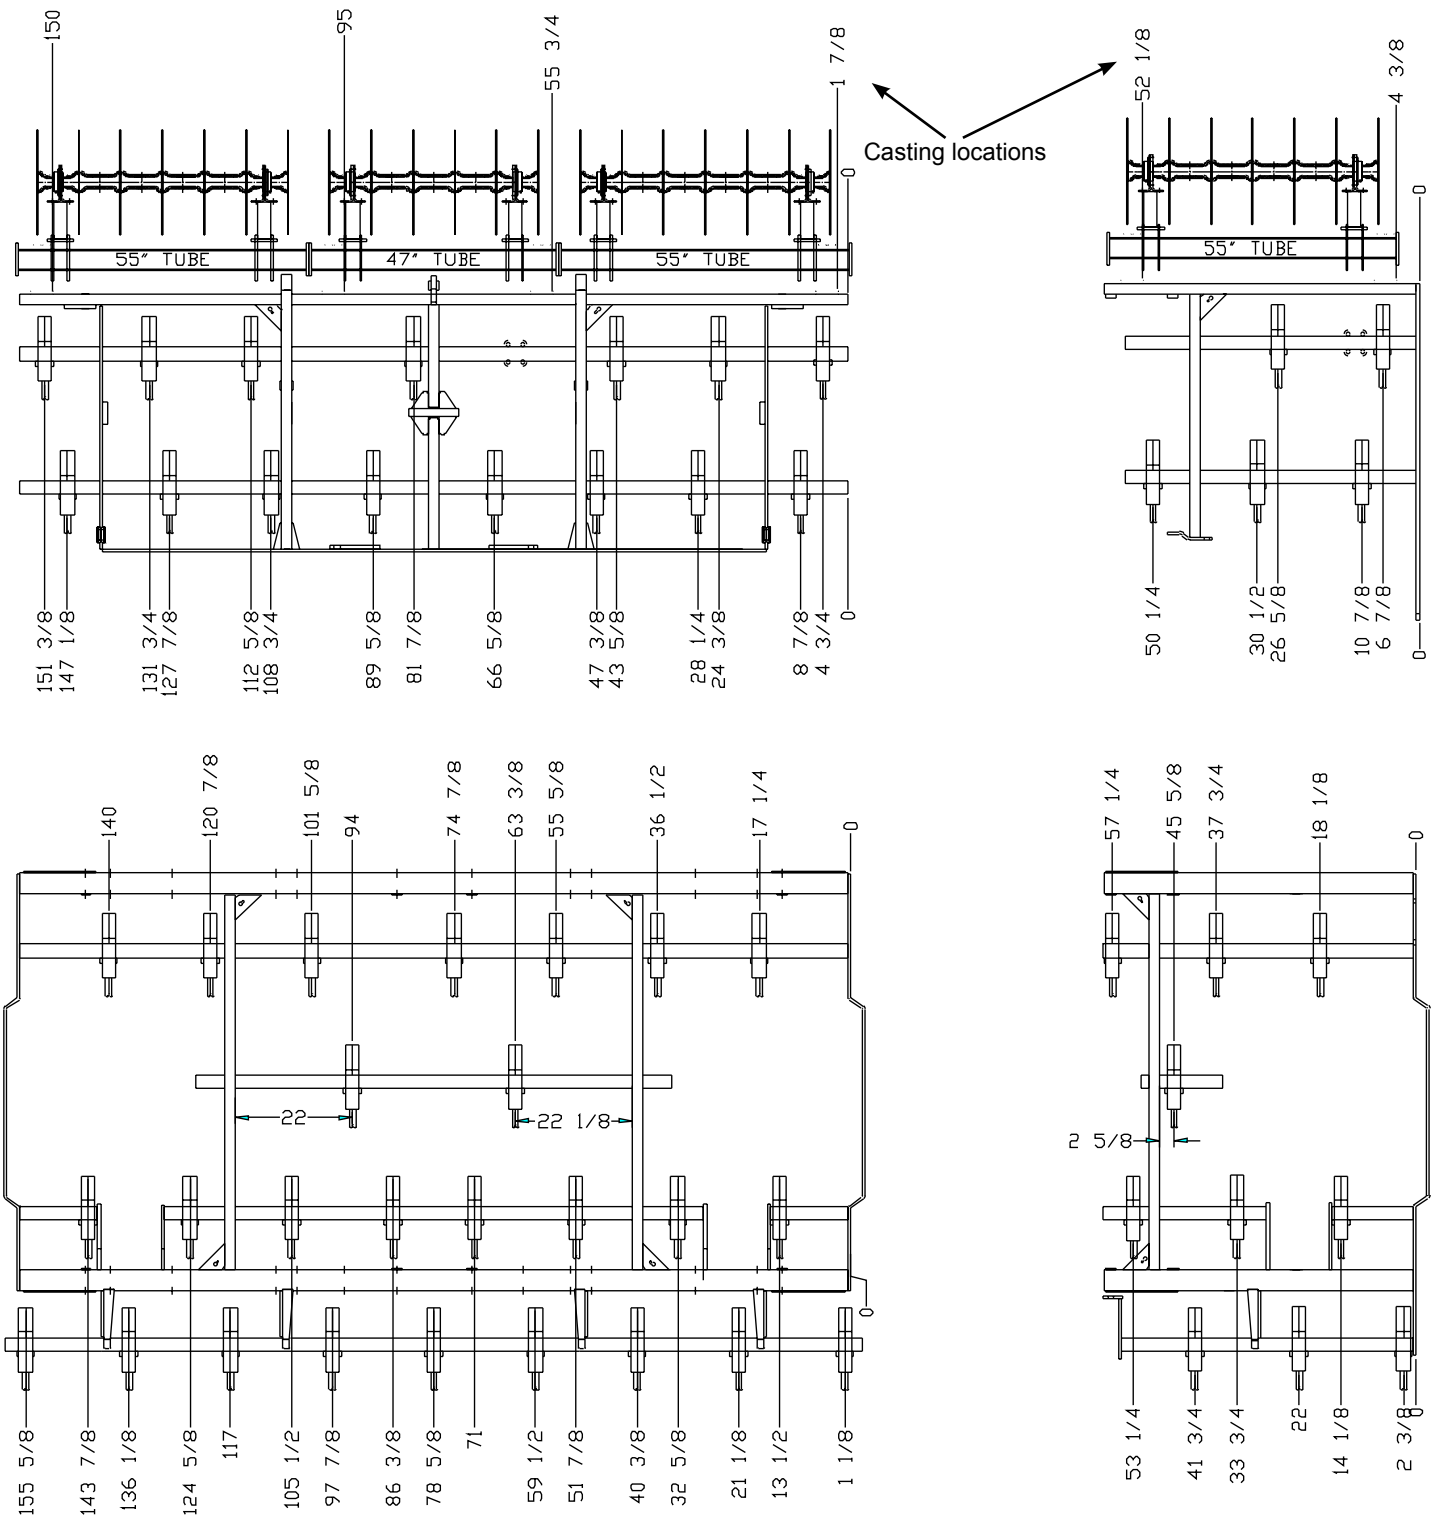


2813-70 (23' WIDE CENTER) RESTILL  
DISC TUBE BEARING AND TINE SPACING - 6"

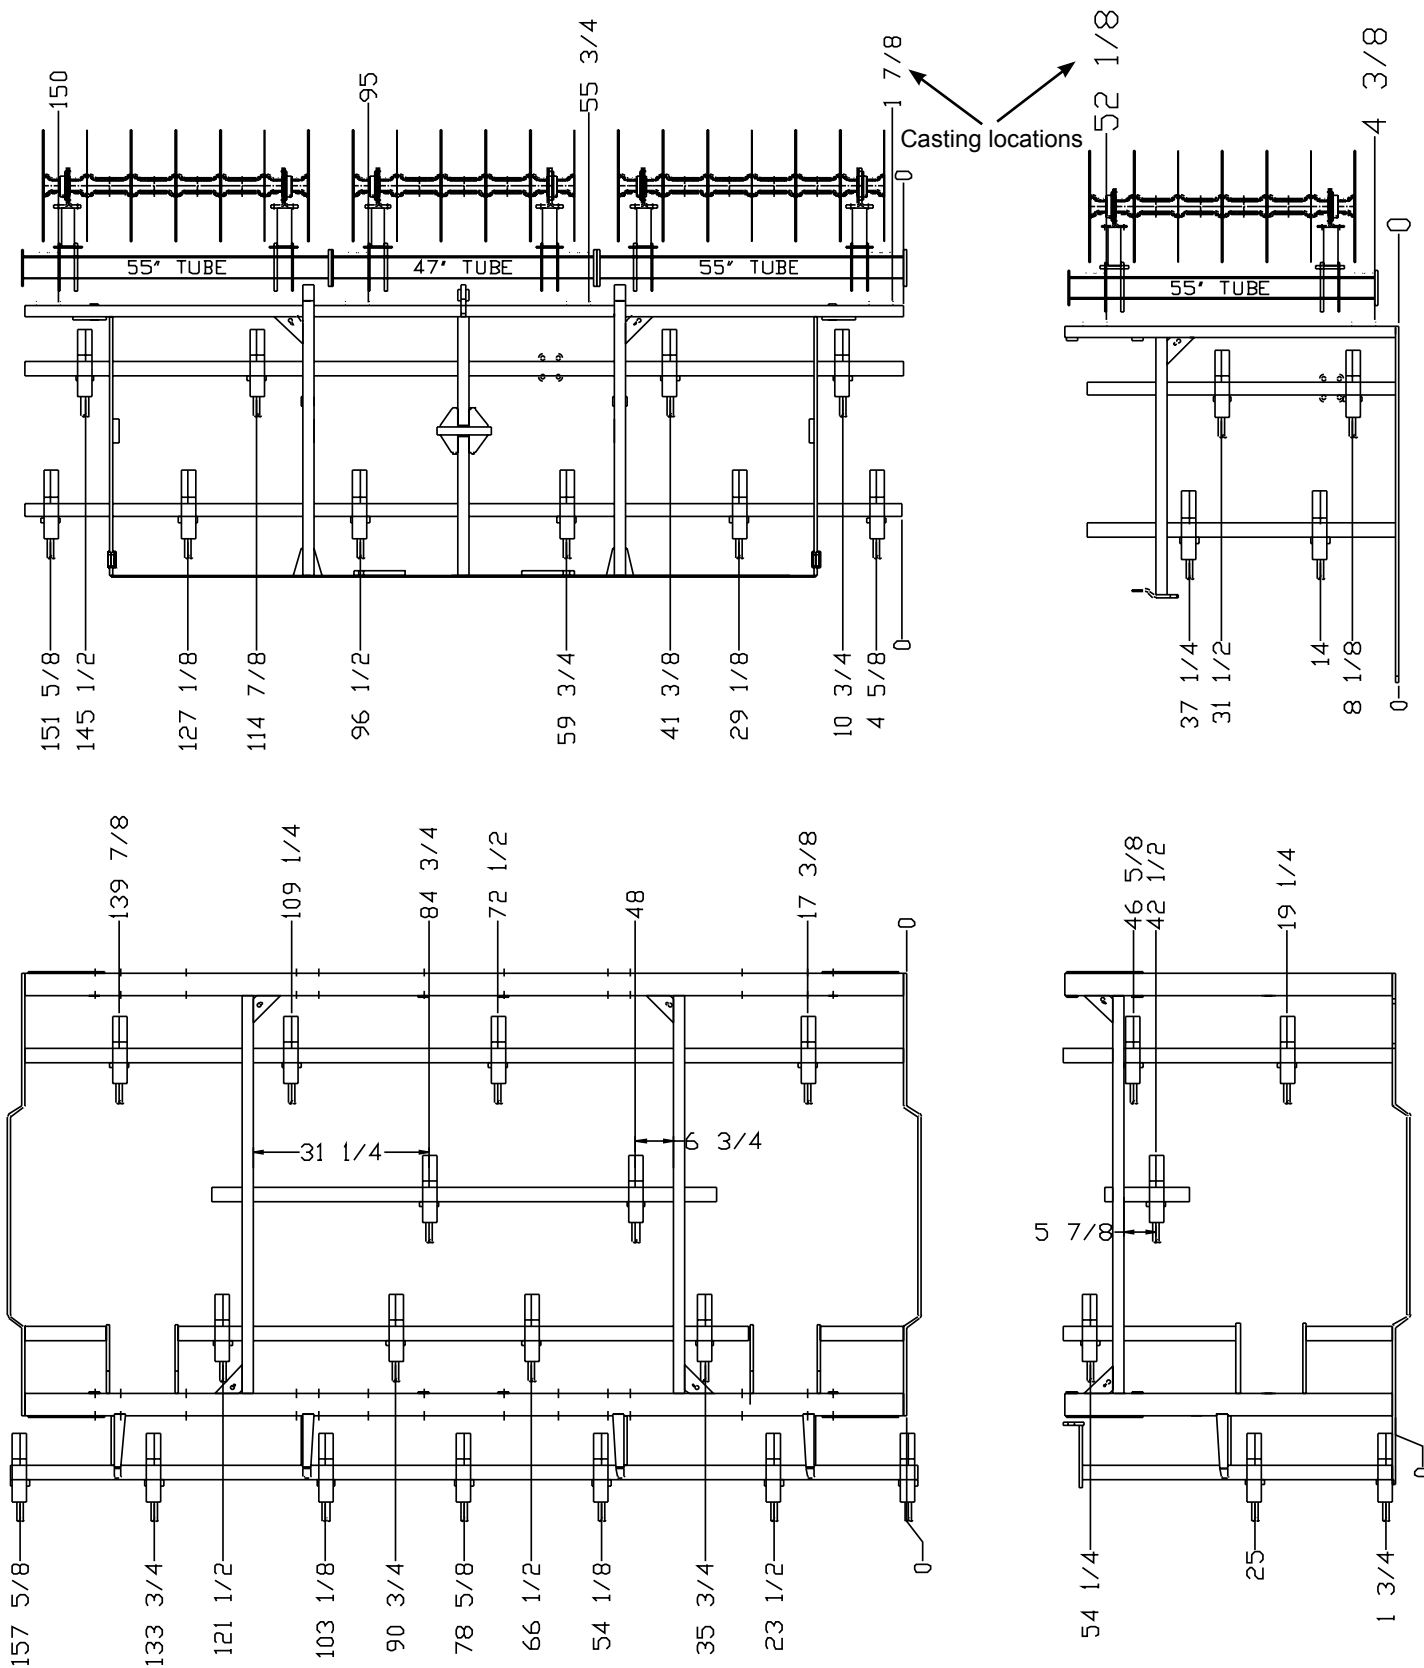


# 2813-80 (29' WIDE CENTER) RESTILL DISC TUBE BEARING AND TINE SPACING - 4"

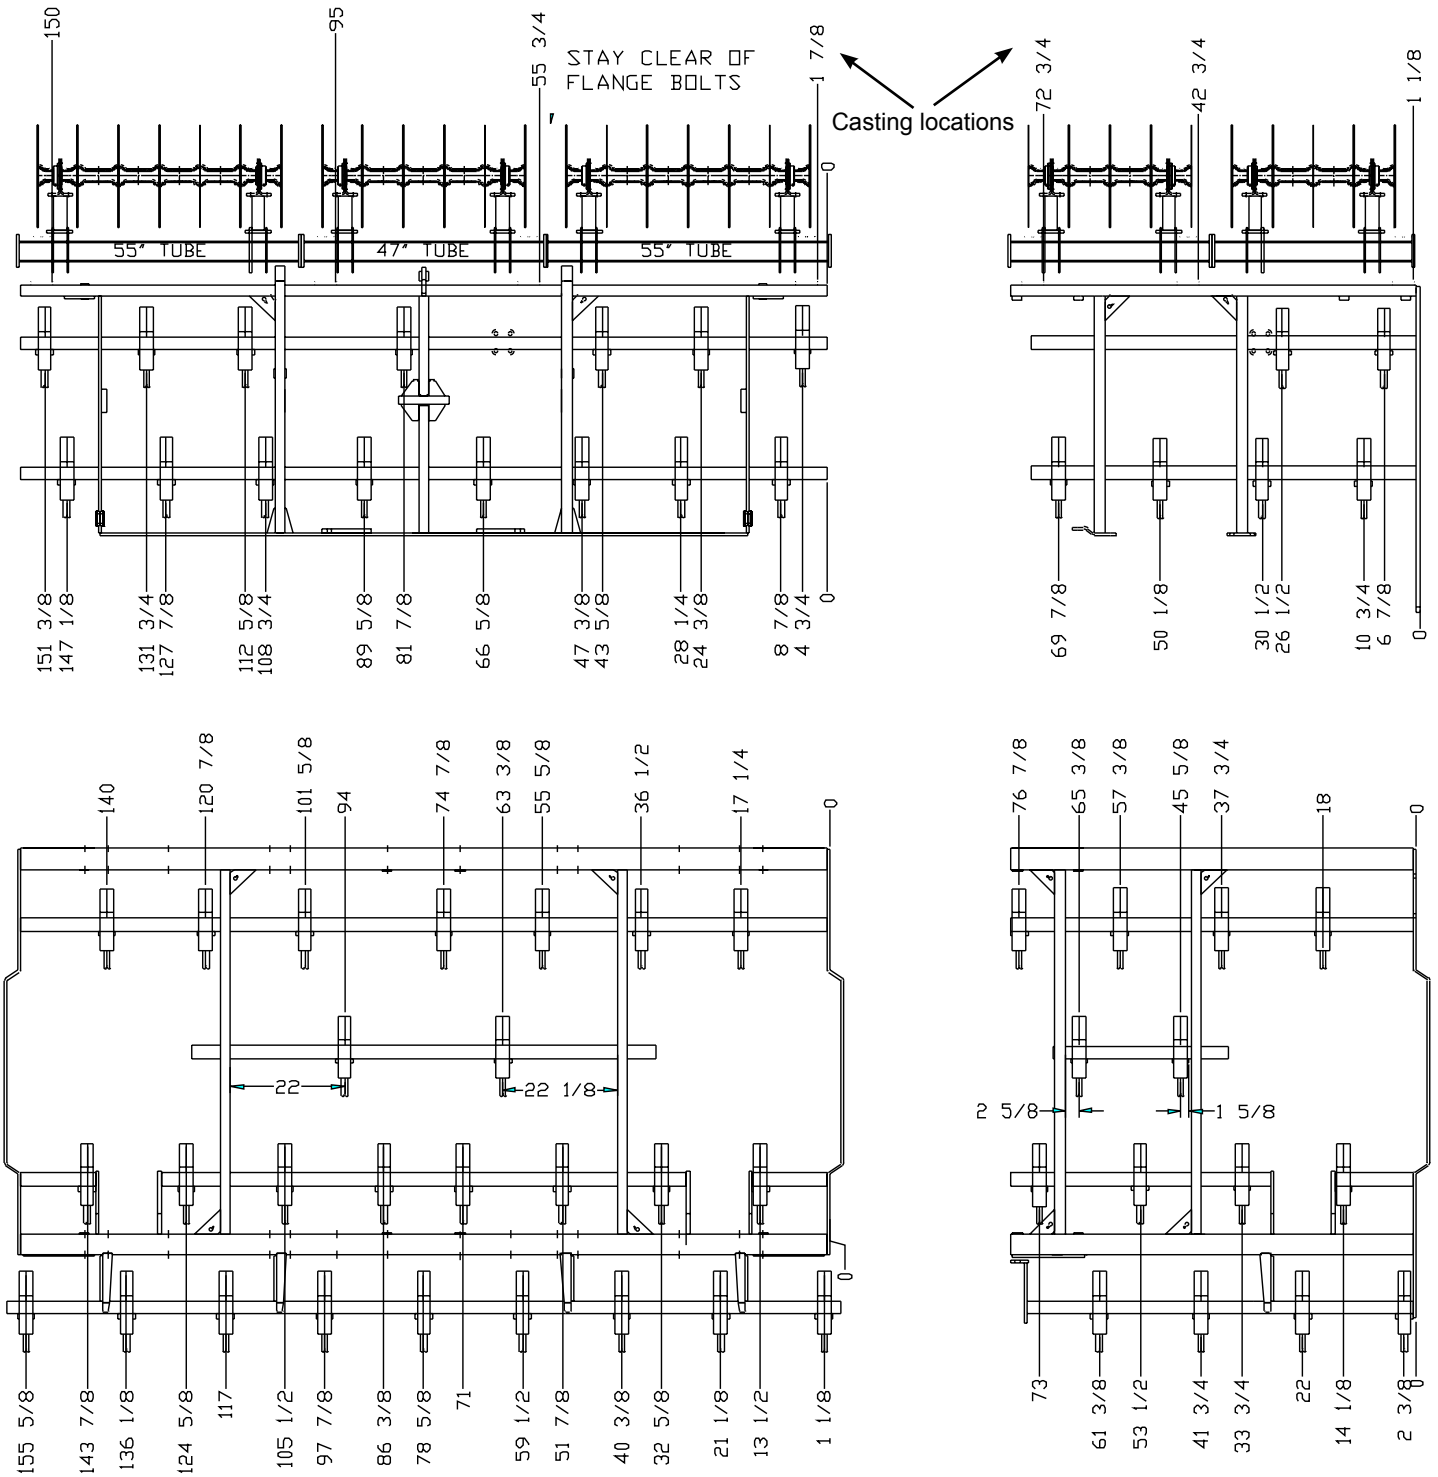


# 2813-80 (26' WIDE CENTER) RESTILL DISC TUBE BEARING AND TINE SPACING - 6"

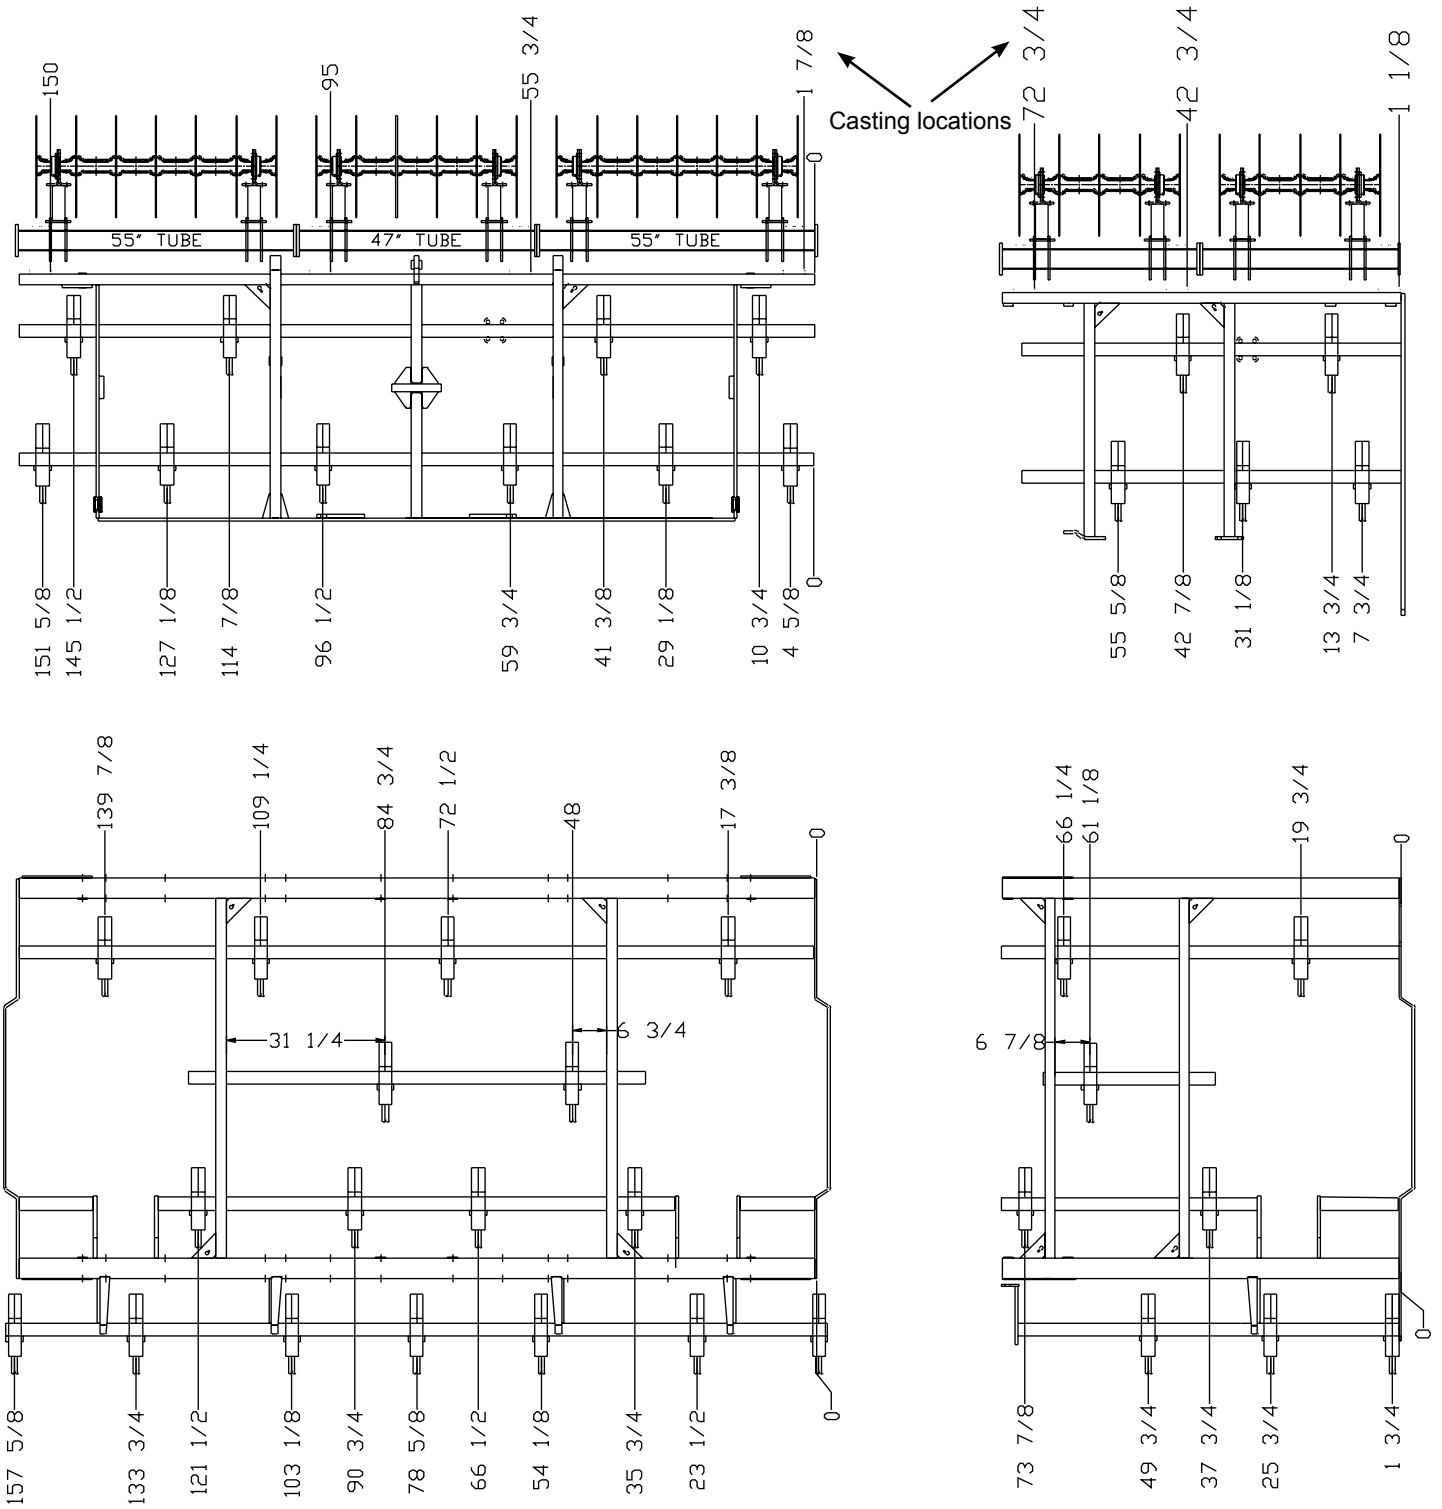


# 2813-90 (29' WIDE CENTER) RESTILL DISC TUBE BEARING AND TINE SPACING - 4"

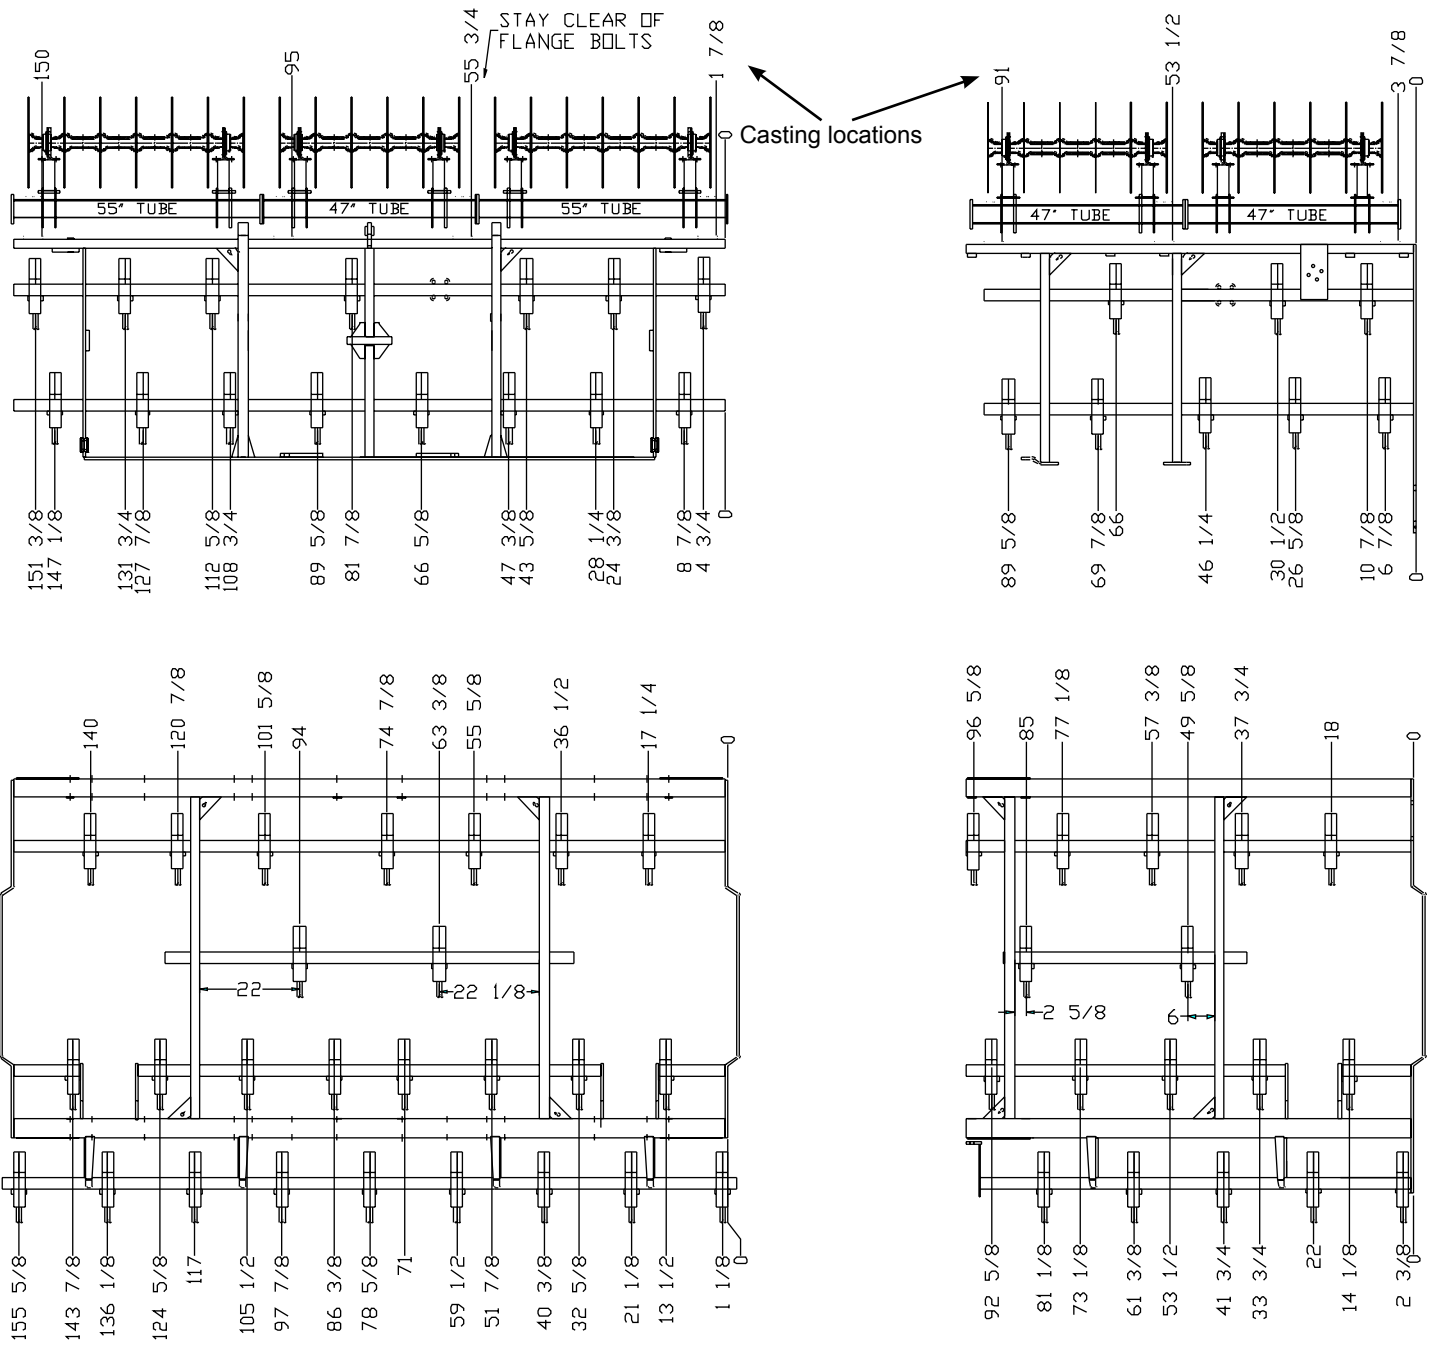

# 2813-90 (29' WIDE CENTER) RESTILL DISC TUBE BEARING AND TINE SPACING - 6"

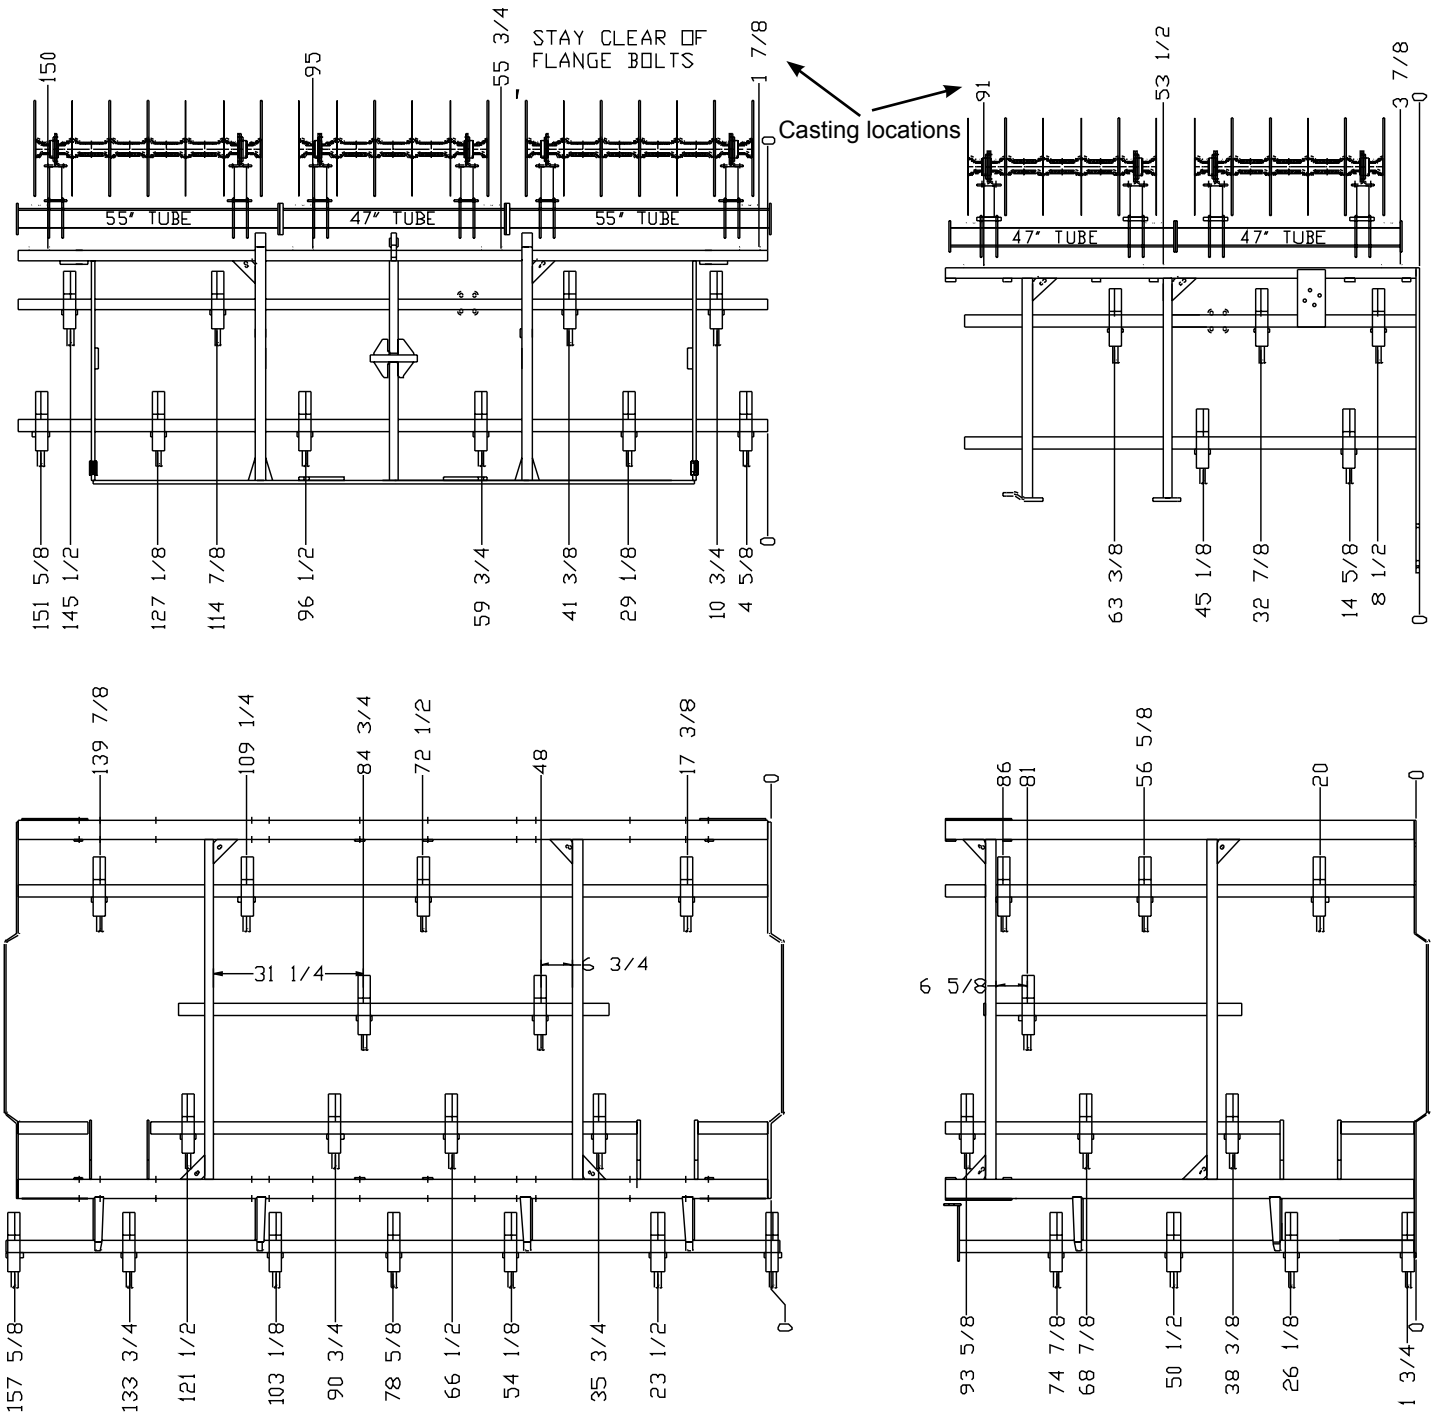

2813-100 (33' WIDE CENTER) RESTILL  
DISC TUBE BEARING AND TINE SPACING - 4"

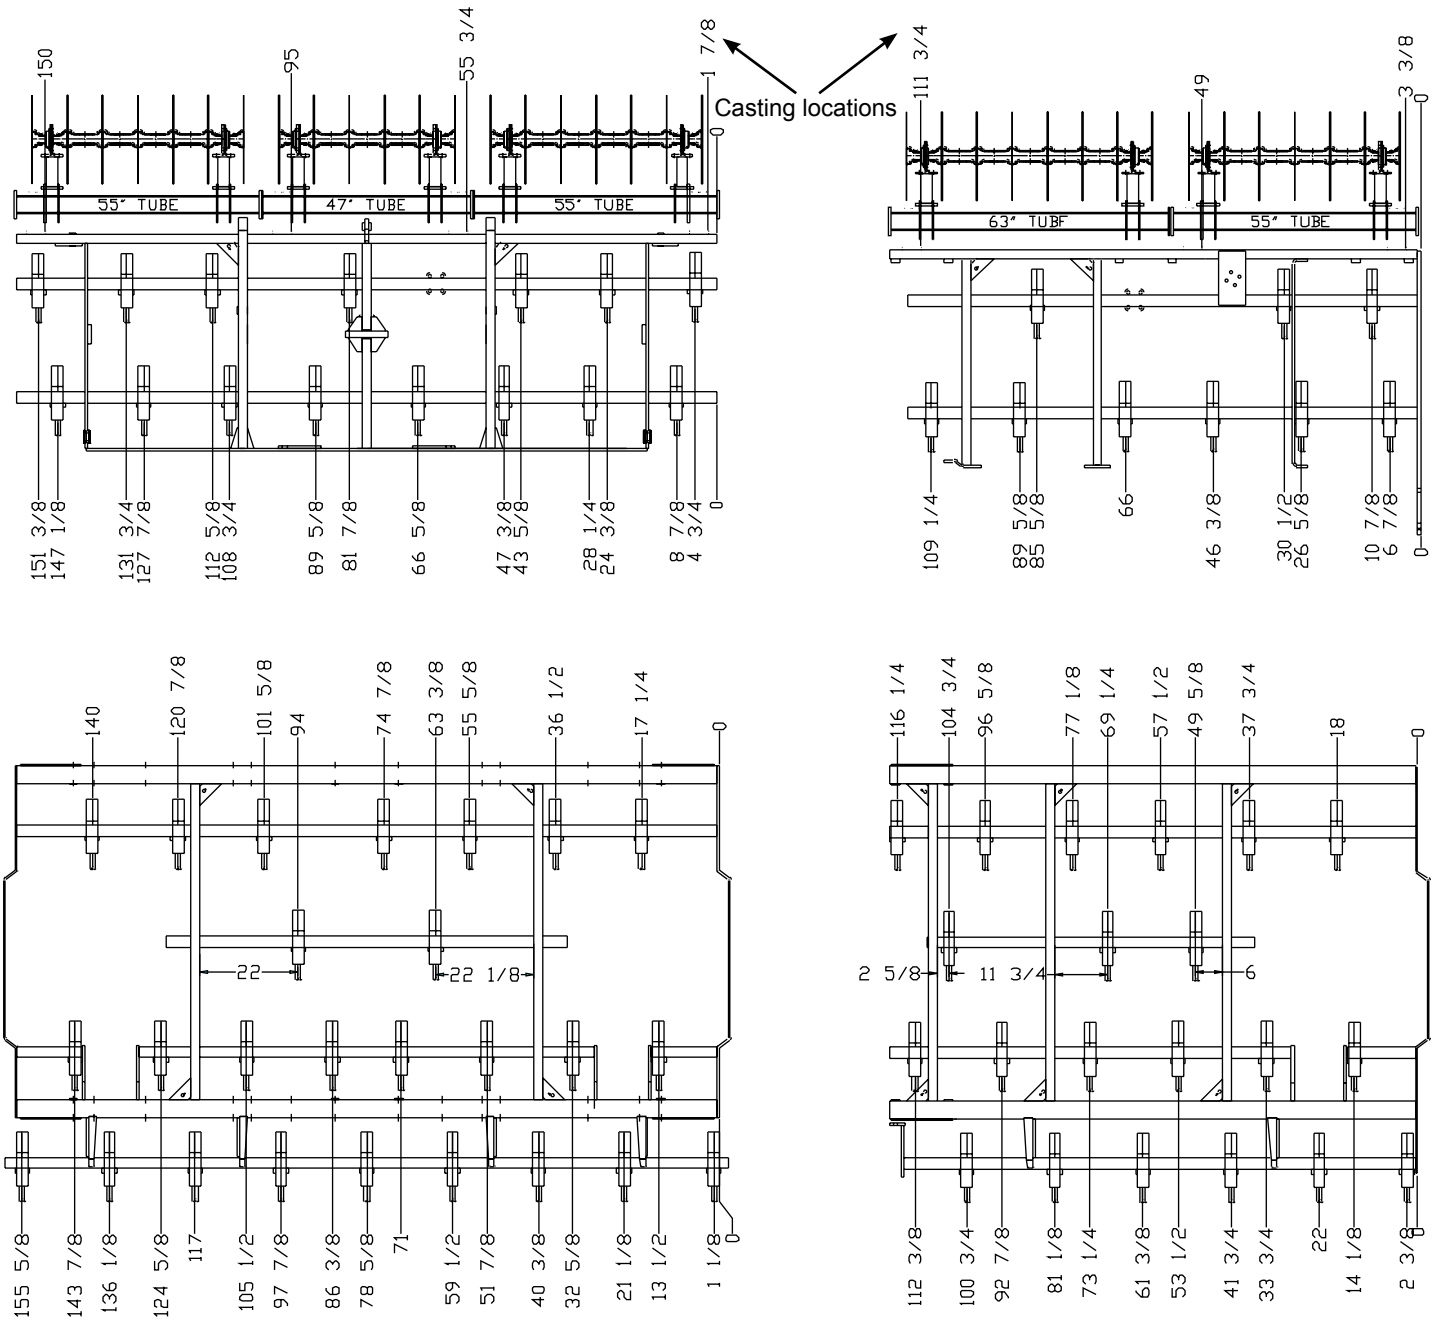

2813-100 (33' WIDE CENTER) RESTILL  
DISC TUBE BEARING AND TINE SPACING - 6"

