


FUVF 2000/4000

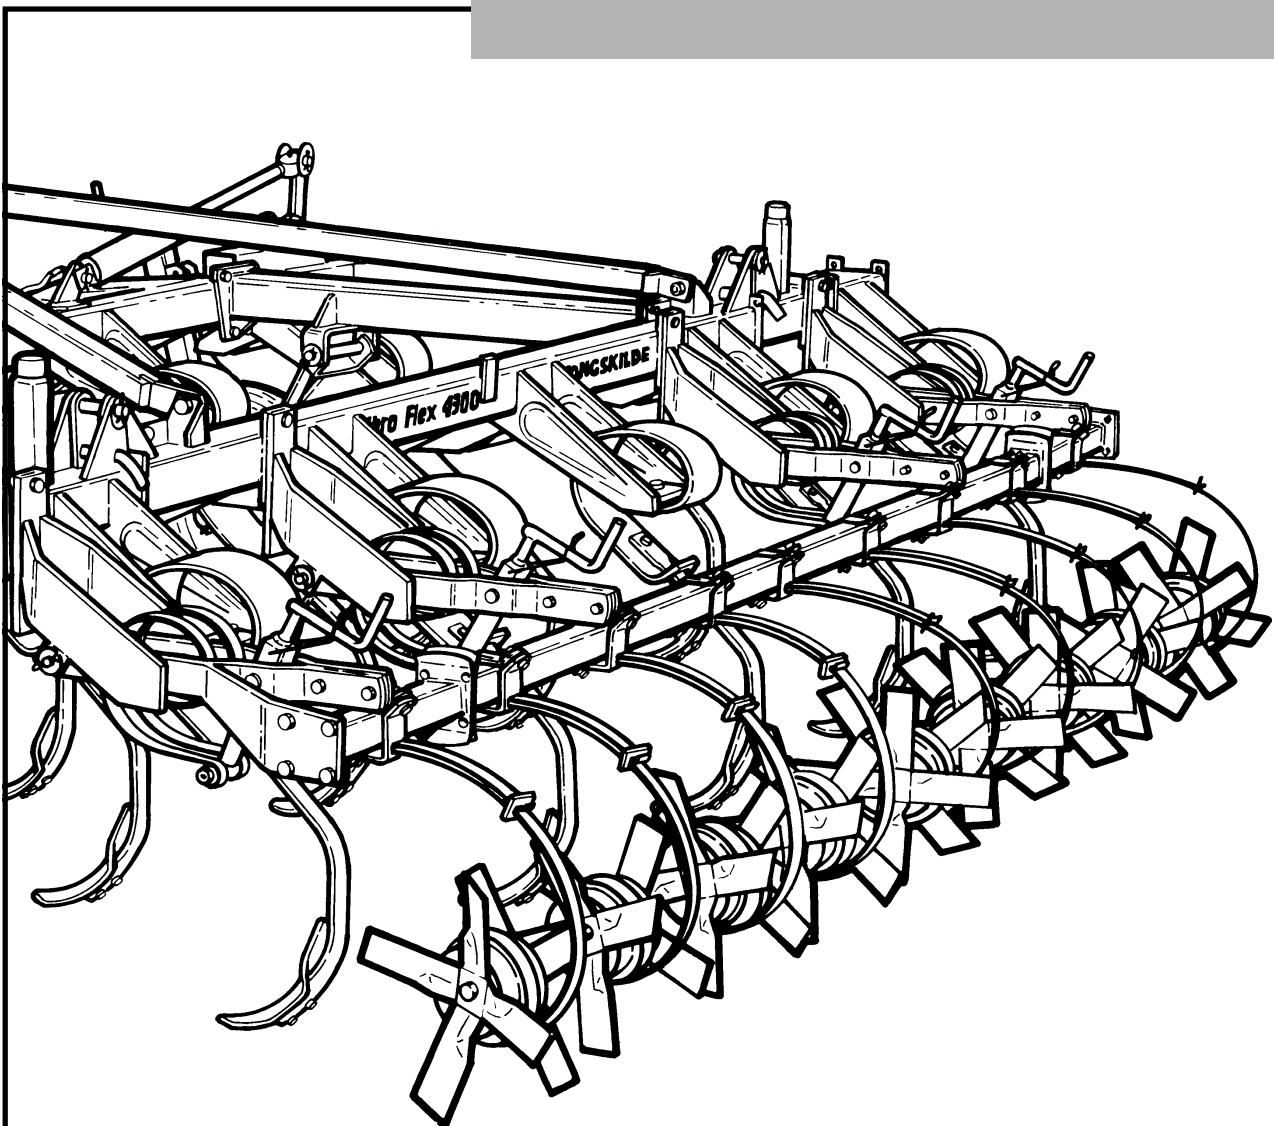

Reservedelsliste
Spare parts list
Ersatzteilliste
Onderdelenlijst
Liste de pièce de rechange
Lista dei pezzi di ricambio

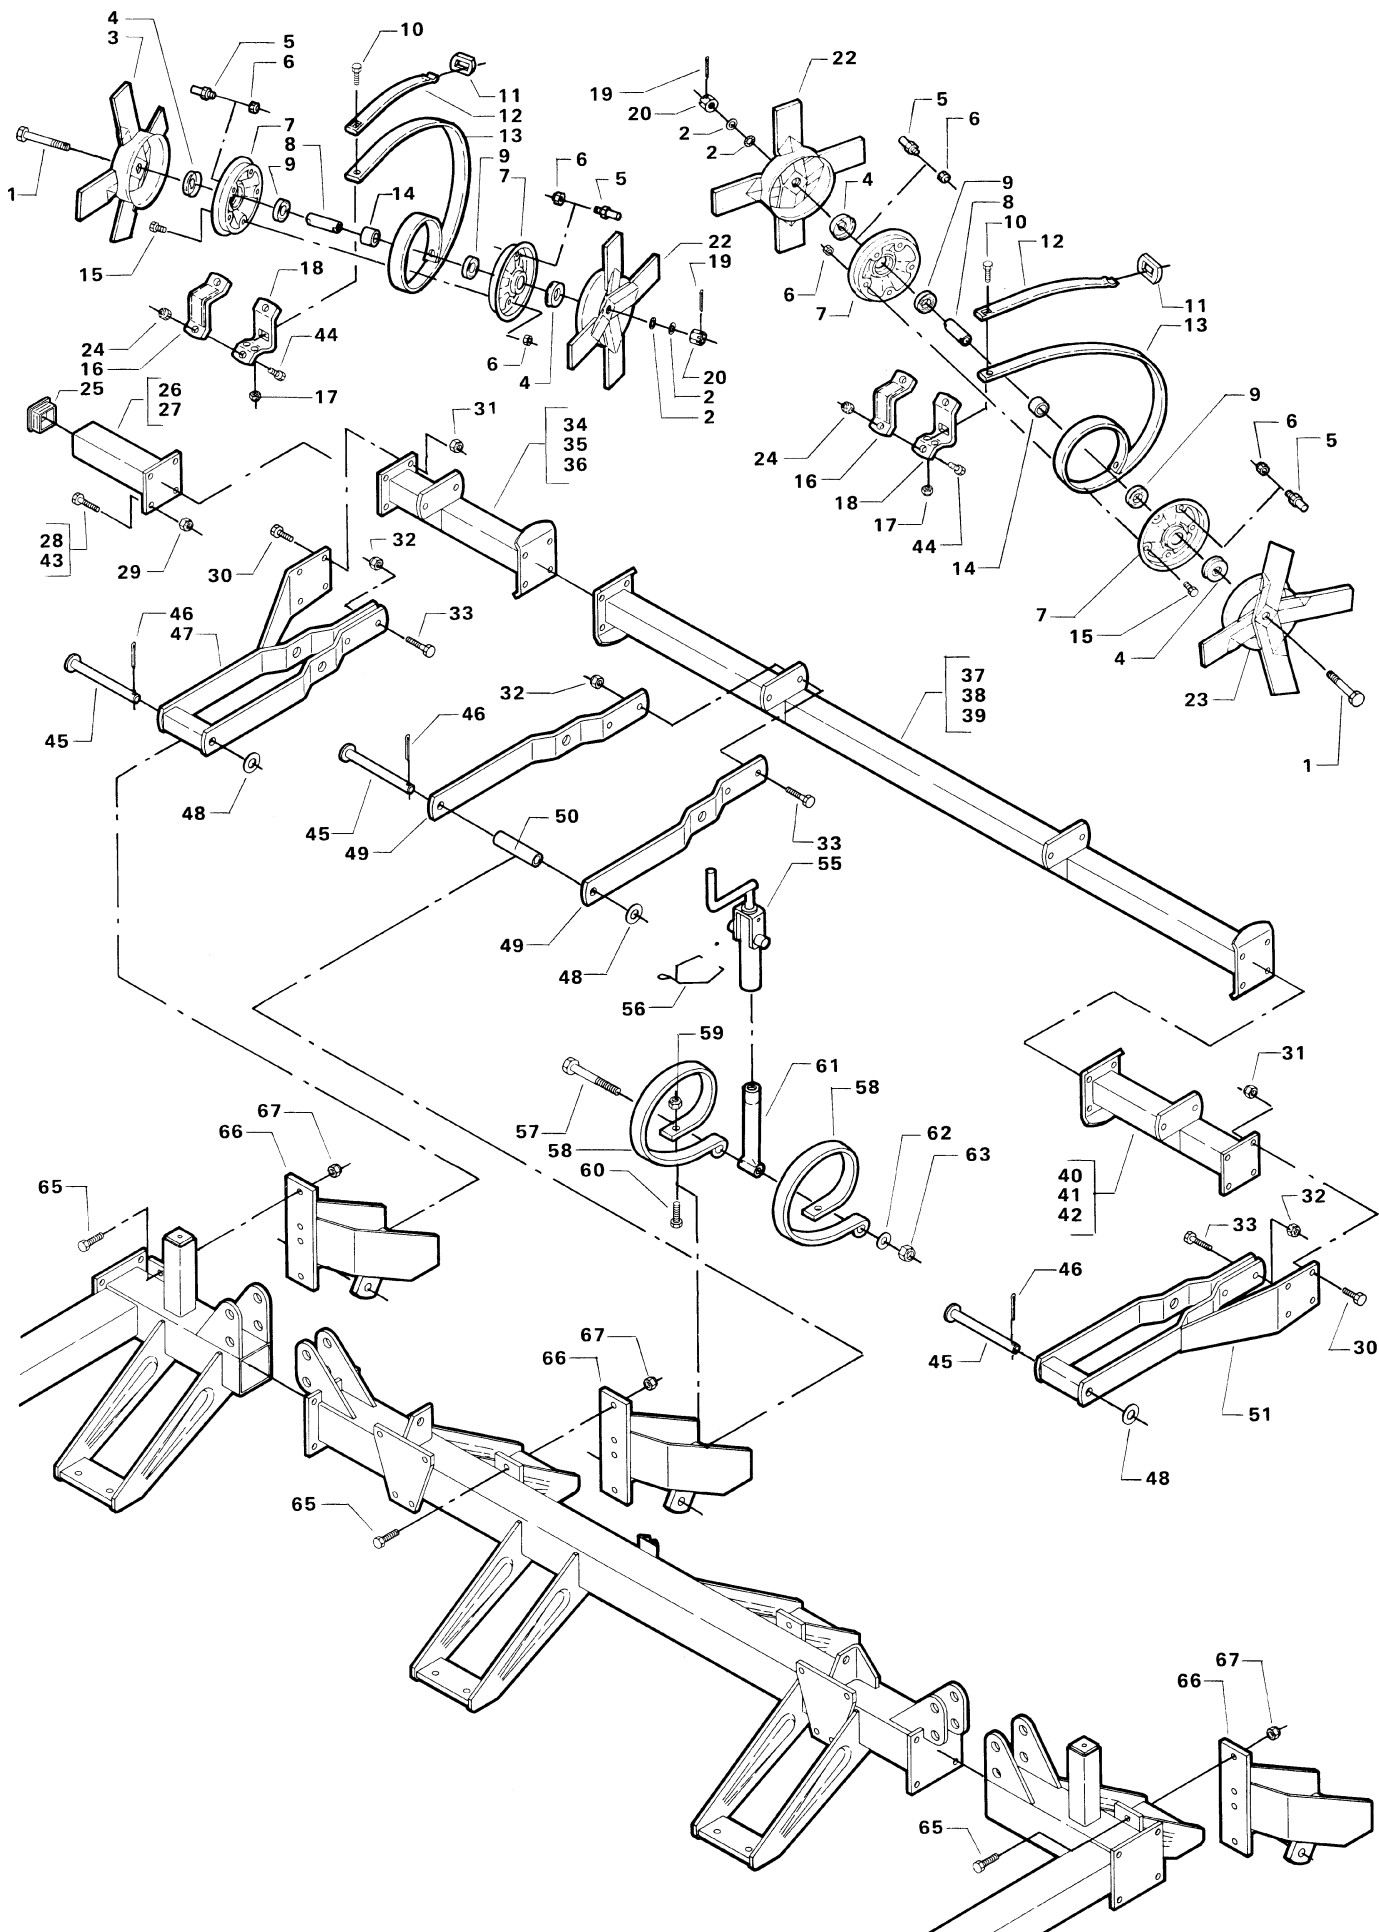


Fig.	Serial no.	Part no.	Pieces	Notes
1 2 3 4 5		105 070 120 100 331 082 105 070 019 105 070 033 105 070 059		Bolt M16 x 120 mm Conic springwasher M16 DIN6796
6 7 8 9 10		100 316 003 105 070 030 105 070 112 100 401 032 100 304 033		Lock nut M8 Ball bearing 6205-2RS Set screw M12 x 35 mm
11 12 13 14 15		105 070 117 105 070 109 105 070 115 105 070 111 100 306 014		Set screw M8 x 15 mm
16 17 18 19 20		105 070 104 100 316 005 105 070 116 100 333 003 100 316 038		Lock nut M12 Split pin \varnothing 4 x 25 mm Slotted nut M16
22 23 24 25		105 070 024 105 070 012 100 316 026 105 070 106 100 414 009		Lock nut M14 Repair kit. Fig. 16+18+24+44 Plast plug 60 x 60 x 5 mm
26 27 28 29 30		105 077 014 105 077 030 100 306 045 100 316 005 100 304 033		FUVF 2002 FUVF 2004 Bolt M12 x 45 mm for FUVF 2002 Lock nut M12 Set screw M12 x 35 mm
31 32 33 34 35		100 316 005 100 316 005 100 306 046 105 077 023 105 077 072		Lock nut M12 Lock nut M12 Bolt M12 x 50 mm FUVF 4004/6 right FUVF 4008 right
36 37 38 39 40		105 077 075 105 077 028 105 077 056 105 077 010 105 077 011		FUVF 4012 right FUVF 2007 FUVF 4209/11 FUVF 4313/15 FUVF 4004/6 left
41 42 43 44 45		105 077 074 105 077 077 100 304 033 100 308 044 105 077 017		FUVF 4008 left FUVF 4012 left Set screw M12 x 35 mm for FUVF 2004 Set screw M14 x 40 mm Pin \varnothing 20 x 192 mm
46 47 48 49 50		100 333 008 105 077 034 100 331 009 105 077 032 105 077 019		Split pin \varnothing 8 x 40 mm Flat washer M20 Spacer \varnothing 27/22 x 122 mm
51 55 56 57 58		105 077 033 105 073 010 101 000 064 100 306 095 105 077 093		Bolt M16 x 140 mm
59 60 61 62 63		100 316 005 100 306 044 105 073 009 100 331 021 100 316 006		Lock nut M12 Set screw M12 x 40 mm Flat washer \varnothing 35/17.5 x 3 mm Lock nut M16
65 66 67		100 306 056 105 077 060 100 316 006		Set screw M16 x 45 mm Lock nut M16

