

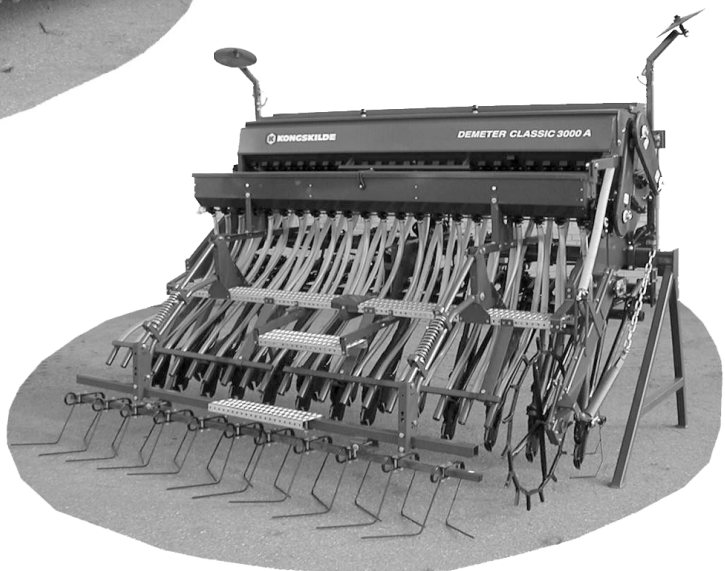



DEMETER CLASSIC CS/CSA

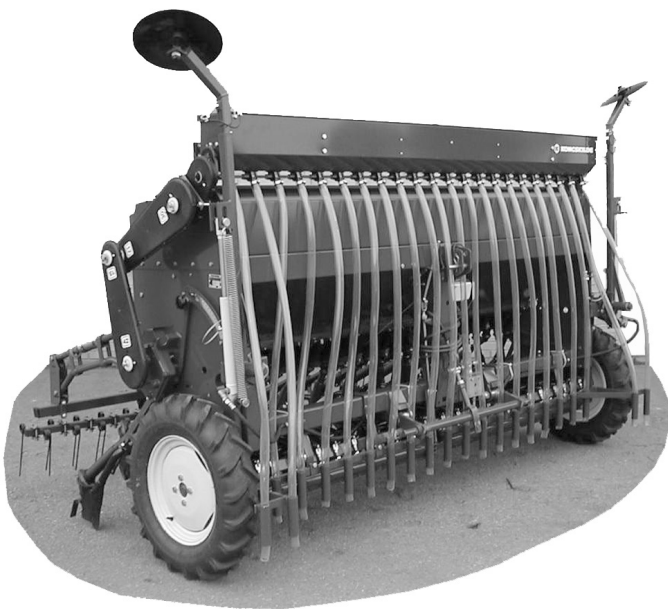

**Reservedelsliste
Spare parts list
Ersatzteilliste
Onderdelenlijst
Liste de pièce de rechange
Lista dei pezzi di ricambio
Reservdelslista**

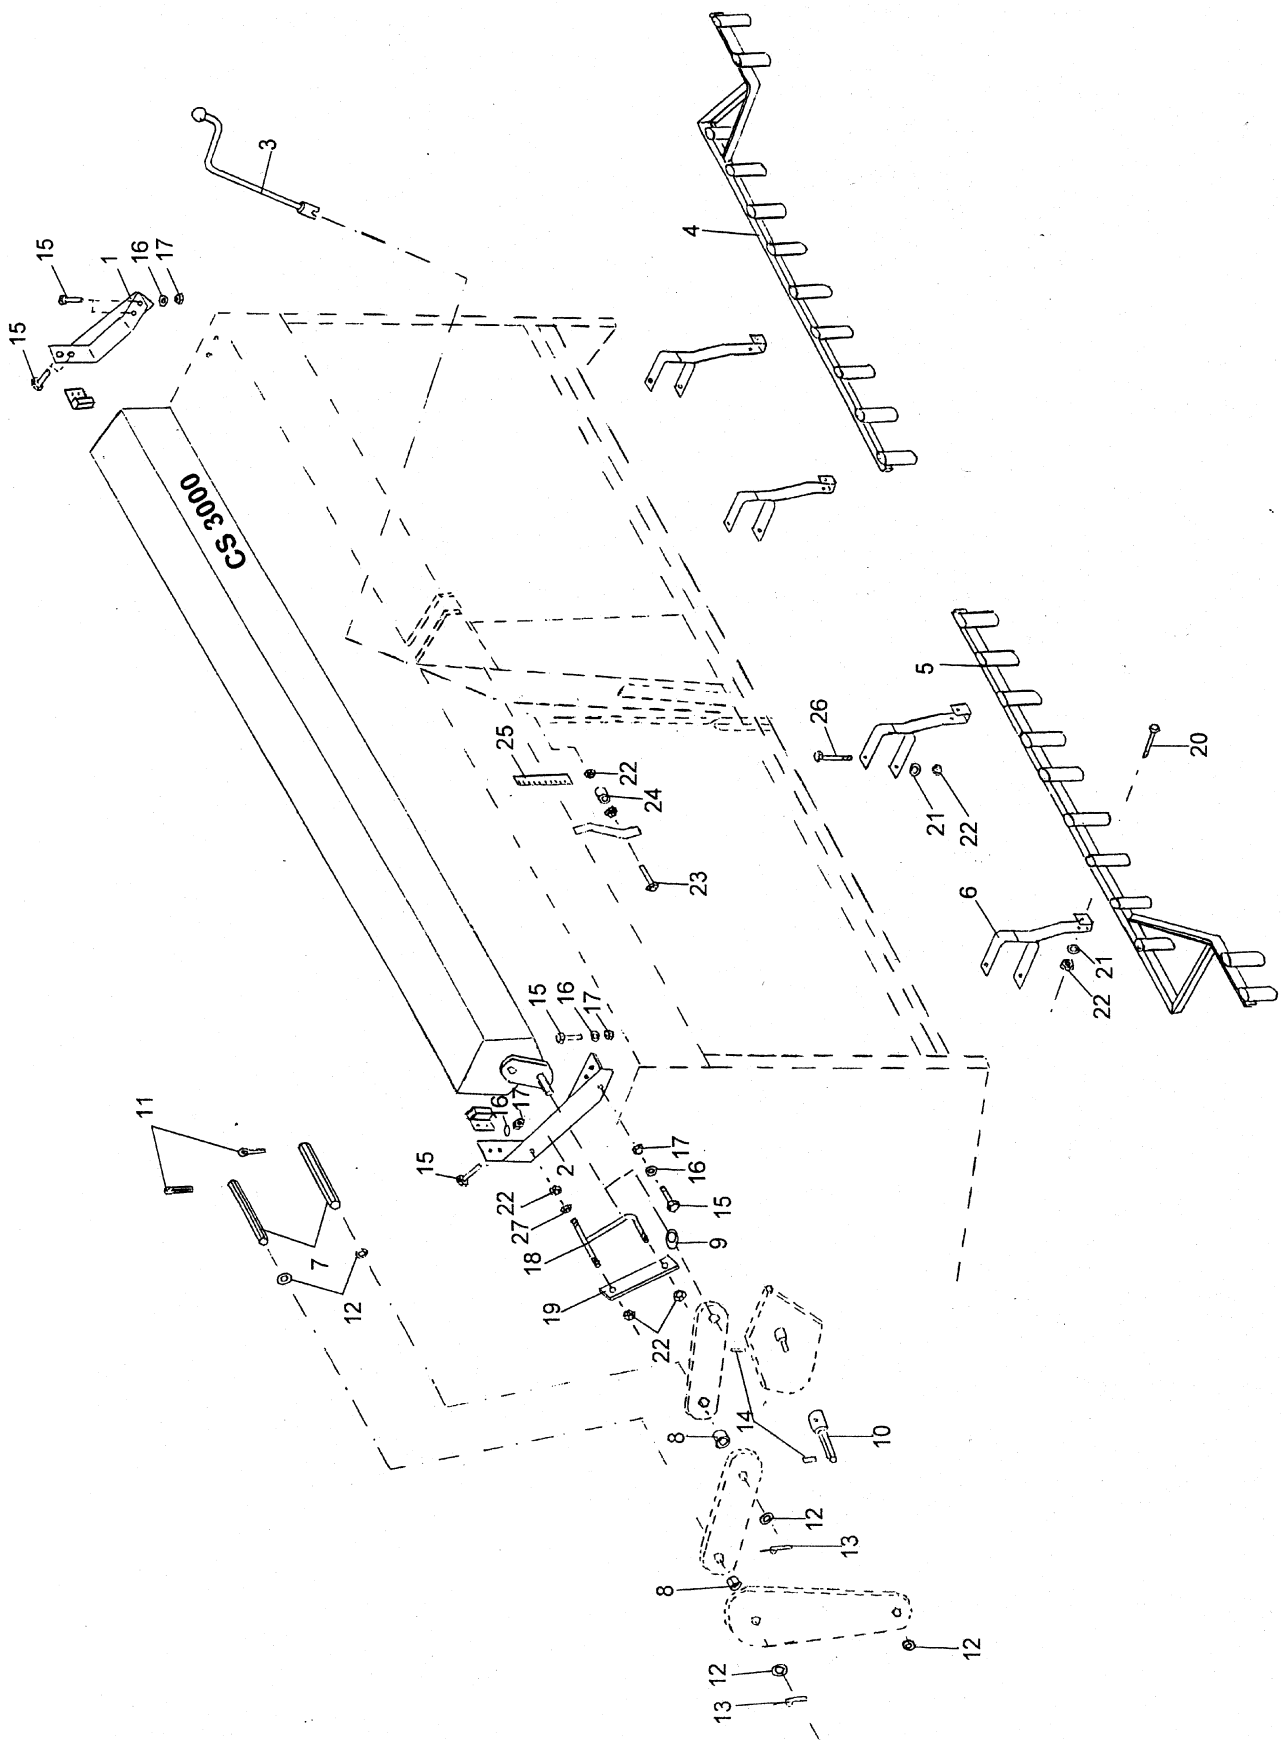

3

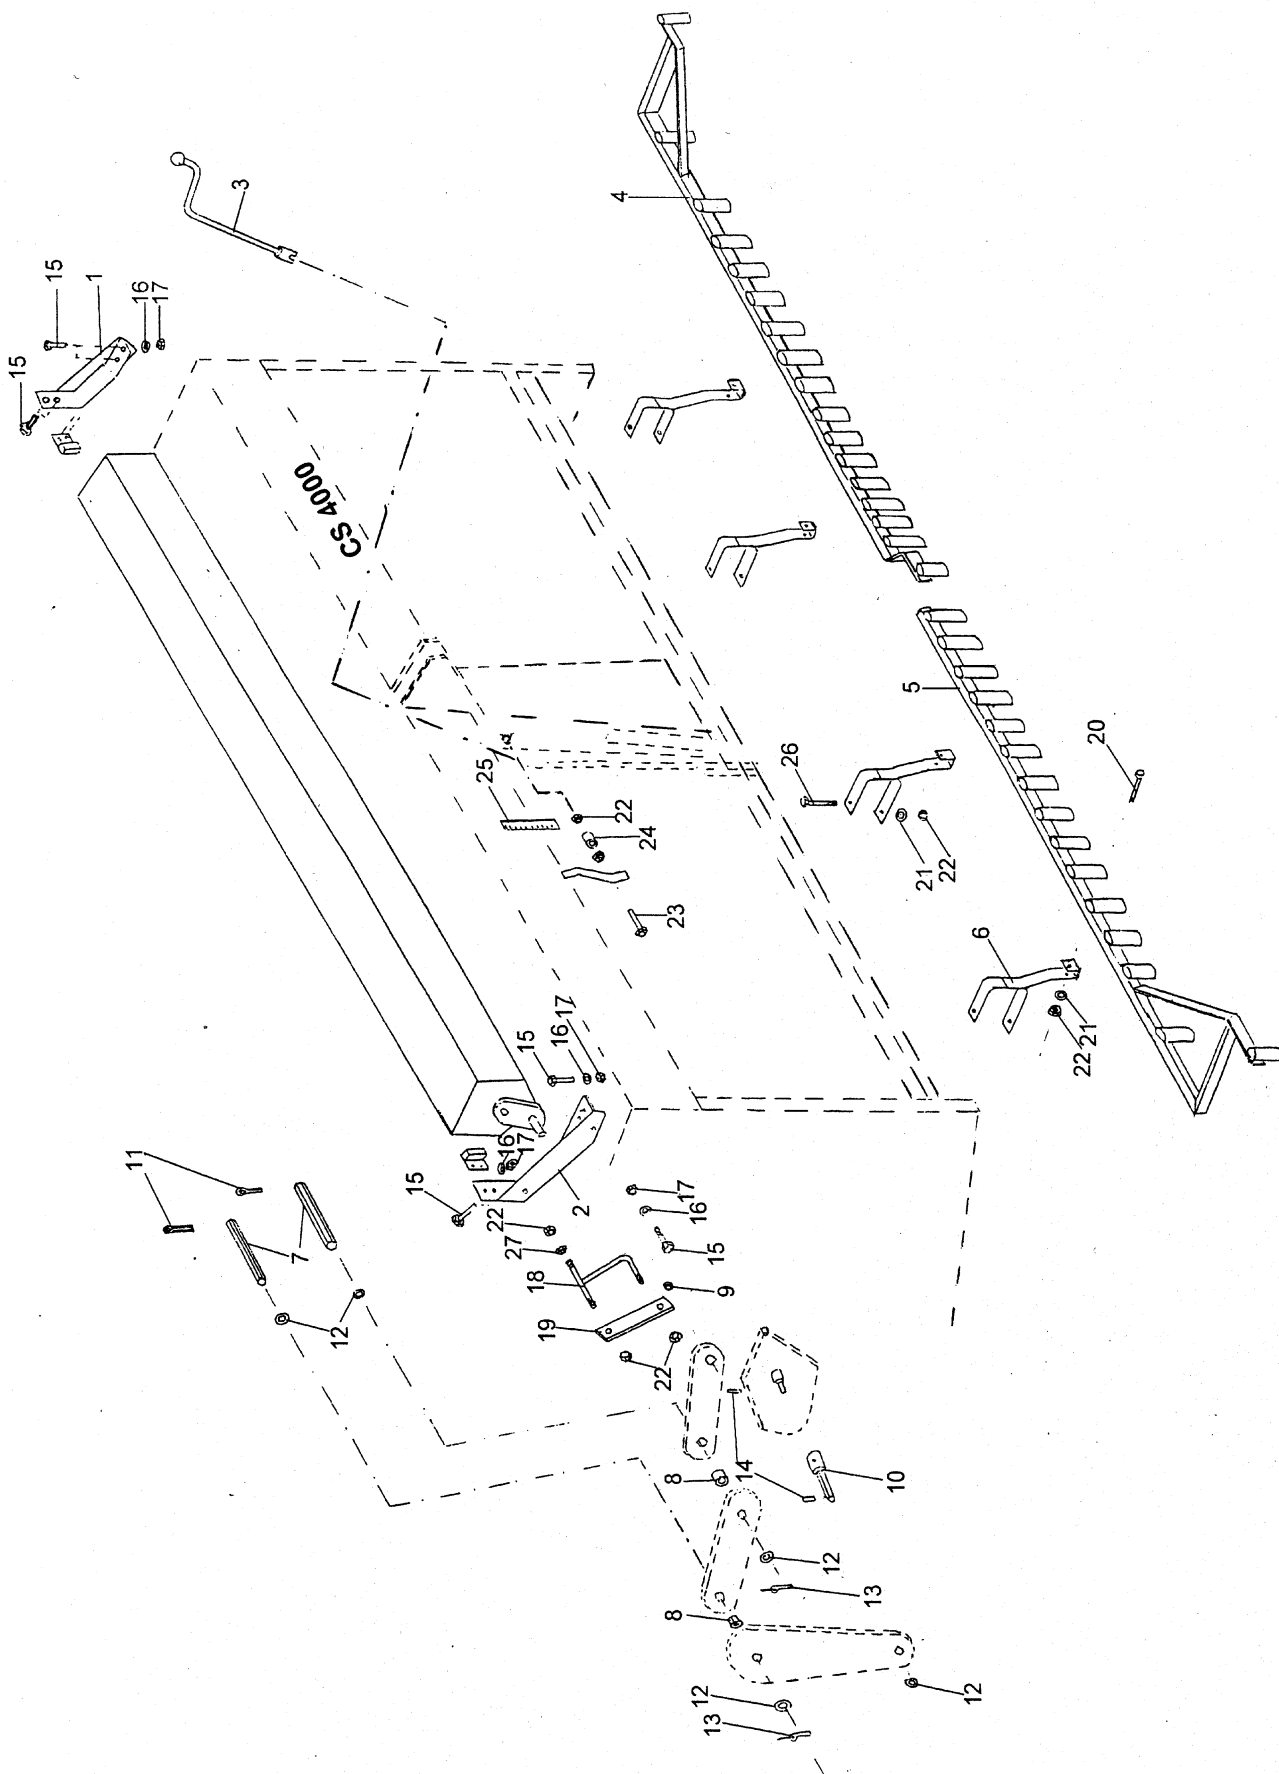

5

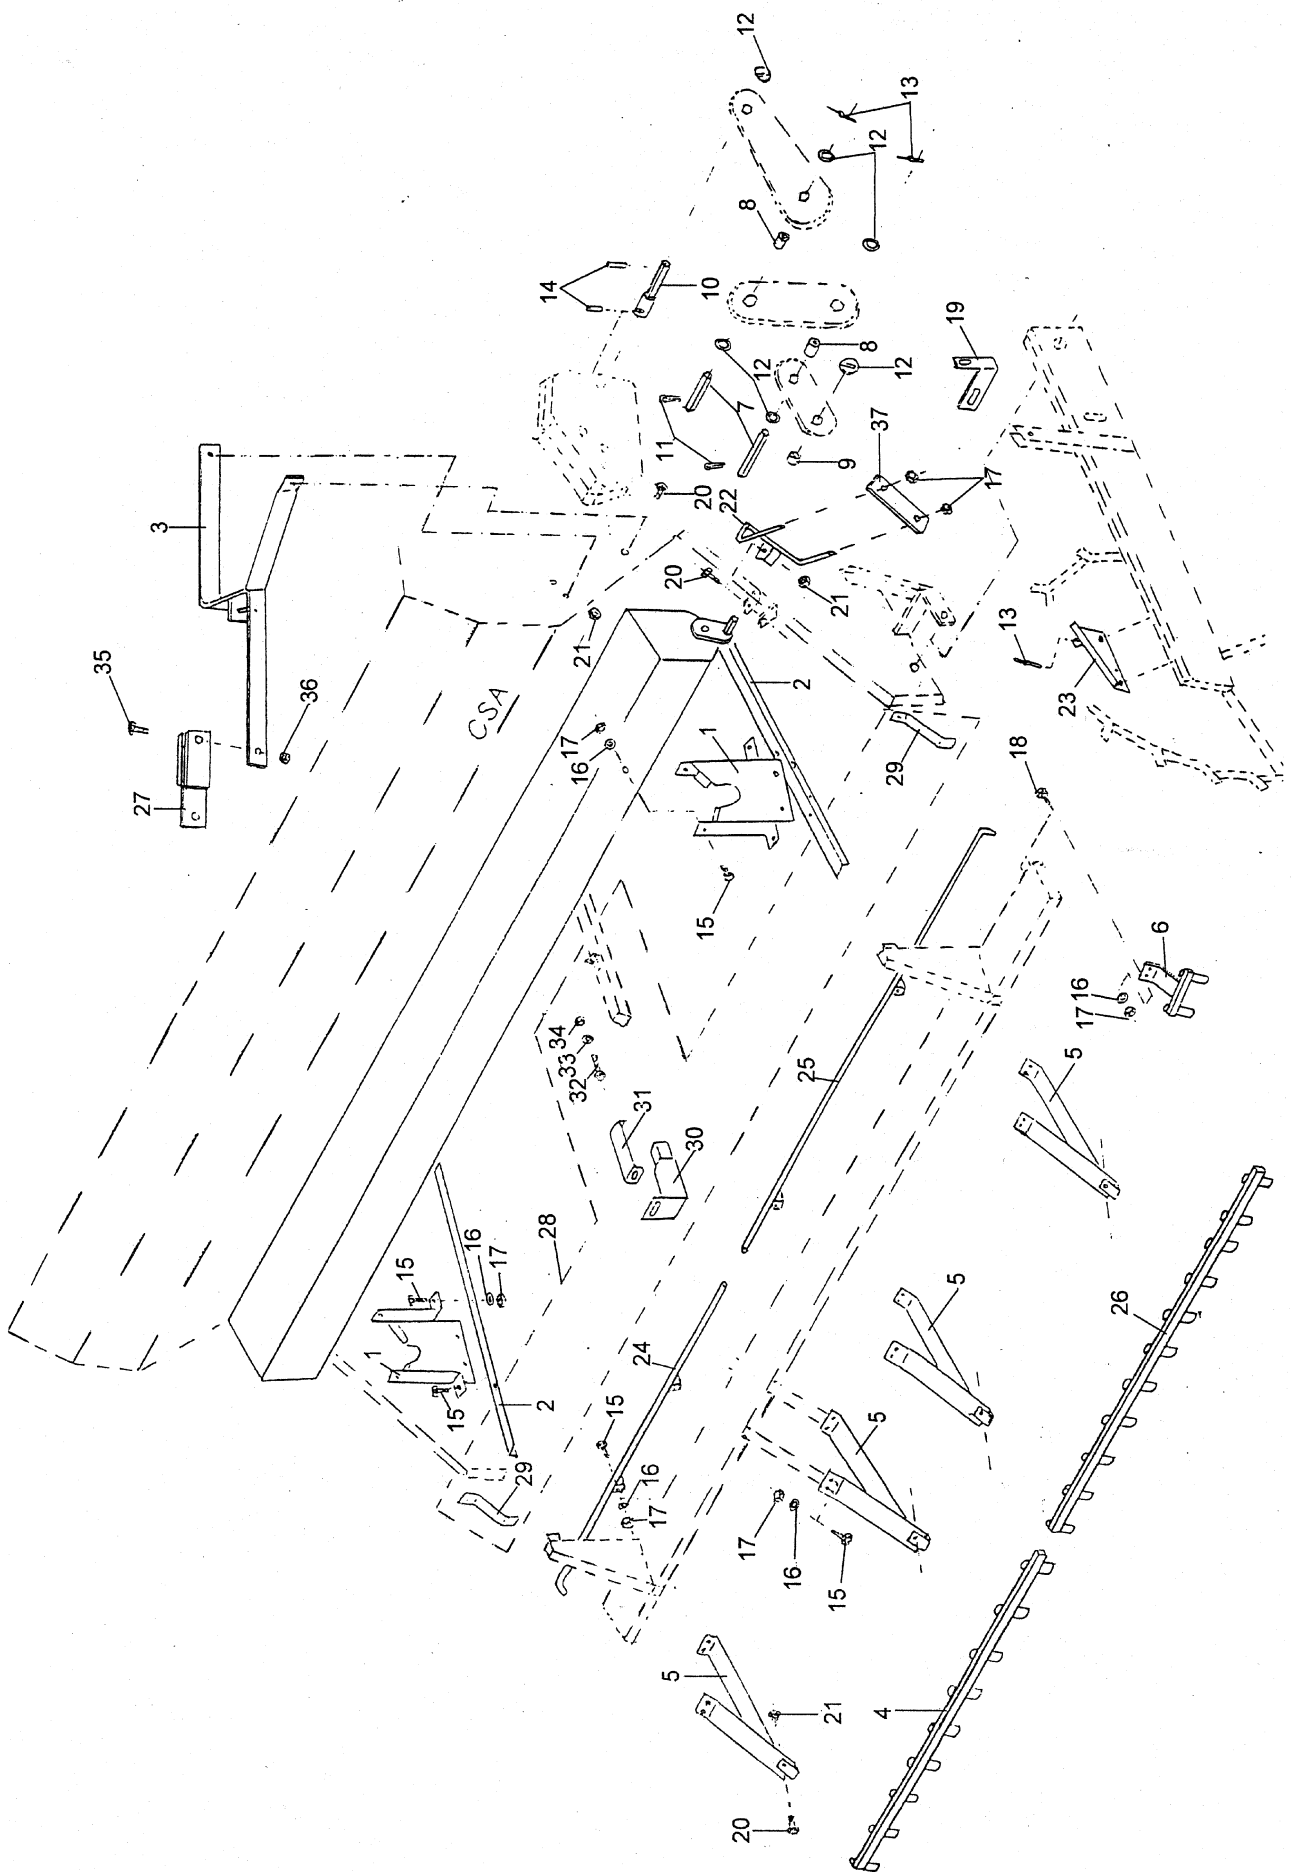


Fig.	Serial no.	Part no.	Pieces	Notes
1		300 000 996	2	Holder of box (CSA 3000)
1		300 000 996	3	Holder of box (CSA 4000)
2		300 000 989	2	Angle of platform (CSA 3000)
2		300 000 989	3	Angle of platform (CSA 4000)
3		300 050 700	1	Holder of wheel I
4		300 027 100	2	Guide frame (CSA 3000)
4		300 027 300	1	Guide frame (CSA 4000)
5		300 050 300	4	Bracket of pipes
6		300 050 800	1	Holder of pipes (CSA 3000)
6		300 060 600	1	Holder of pipes (CSA 4000)
7		300 001 019	2	Axle
8		300 000 972	2	Distance bush long
9		300 000 971	1	Distance bush short
10		300 060 400	1	Axle
11		300 333 058	2	Spring cotter pin 4x25
12		300 332 034	4	Washer 21x37x3
13		300 323 045	3	Flap bolt
14		300 323 029	1	Tension pin 6x30
15		300 304 153	34(40)	Bolt M8x20 (CSA 4000)
16		300 332 040	36(42)	Washer 8.2 (CSA4000)
17		300 316 027	38(44)	Lock nut M8 (CSA4000)
18		300 304 156	2	Bolt M8x30
19		300 000 997	1	Holder of magnet
20		300 304 035	6	Bolt M10x35
21		300 316 020	6	Lock nut M10
22		300 050 500	1	Bracket
23		300 050 600	1	Holder of wheel II
24		300 050 100	1	Holder of hoses left
24		300 060 200	1	Holder of hoses left (CSA 4000)
25		300 050 200	1	Holder of hoses right (CSA 3000)
25		300 060 300	1	Holder of hoses right (CSA 4000)
26		300 027 200	1	Guide frame (CSA 4000)
27		300 070 800	1	Bracket
28		300 151 000	1	Cpl.kit for moving platform (CSA 3000)
28		300 157 000	1	Cpl.kit for moving platform (CSA 4000)
29		300 000 748	2	Side-holder
30		300 000 747	1	Holder (CSA 3000)
30		300 000 747	3	Holder (CSA 4000)
31		300 000 749	1	Connector (CSA 3000)
31		300 000 749	3	Connector (CSA 4000)
32		300 304 155	2	Bolt M8x25
33		300 332 040	2(6)	Washer 8.5 (CSA 4000)
34		300 316 027	2(6)	Lock nut M8 (CSA 4000)
35		300 304 092	1	Bolt M16x40
36		300 316 023	1	Lock nut M16
37		300 001 138	1	Flat bar




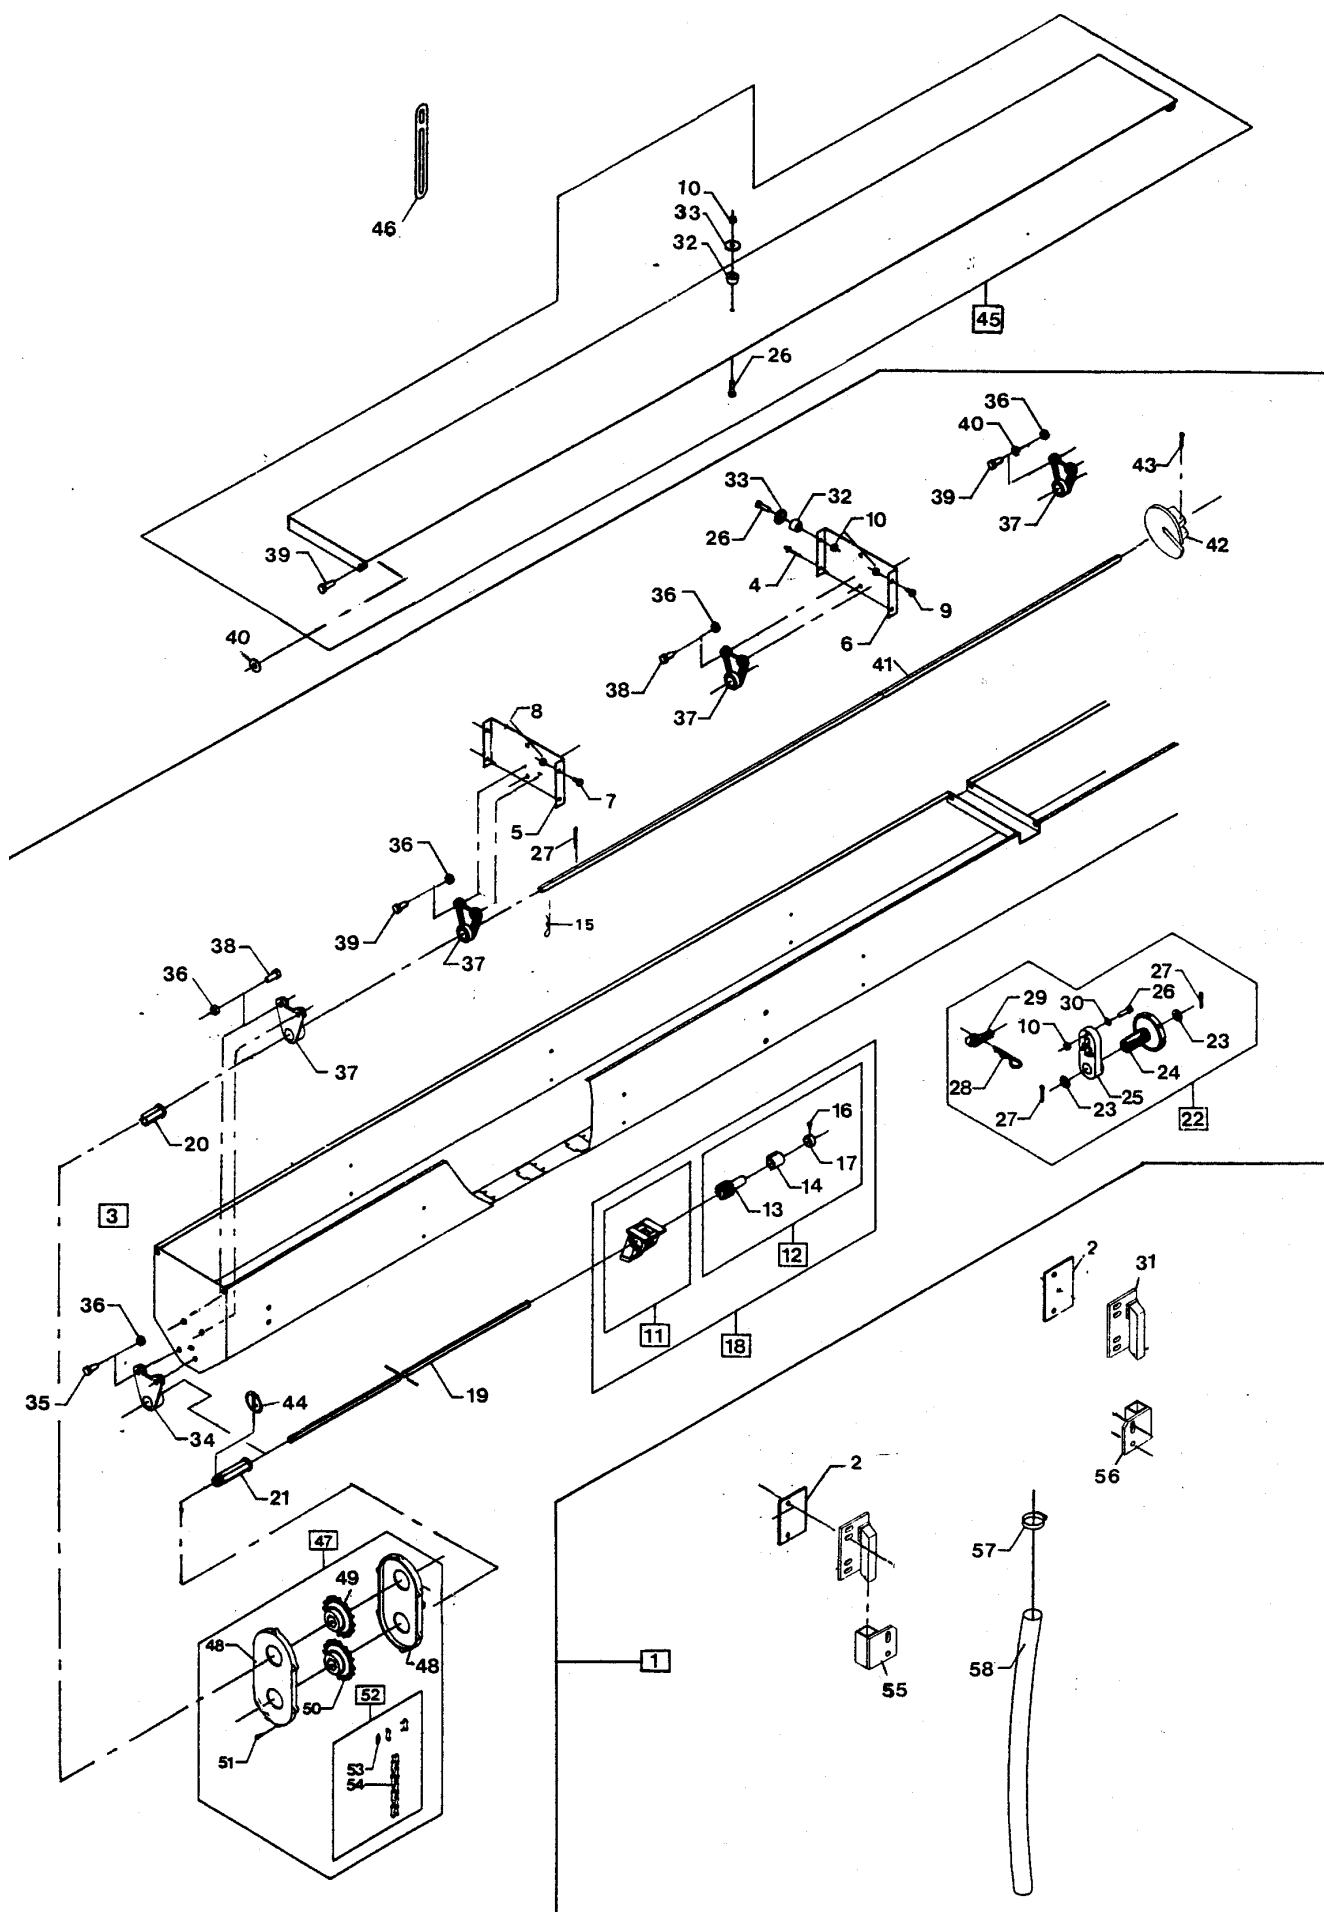


Fig.	Serial no.	Part no.	Pieces	Notes
1		906 1 103 218		Fine Seed Hopper Cpl. (CS/CSA 3000)
1		906 1 103 246		Fine Seed Hopper Cpl. (CS/CSA 4000)
2		906 4 114 780		Ratiner
3		906 2 113 491		End Piece, right
3		906 2 113 492		End Piece, left
4		906 4 132 037		Pop Rivet
5		906 3 112 514		Divider Plate
6		906 3 112 515		Divider Plate
7		906 4 130 211		Steel Set Screw M10 x 16 mm
8		906 4 131 020		Nut, Self-locking M10
9		906 4 130 082		Steel Set Screw M6 x 12 mm
10		906 4 131 018		Nut, Self-locking M6
11		906 4 113 087		Feed Cup cpl.
12		906 2 100 009		Feed Roller cpl.
13		906 4 125 015		Feed Roller
14		906 4 141 028		Bushing f. Feed Roller
15		906 4 140 063		Spring Split Pin ø2
16		906 4 130 120		Self Cutting Screw B6 x 9,5
17		906 4 142 014		Stop Ring
18		906 2 100 010		Feed Cup and Roller cpl.
19		906 3 126 564		Sowing Shaft (CS/CSA 3000)
19		906 3 126 565		Sowing Shaft (CS/CSA 4000)
20		906 4 141 069		Connecting Bush f. Agitator Shaft
21		906 4 141 068		Connecting Bush f. Sowing Shaft
22		906 3 129 253		Adjusting Handle cpl.
23		906 4 131 047		Washer ø3/8"
24		906 3 129 224		Threaded Knob w/ Scale
25		906 3 129 225		Threaded Piece
26		906 4 130 083		Steel Set Screw M6 x 25 mm
27		906 4 139 000		Split Pin ø4 x 20 mm
28		906 4 140 025		Spring Split ø3
29		906 4 129 238		Locking Pawl
30		906 4 131 037		Washer ø6
31		906 3 112 884		Barcket
32		906 4 112 671		Gasket f. Coulter
33		906 4 131 017		Disc. f. Double Coulter
34		906 4 116 174		Support Bearing f. Sowing Shaft
35		906 4 130 246		Screw w/ inner Hexagon M8 x 20 mm
36		906 4 131 019		Nut, Self-locking M8
37		906 4 116 172		Support Bearing
38		906 4 130 070		Steel Set Screw M8 x 20 mm
39		906 4 130 071		Steel Set Screw M8 x 25 mm
40		906 4 131 043		Washer ø8,7/ø18 x 3,5 mm
41		906 3 126 566		Agitator Shaft (CS/CSA 3000)
41		906 3 126 567		Agitator Shaft (CS/CSA 4000)
42		906 3 126 524		Washer
43		906 4 130 314		Sheet Metal Screw ST 4,8 x 25 mm
44		906 4 140 050		Patent Splint Pin
45		906 3 115 104		Lid (CS/CSA 3000)
45		906 3 115 106		Lid (CS/CSA 4000)
46		906 4 139 352		Rupper Strap
47		906 3 113 956		Sowing/agitator Shaft cpl.
48		906 4 113 081		Casing Half
49		906 4 120 225		Sprocket z23
50		906 4 120 226		Sprocket f. Sowing Shaft
51		906 4 130 264		Screw UHX 3,5 x 12 mm
52		906 4 120 206		Chain f. Casing cpl.
53		906 4 120 120		Joint Link, single 3/8" x 7/32"
54		906 4 138 059		Chain 3/8" x 7/32" x 323
55		906 3 112 882		Console right
56		906 3 112 883		Console left
57		906 4 139 361		Clip 26 - 38 mm
58		906 4 119 050		Sowing Tube

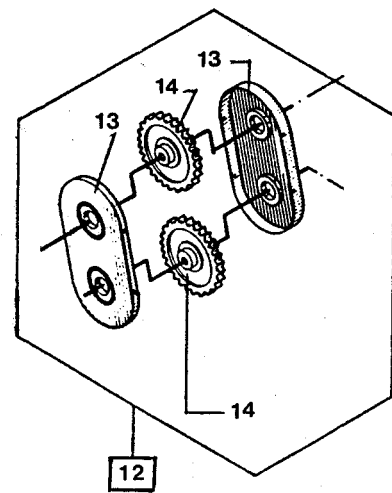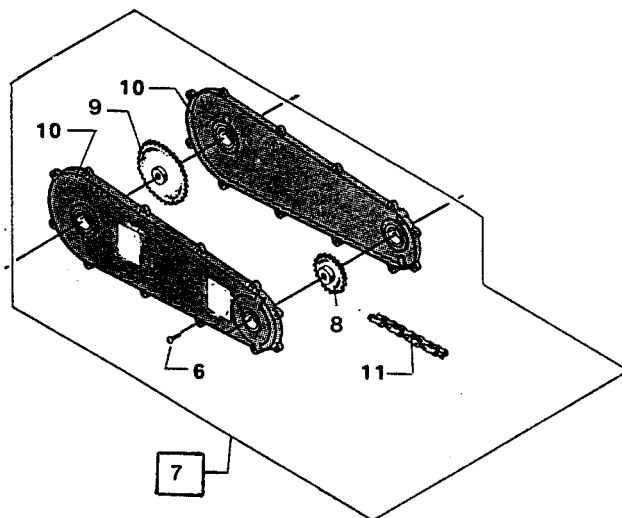

11

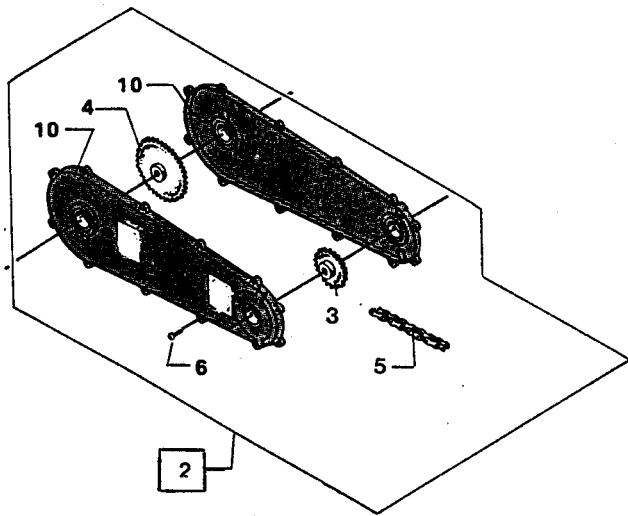