



2800 Double-Fold

Kongsilde
2800



Assembly Notes/Tine Patterns


Index

General Notes:	3
33' Double-Fold 4''Tine Spacing:.....	4
33' Double-Fold 6''Tine Spacing:.....	5
36' Double-Fold 4''Tine Spacing:.....	6
36' Double-Fold 6''Tine Spacing:.....	7
40' Double-Fold 4''Tine Spacing:.....	8
40' Double-Fold 6''Tine Spacing:.....	9
43' Double-Fold 4''Tine Spacing:.....	10
43' Double-Fold 6''Tine Spacing:.....	11
46' Double-Fold 4''Tine Spacing:.....	12
46' Double-Fold 6''Tine Spacing:.....	13
50' Double-Fold 4''Tine Spacing:.....	14
50' Double-Fold 6''Tine Spacing:.....	15

General Notes:

This cultivator has three hinges on each wing. Pin the front hinge first, followed by the middle and then the rear. Leave all of the hinge bolts loose until all 3 hinge pins have been installed.



Use a 1" washer inside the roll pin on all three hinge pins.

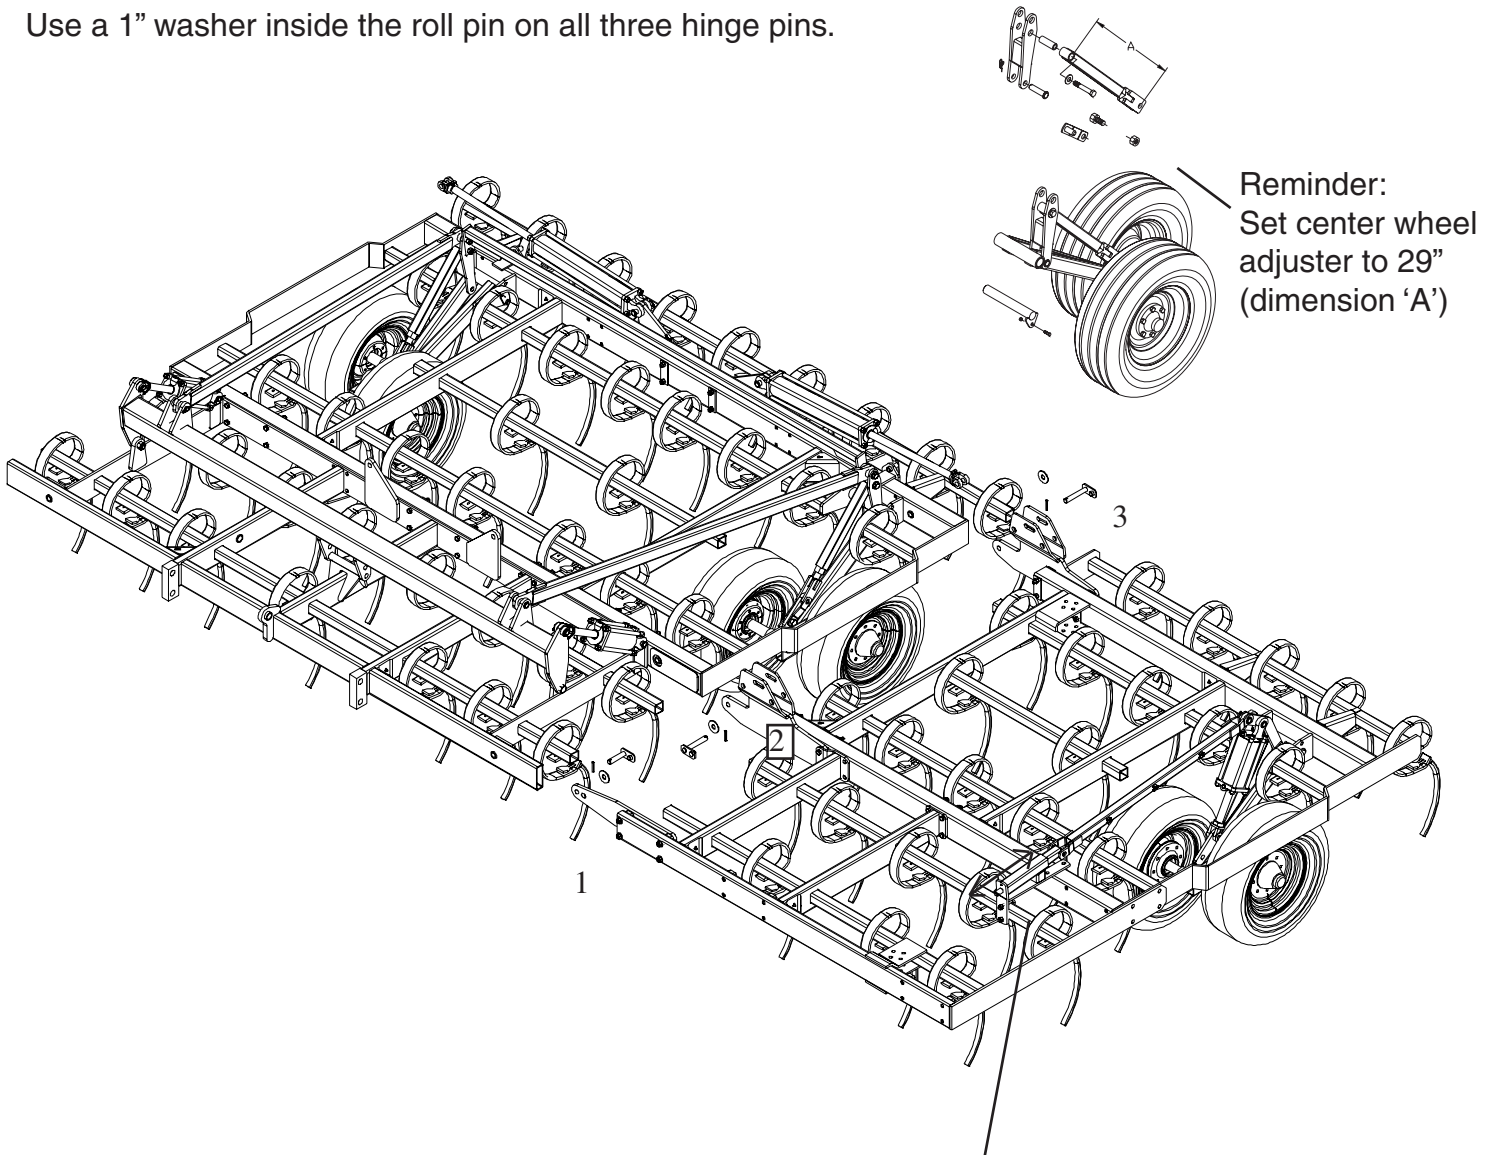



Make sure the wing adjustment slider is cranked out to 7 - 8" **before** raising the machine with the cylinder. If not, a tine could hook itself over the wheel axel, requiring you to remove the tine to unhook it.

This is due to the fact that the Double-Fold has high lift when turning in the field.







2800 Double-Fold 33' (10M) 4" Tine Spacing Layout

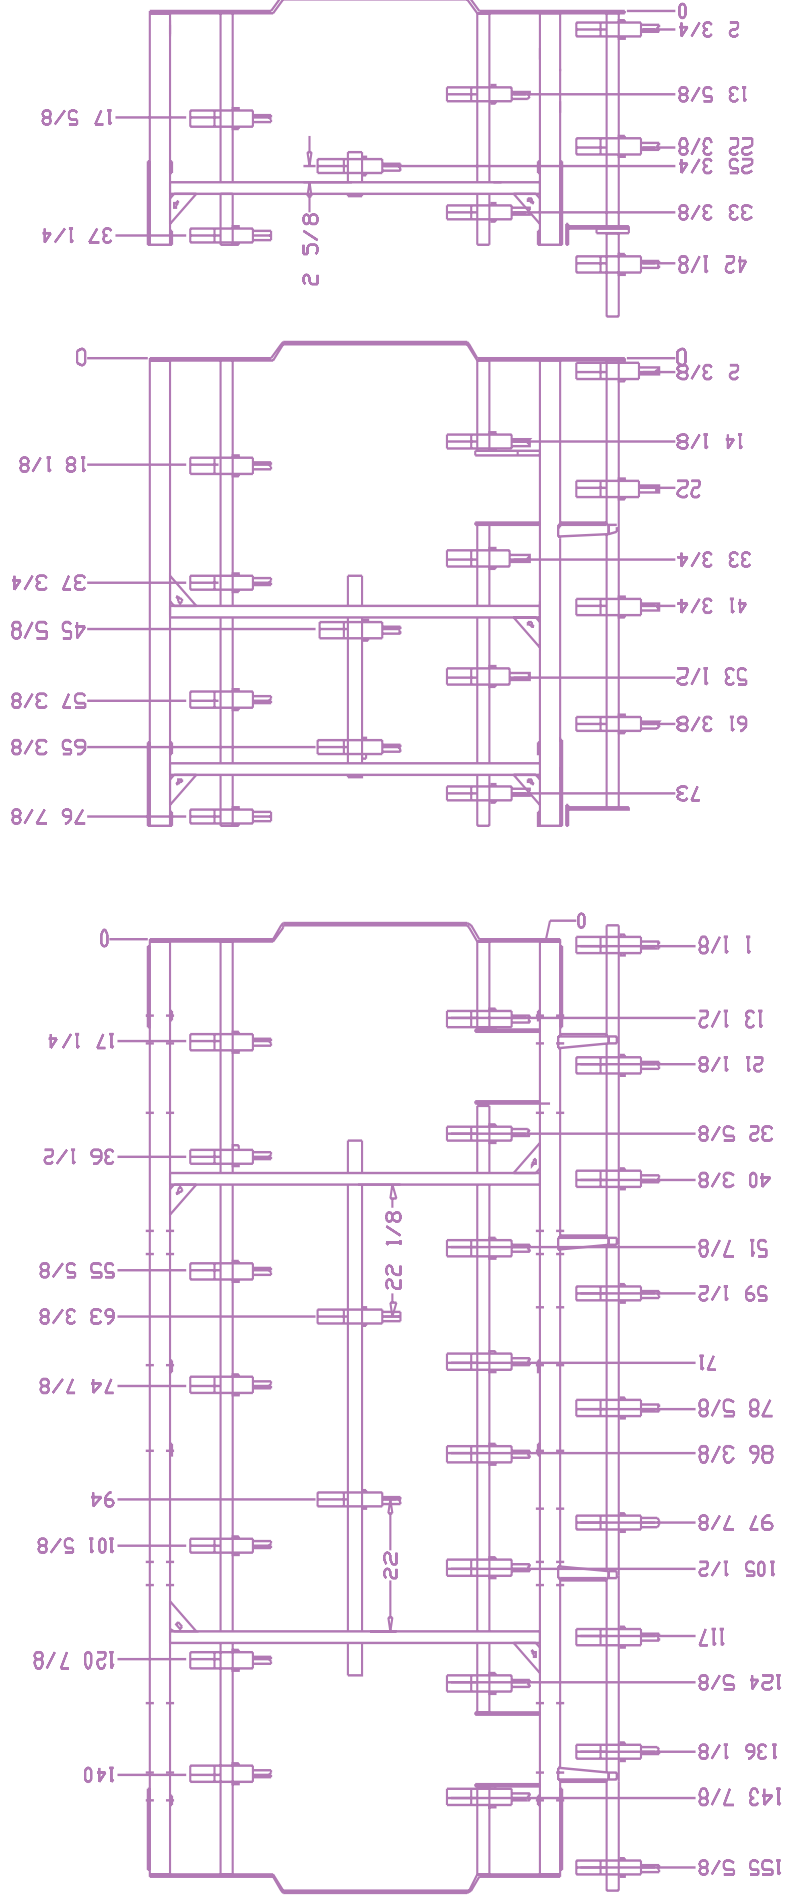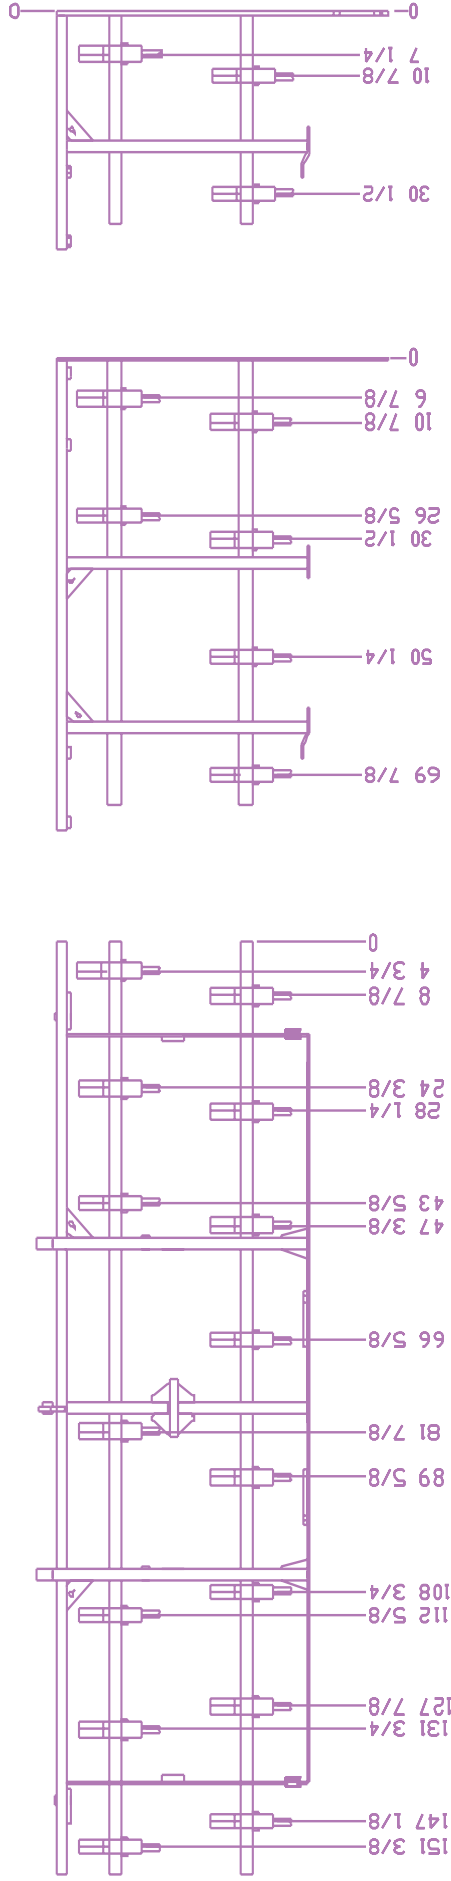







2800 Double-Fold 33' (10M) 6" Tine Spacing Layout

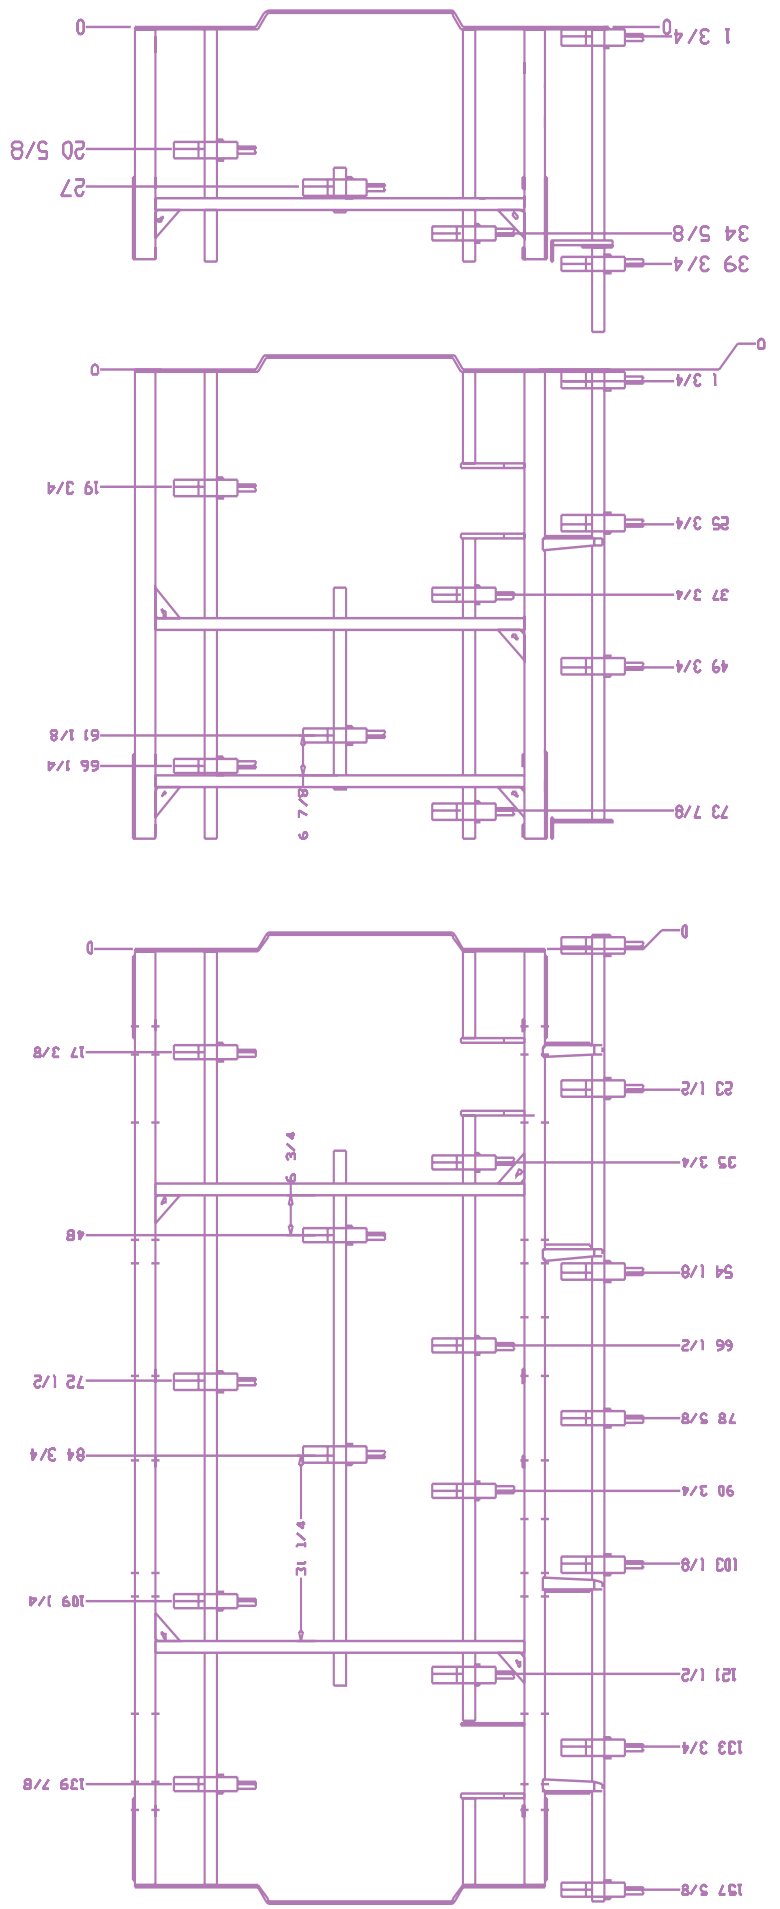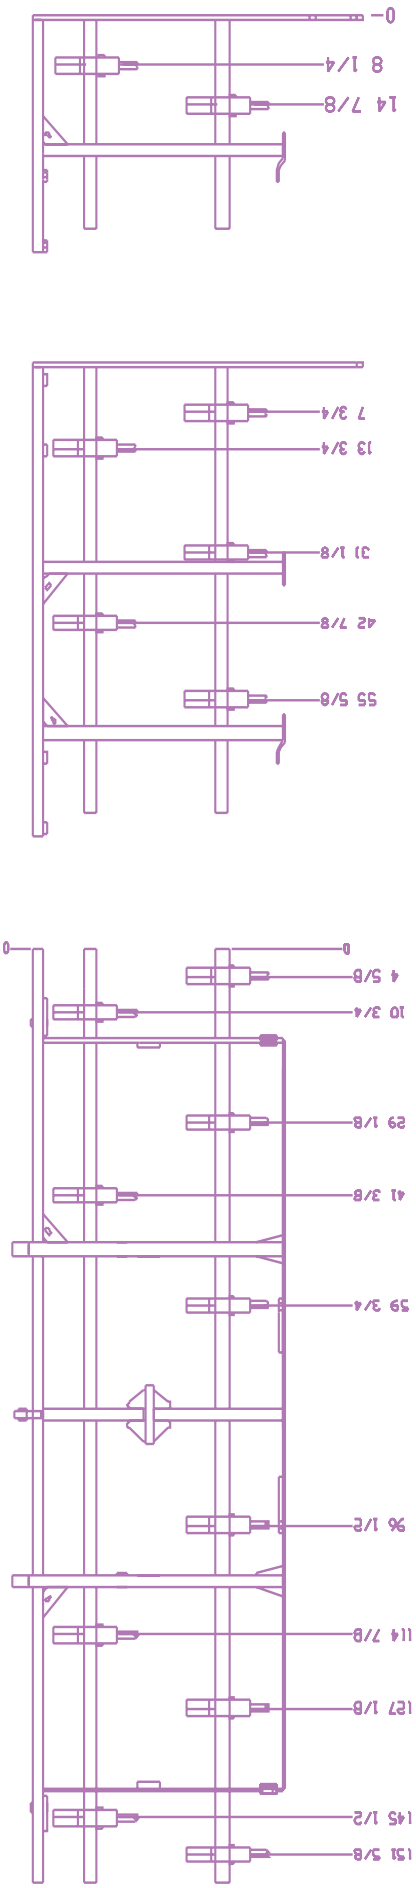

2800 Double-Fold 36' (11M) 4" Tine Spacing Layout

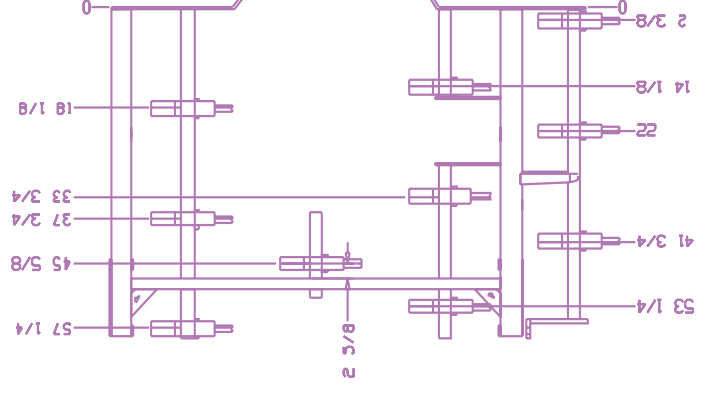
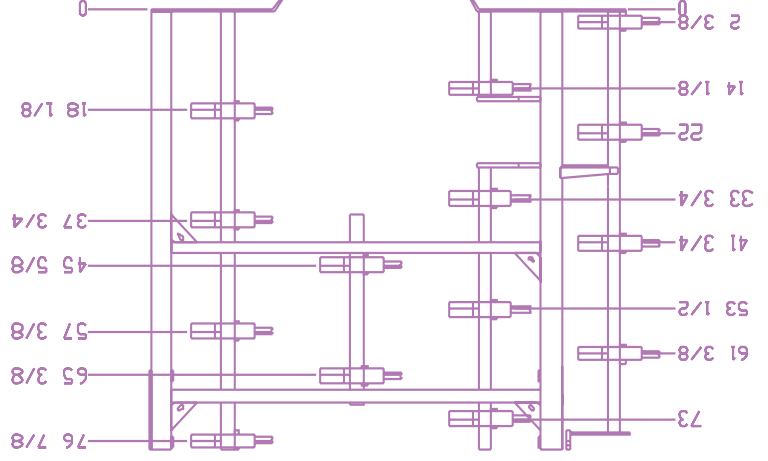
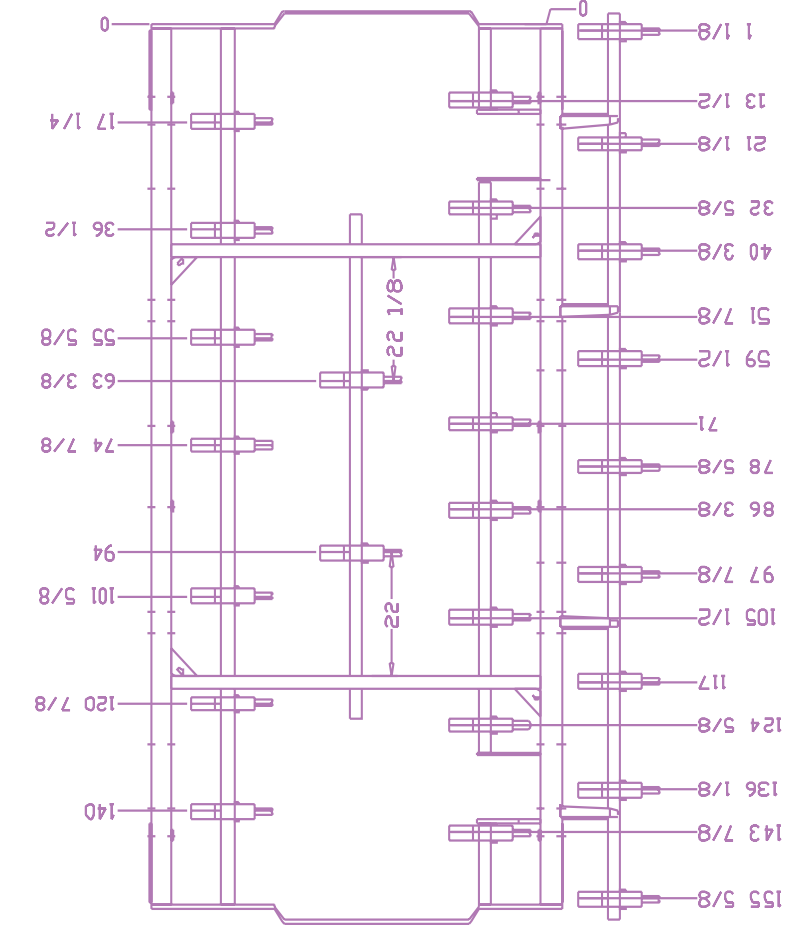
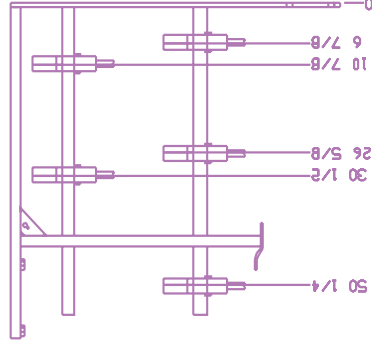
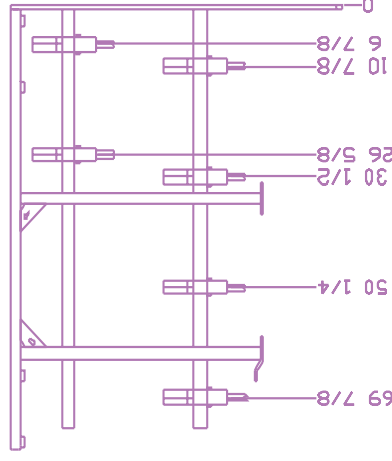
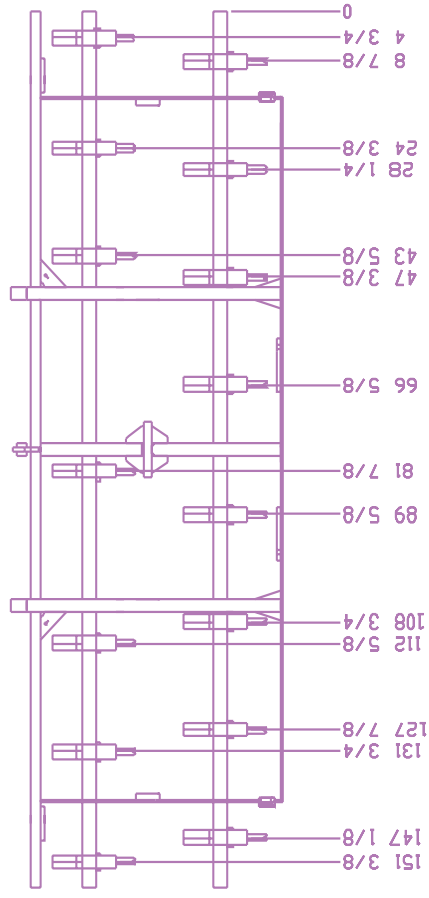


2800 Double-Fold 36' (11M) 6" Tine Spacing Layout

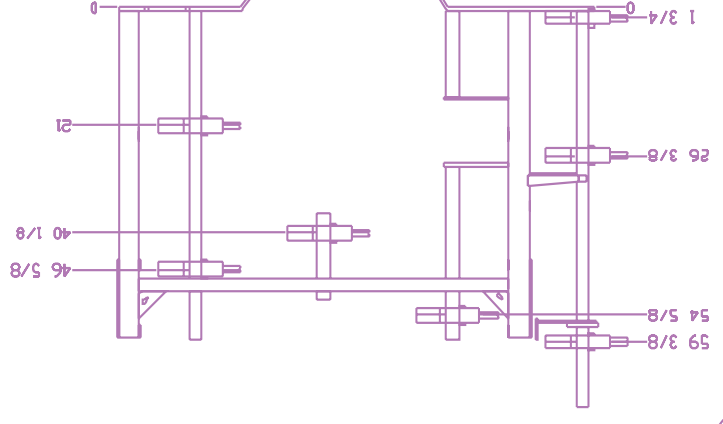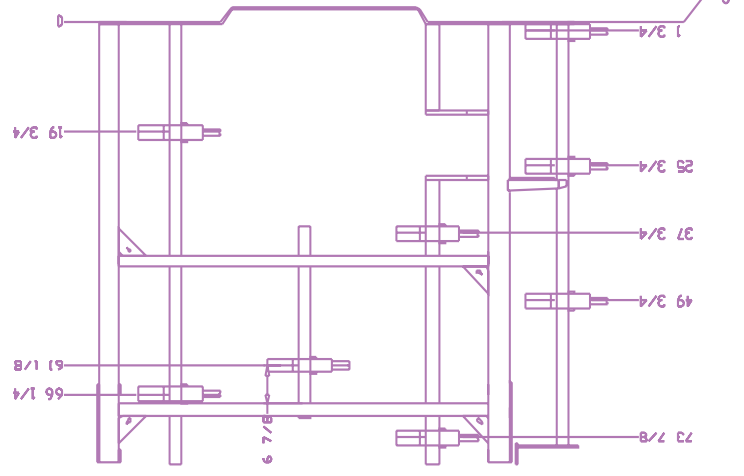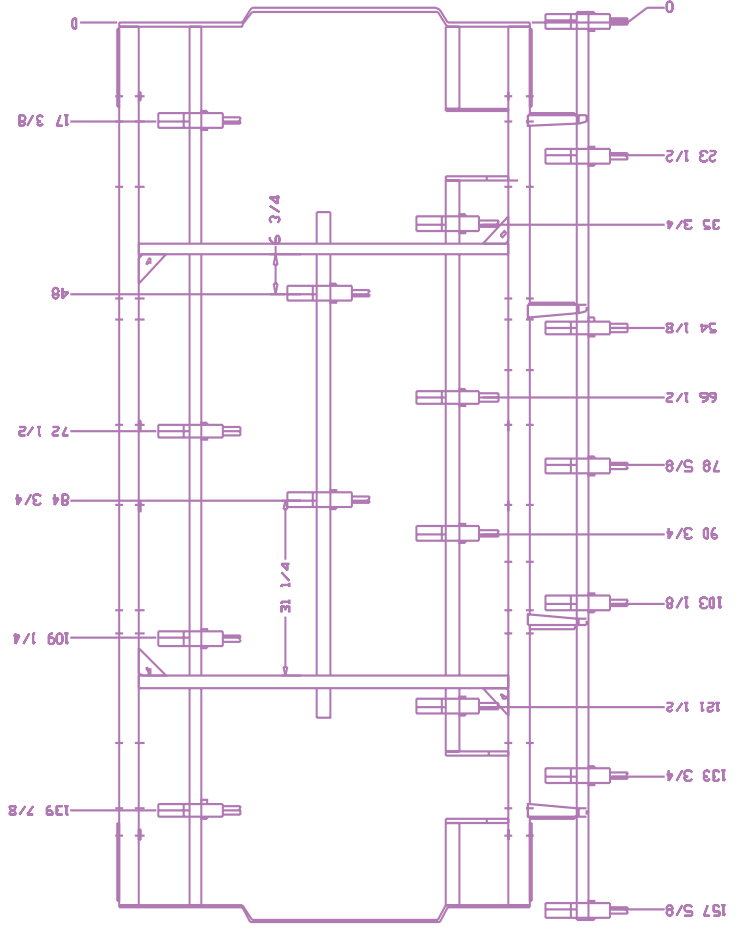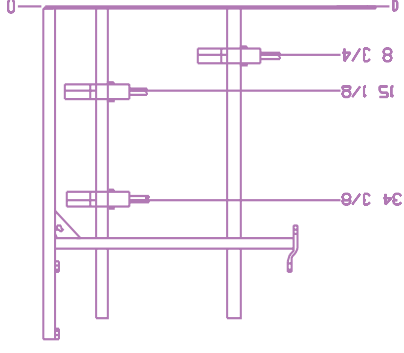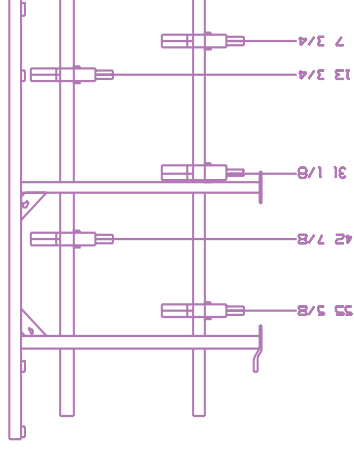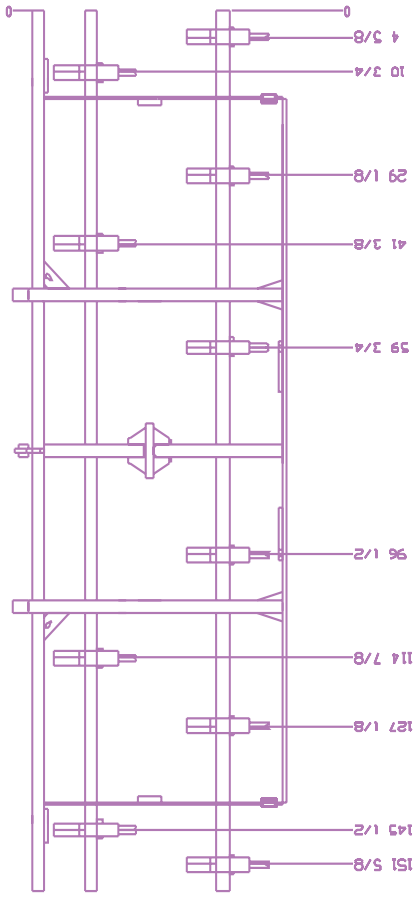







2800 Double-Fold 40' (12M)

4" Tine Spacing Layout

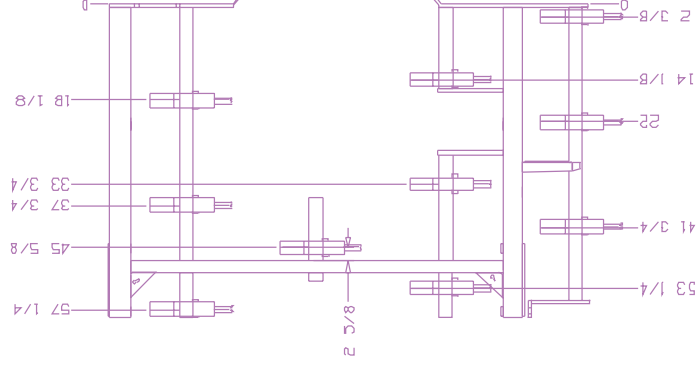
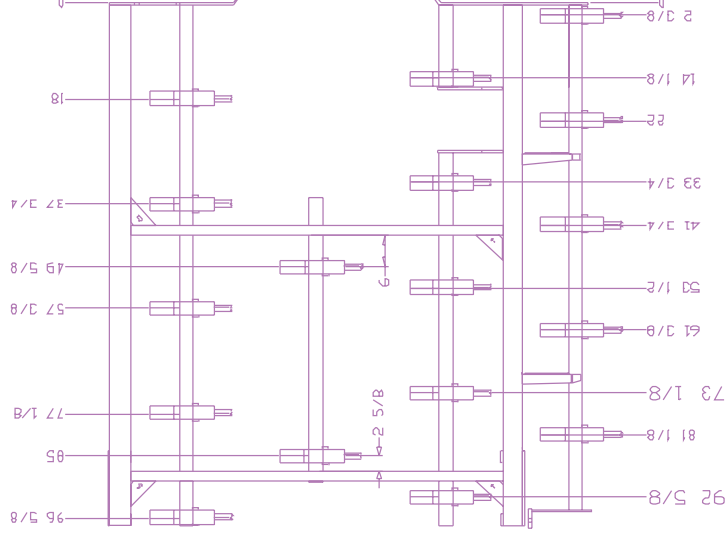
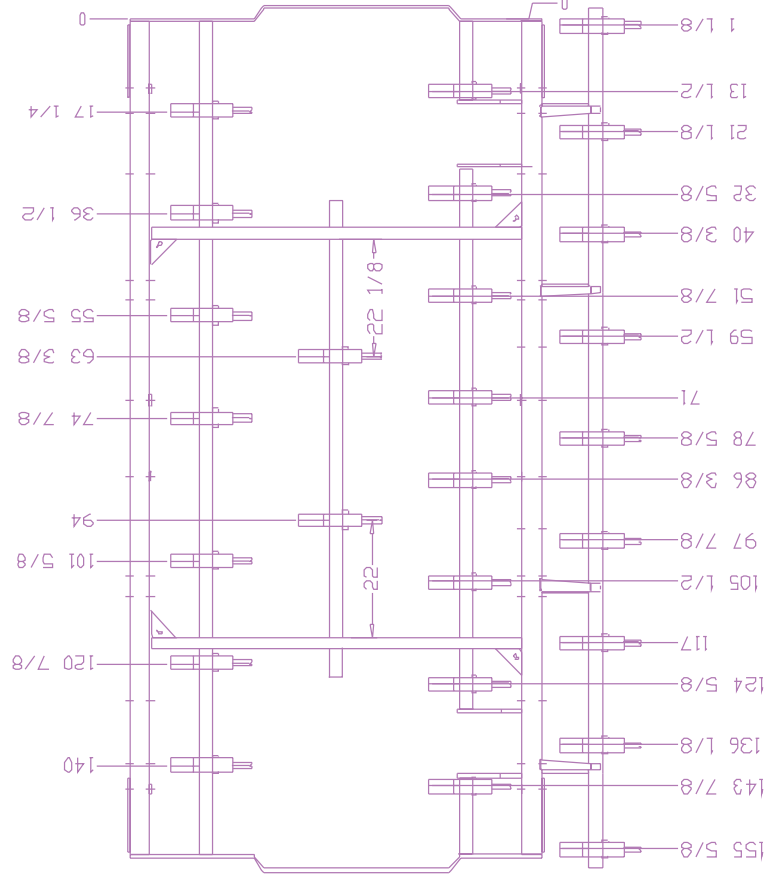
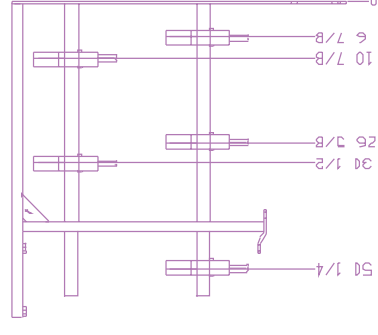
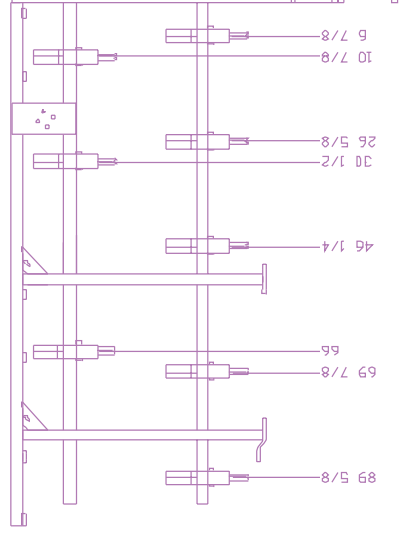
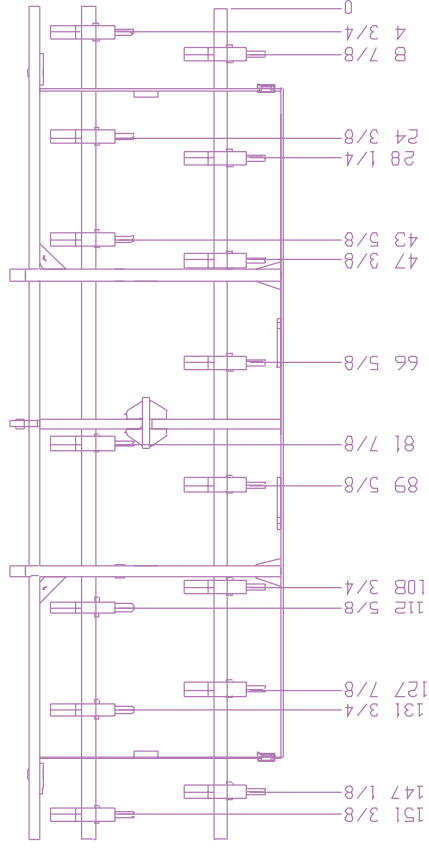


2800 Double-Fold 40' (12M)







6" Tine Spacing Layout

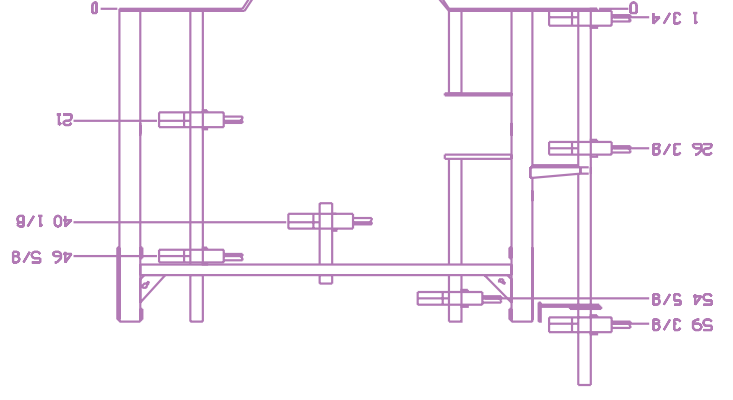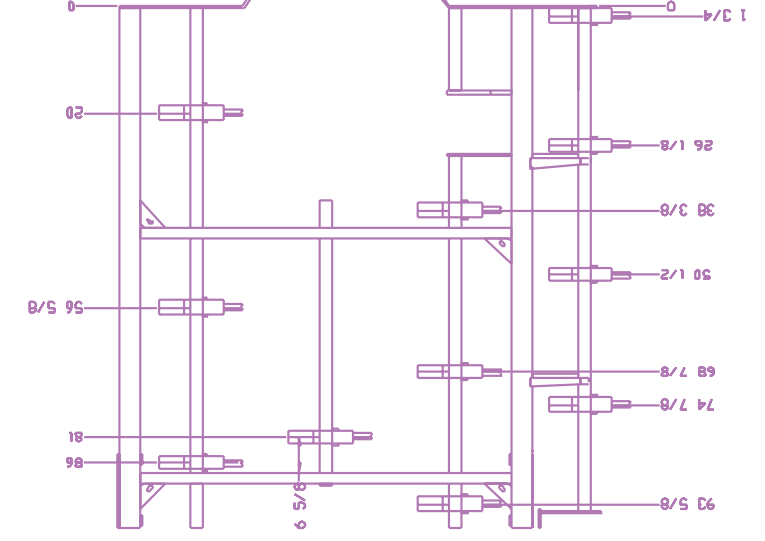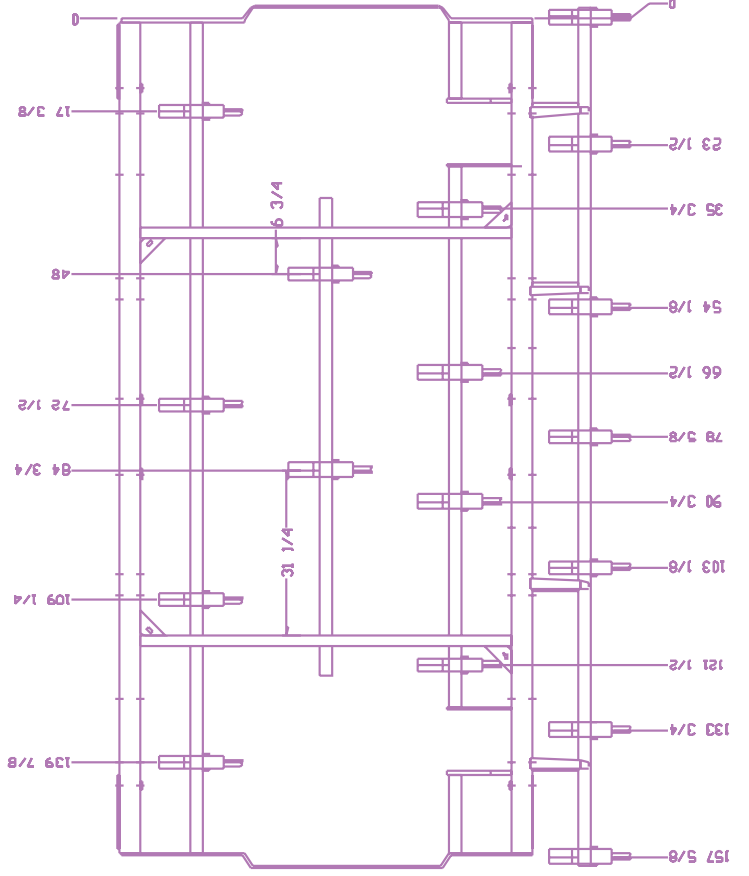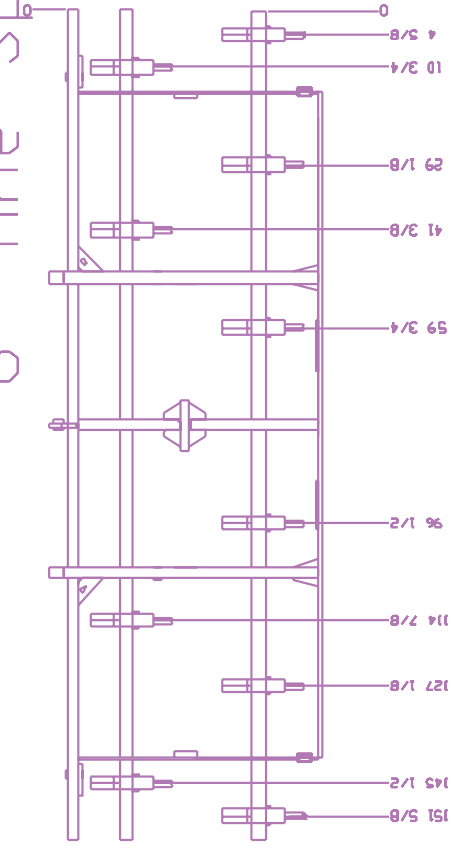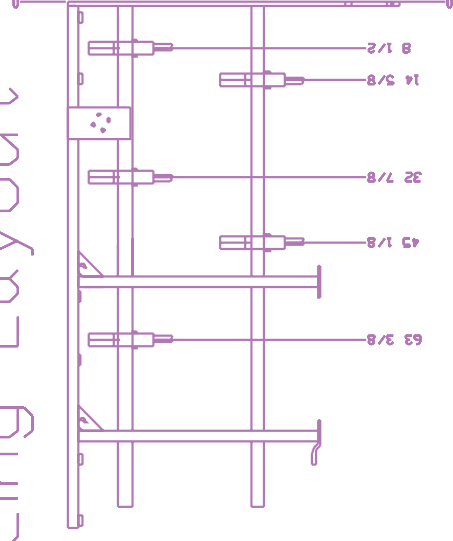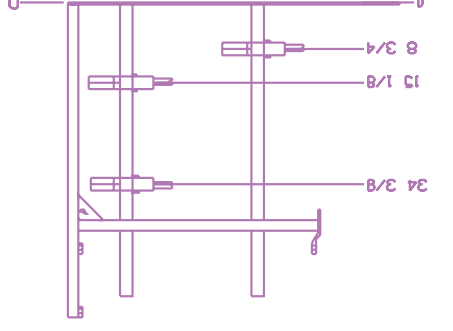







2800 Double-Fold 43' (13M) 4" Tine Spacing Layout

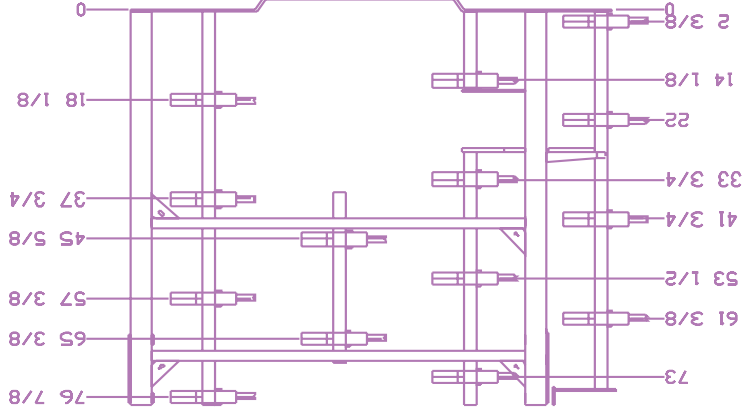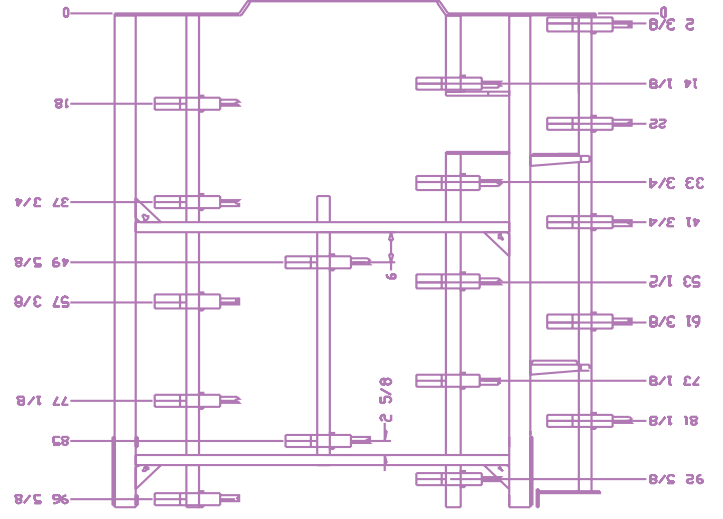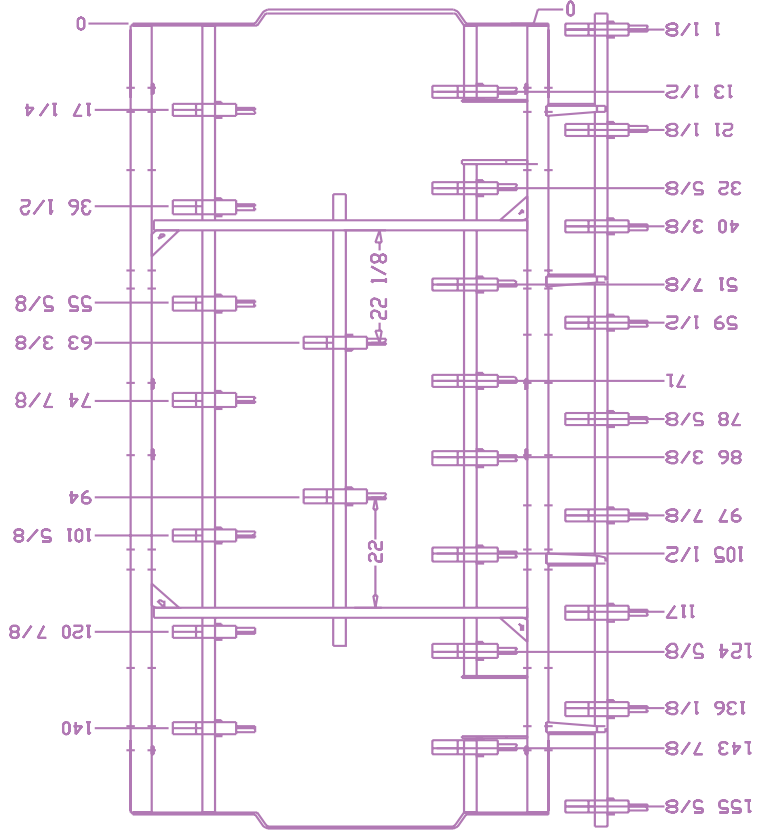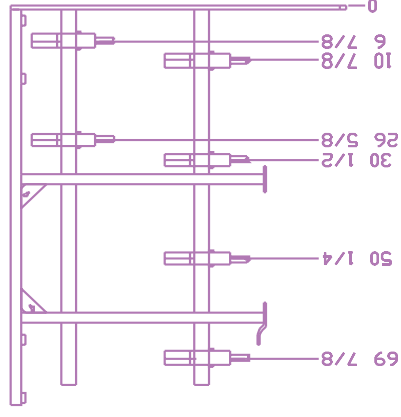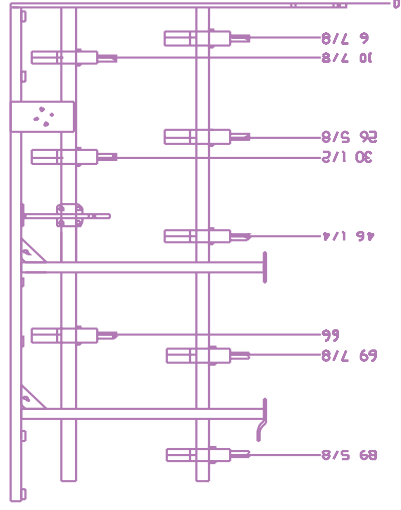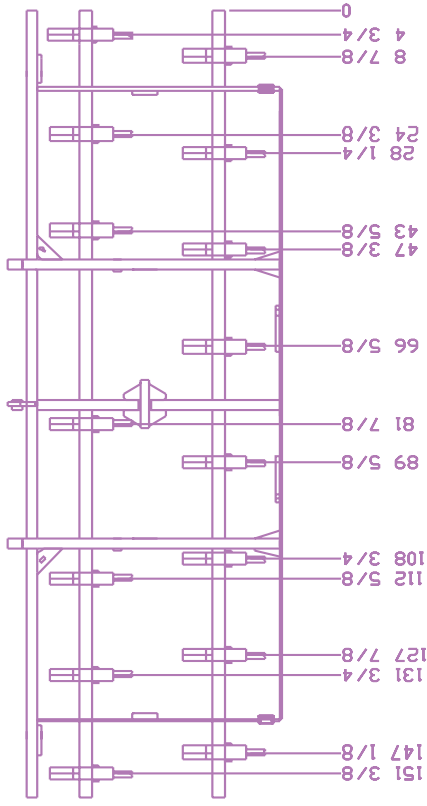







2800 Double-Fold 43' (13M) 6" Tine Spacing Layout

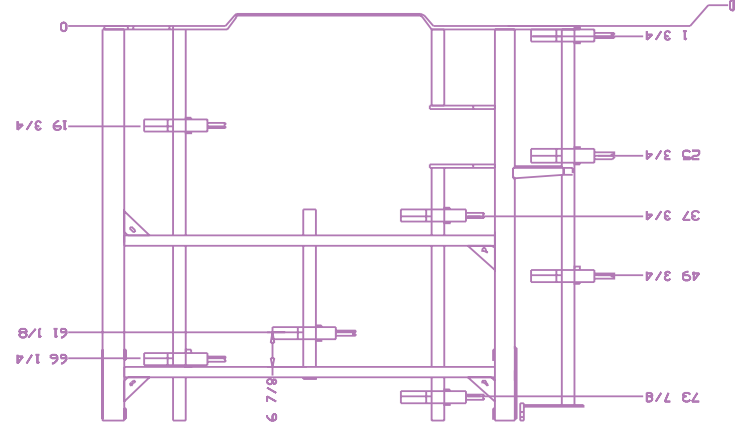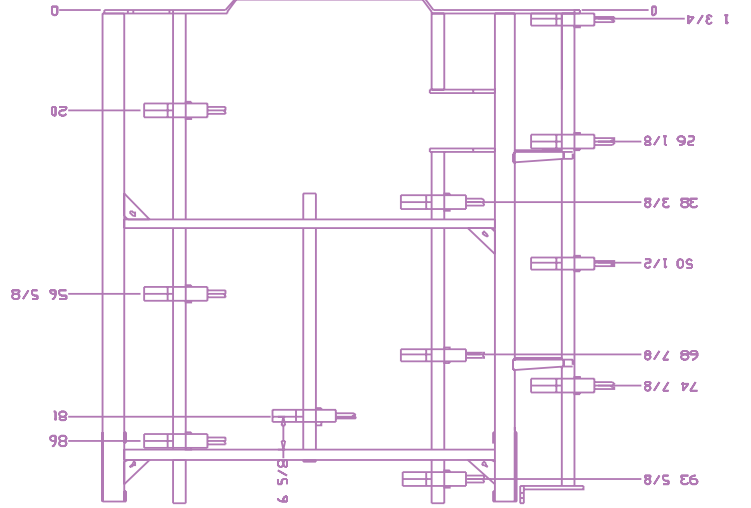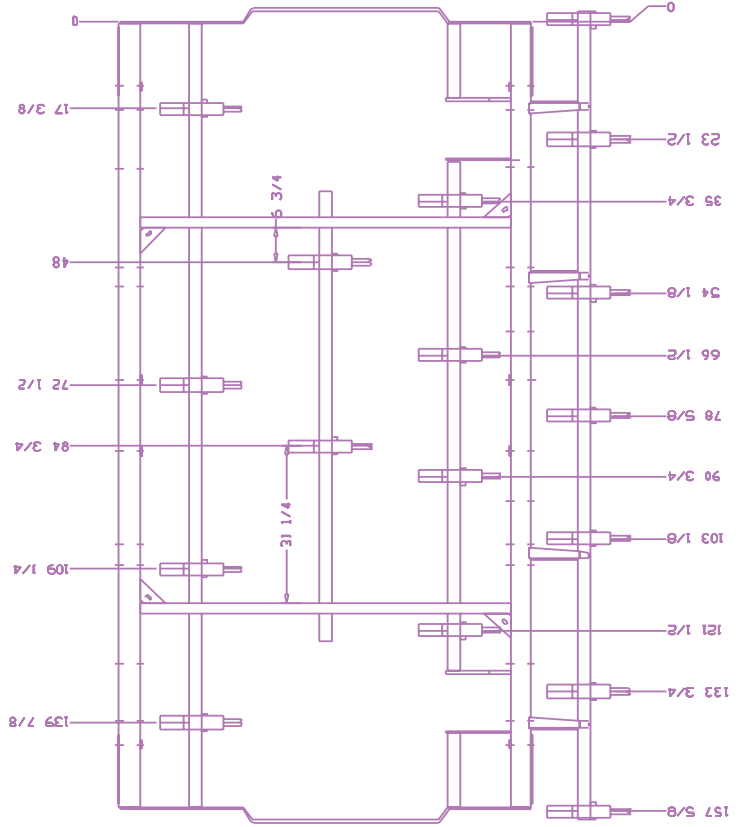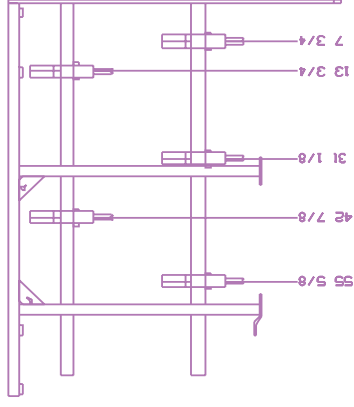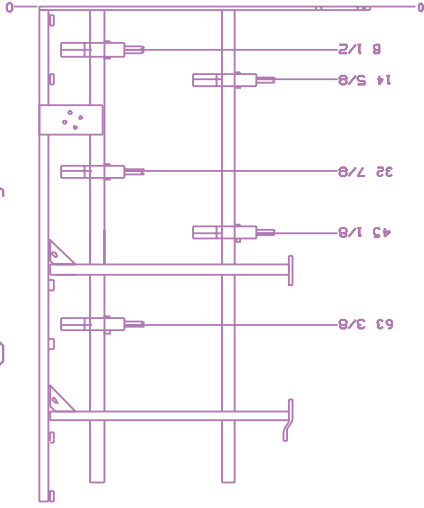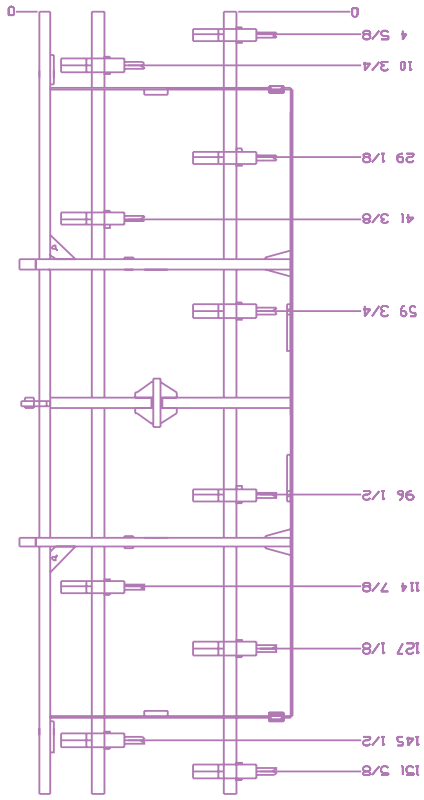







2800 Double-Fold 46' (14M) 4" Tine Spacing Layout

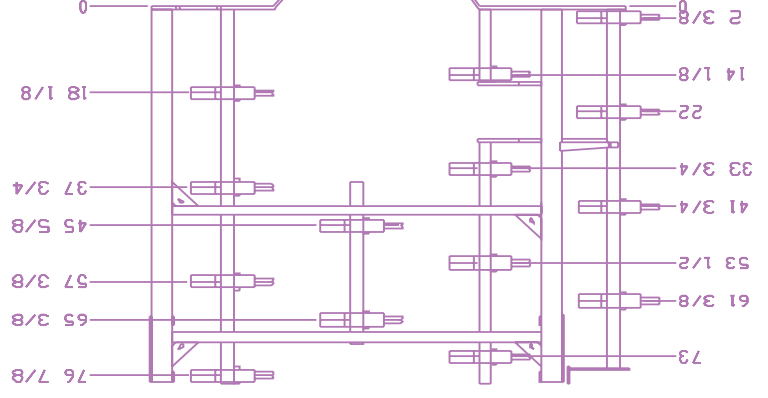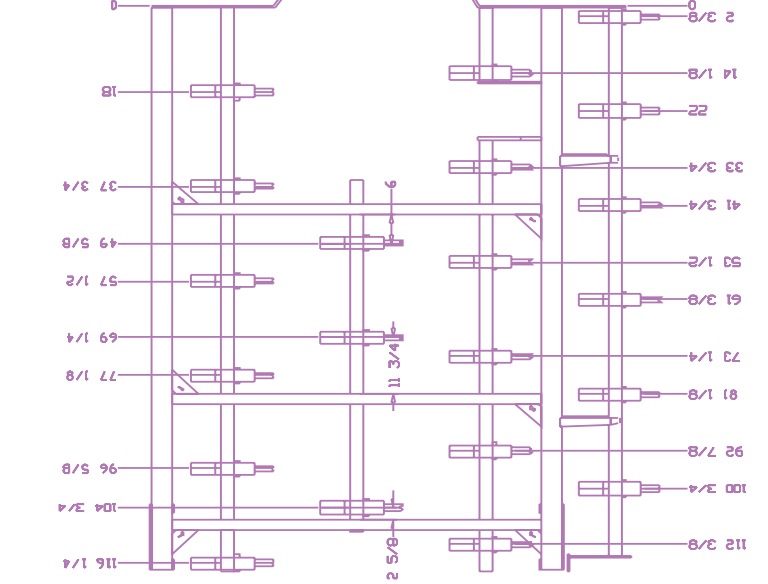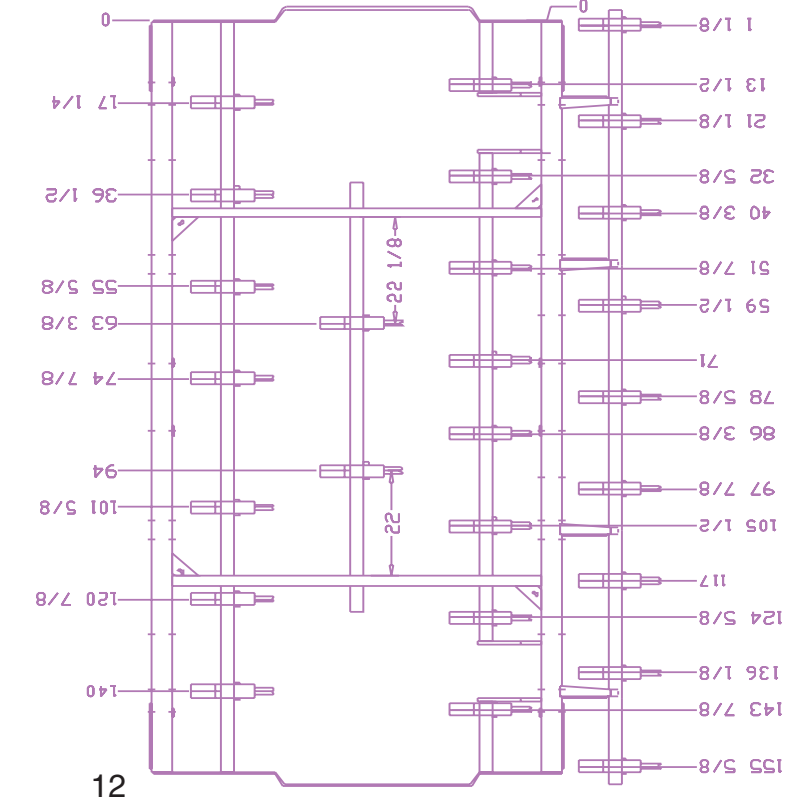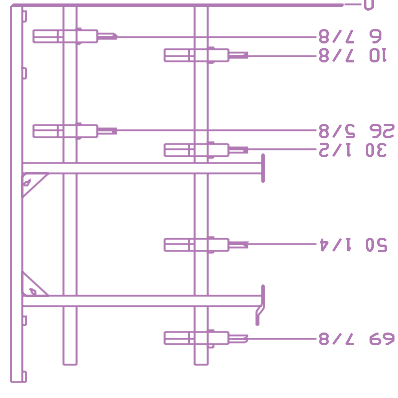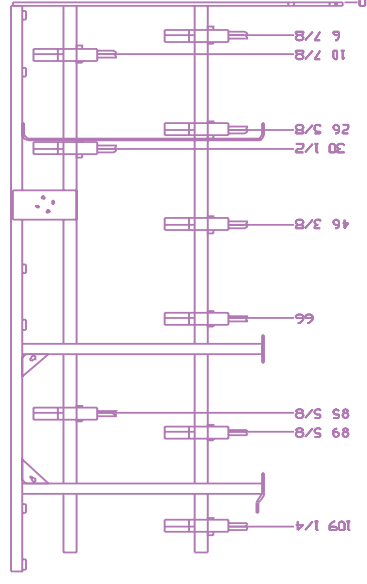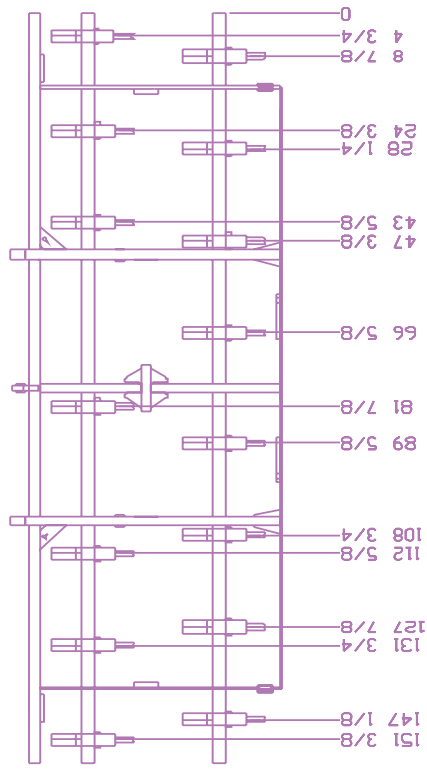







2800 Double-Fold 46' (14M) 6" Tine Spacing Layout

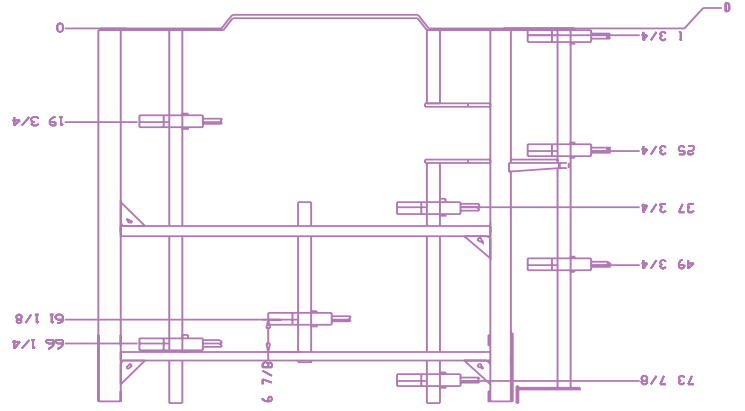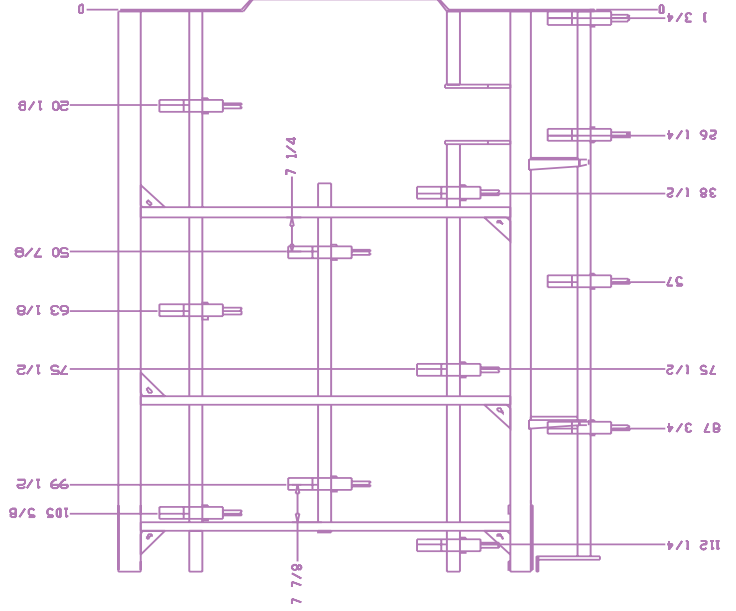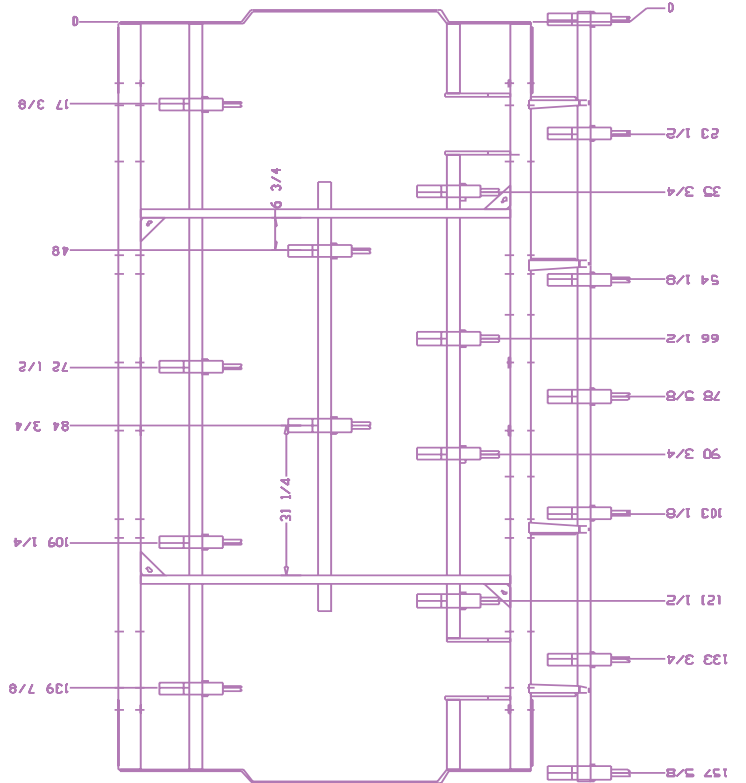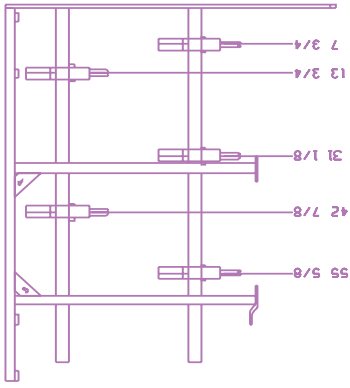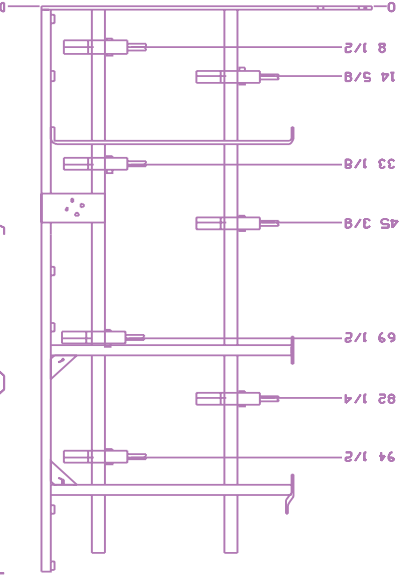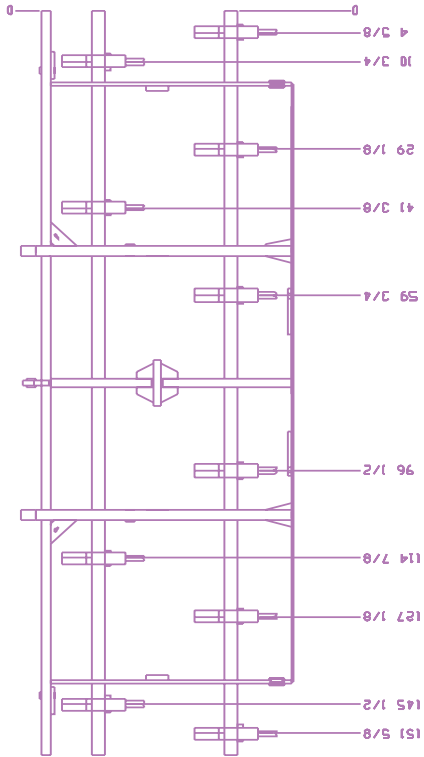

2800 Double-Fold 50' (15M) 4" Tine Spacing Layout

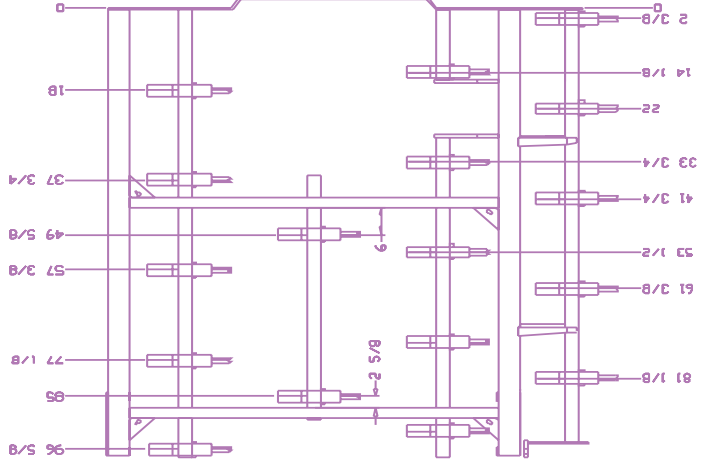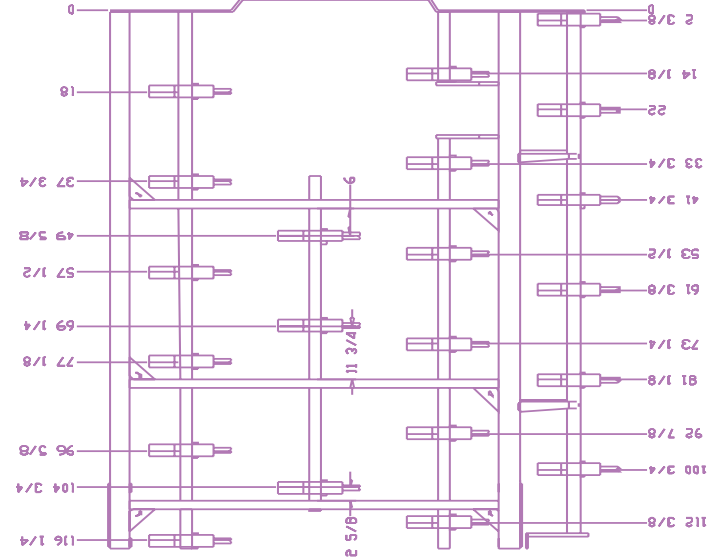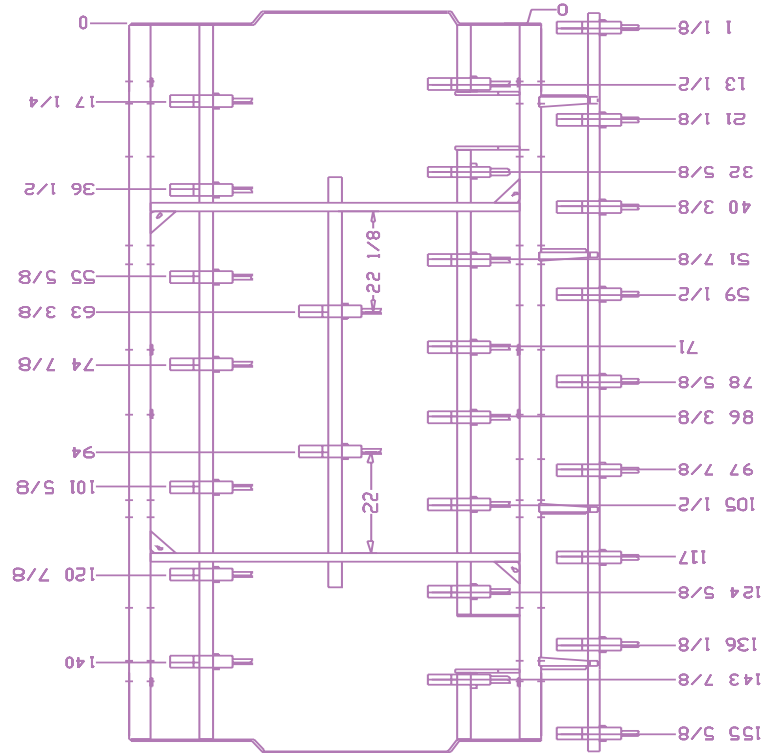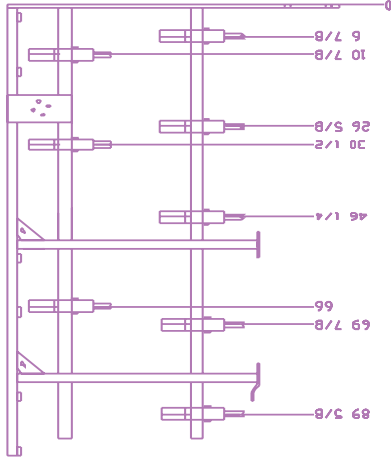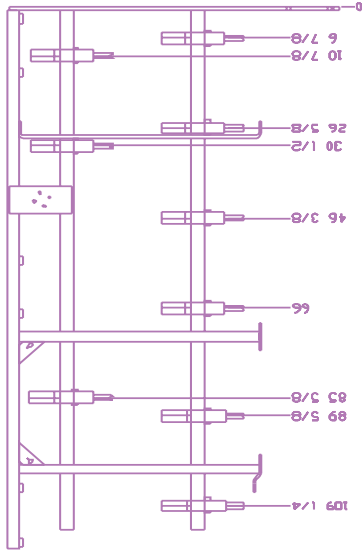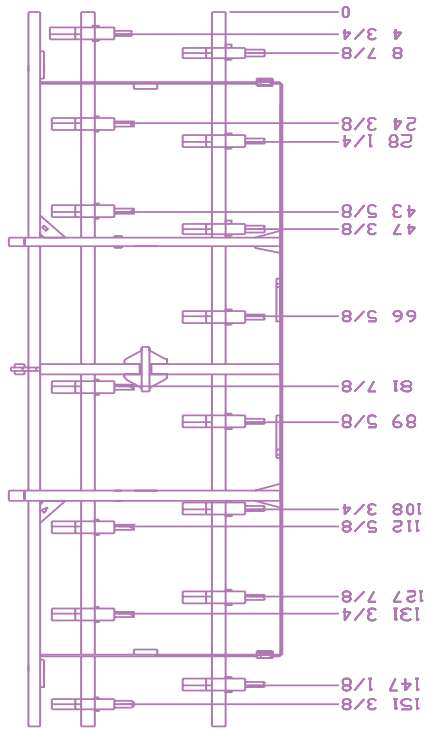

2800 Double-Fold 50' (15M) 6" Tine Spacing Layout

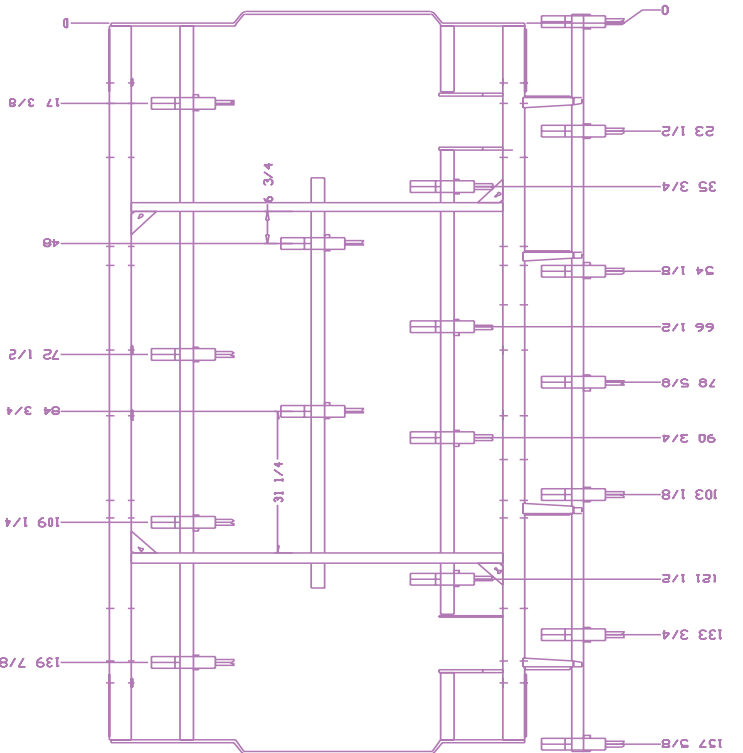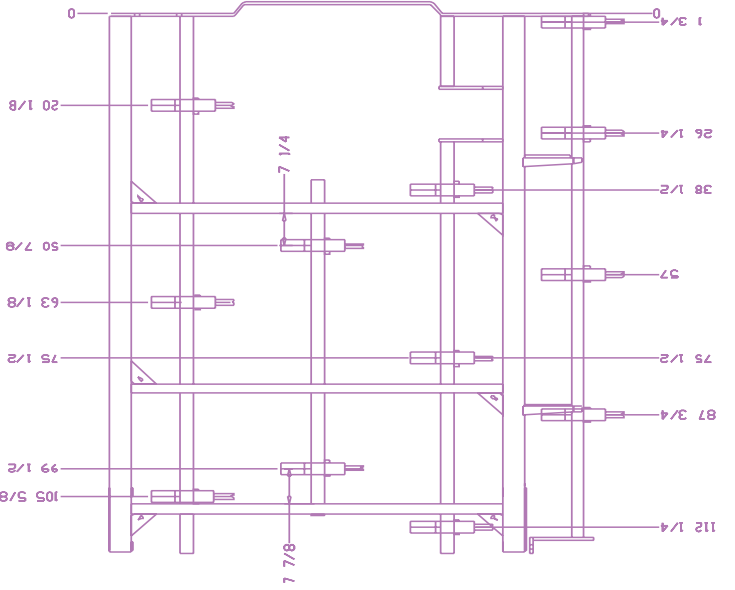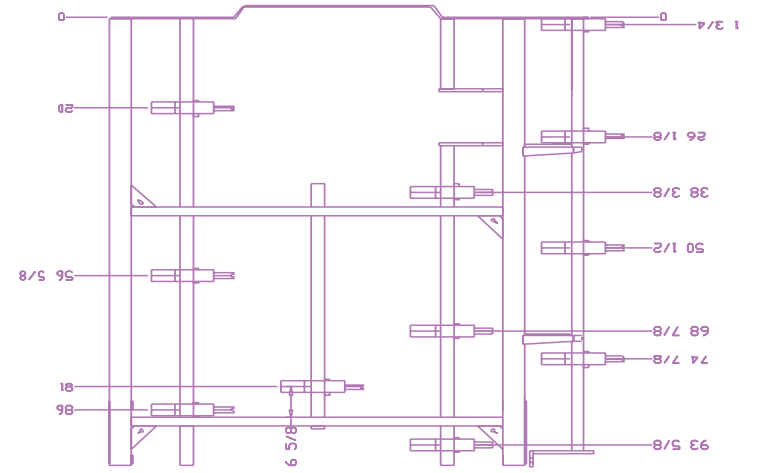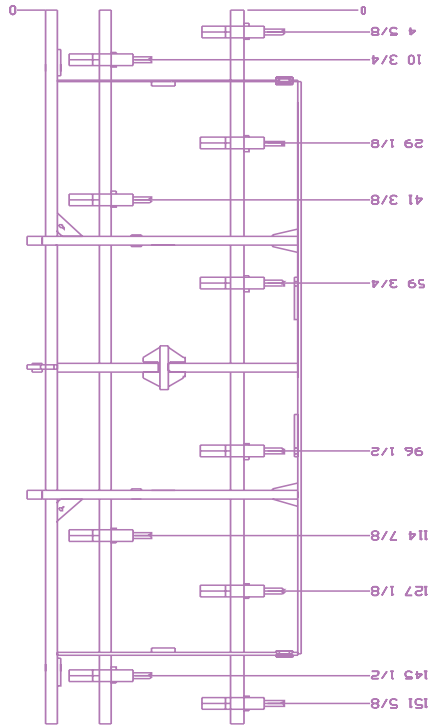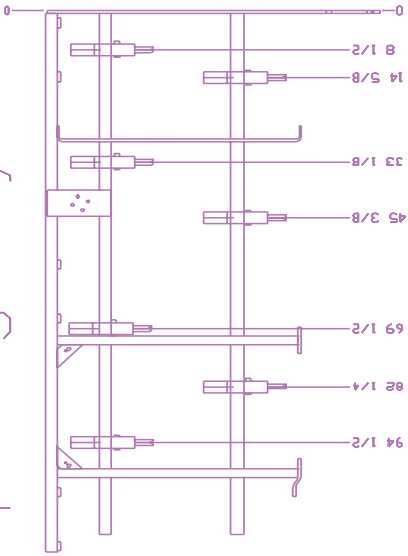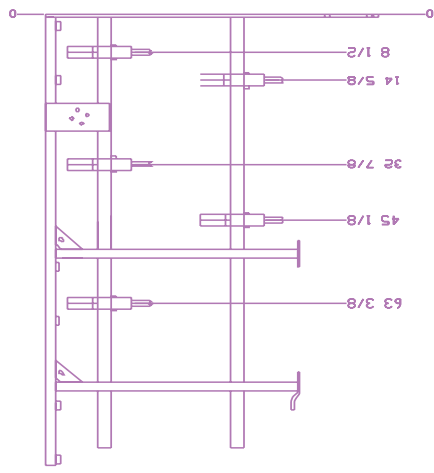

[illegible]