



2800 Double-Fold

Kongskilde
2800




Index

General Notes:	3
33' Double-Fold 4''Tine Spacing:	4
33' Double-Fold 6''Tine Spacing:	5
36' Double-Fold 4''Tine Spacing:	6
36' Double-Fold 6''Tine Spacing:	7
40' Double-Fold 4''Tine Spacing:	8
40' Double-Fold 6''Tine Spacing:	9
43' Double-Fold 4''Tine Spacing:	10
43' Double-Fold 6''Tine Spacing:	11
46' Double-Fold 4''Tine Spacing:	12
46' Double-Fold 6''Tine Spacing:	13
50' Double-Fold 4''Tine Spacing:	14
50' Double-Fold 6''Tine Spacing:	15

General Notes:

This cultivator has three hinges on each wing. Pin the front hinge first, followed by the middle and then the rear. Leave all of the hinge bolts loose until all 3 hinge pins have been installed.

Use a 1" washer inside the roll pin on all three hinge pins.

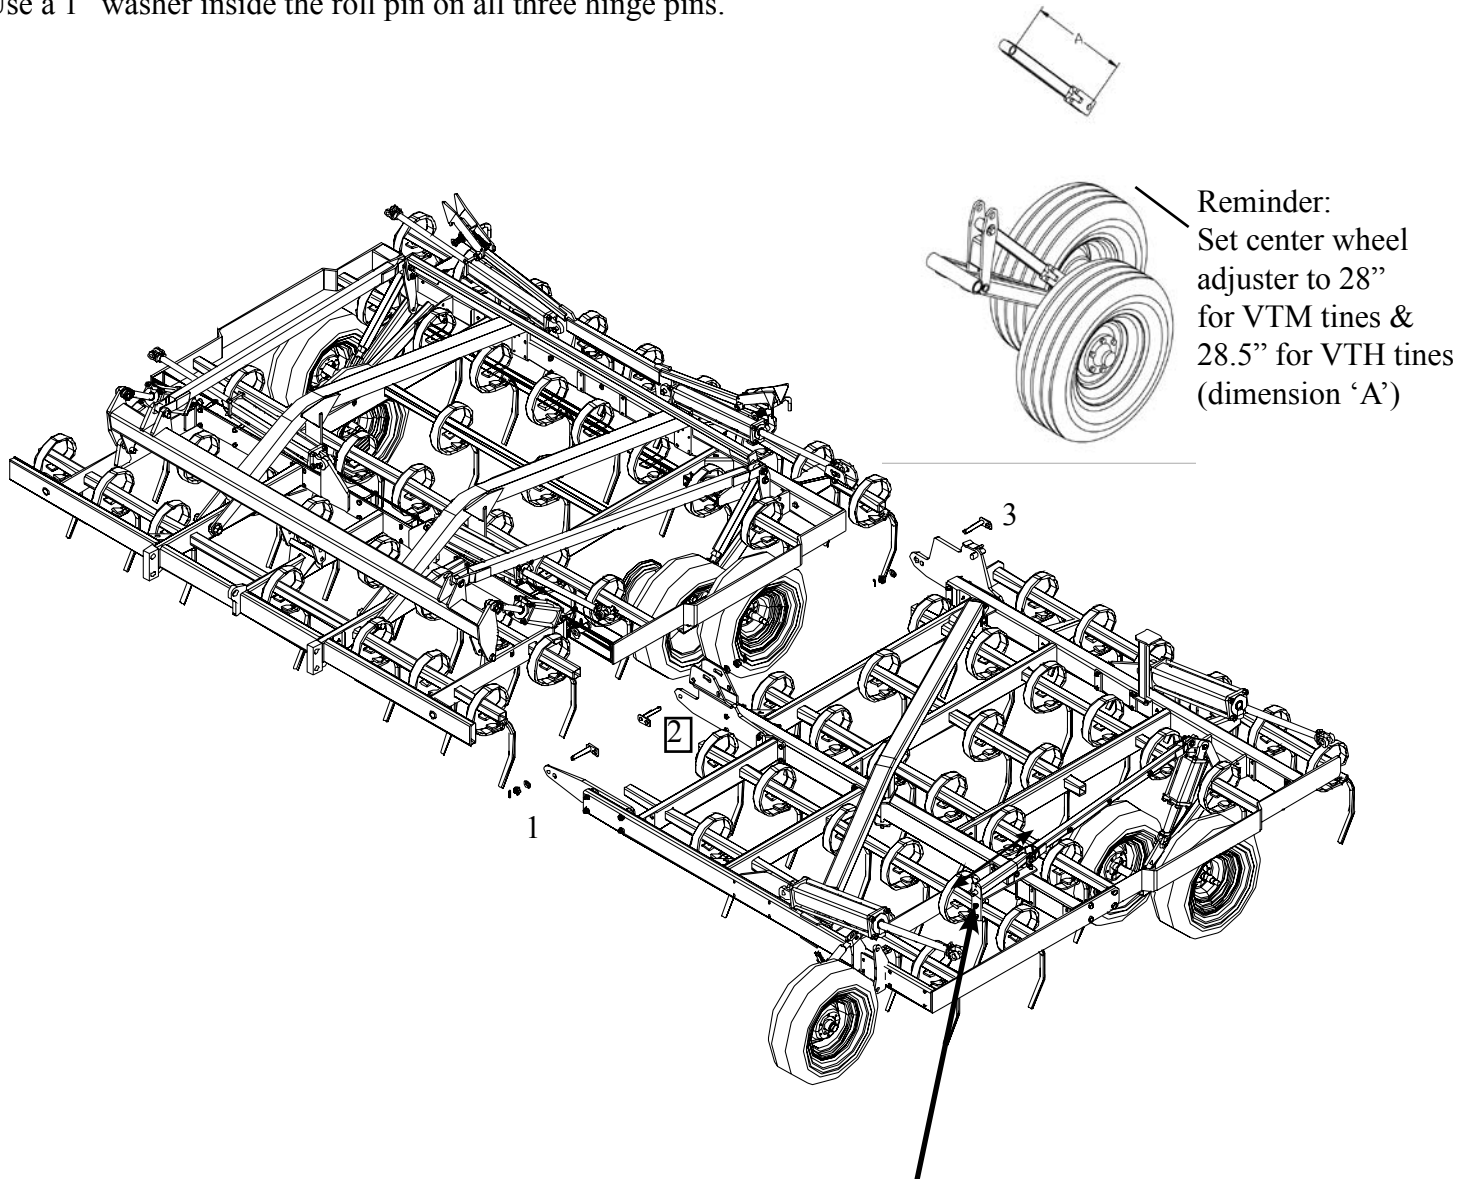





Make sure the wing adjustment slider is cranked out to 7 - 8" *before* raising the machine with the cylinder. If not, a tine could hook itself over the wheel axel, requiring you to remove the tine to unhook it.

This is due to the fact that the Double-Fold has high lift when turning in the field.



2800 Double-Fold 33' (10M)









4" Tine Spacing Layout

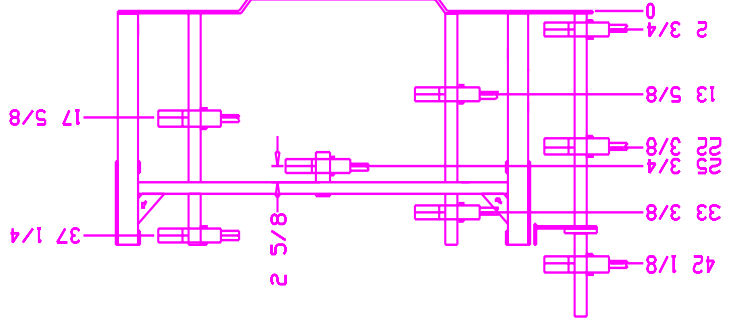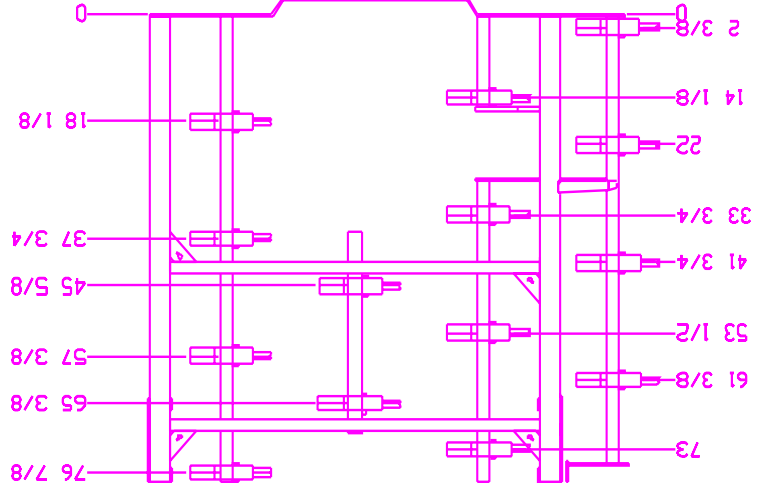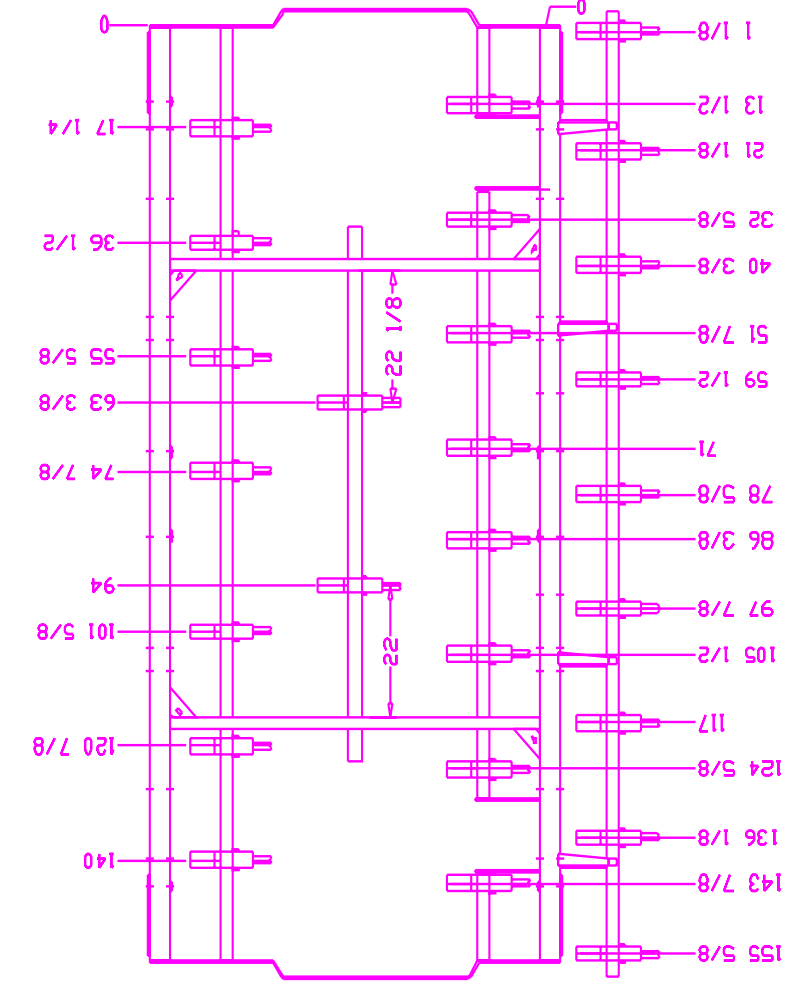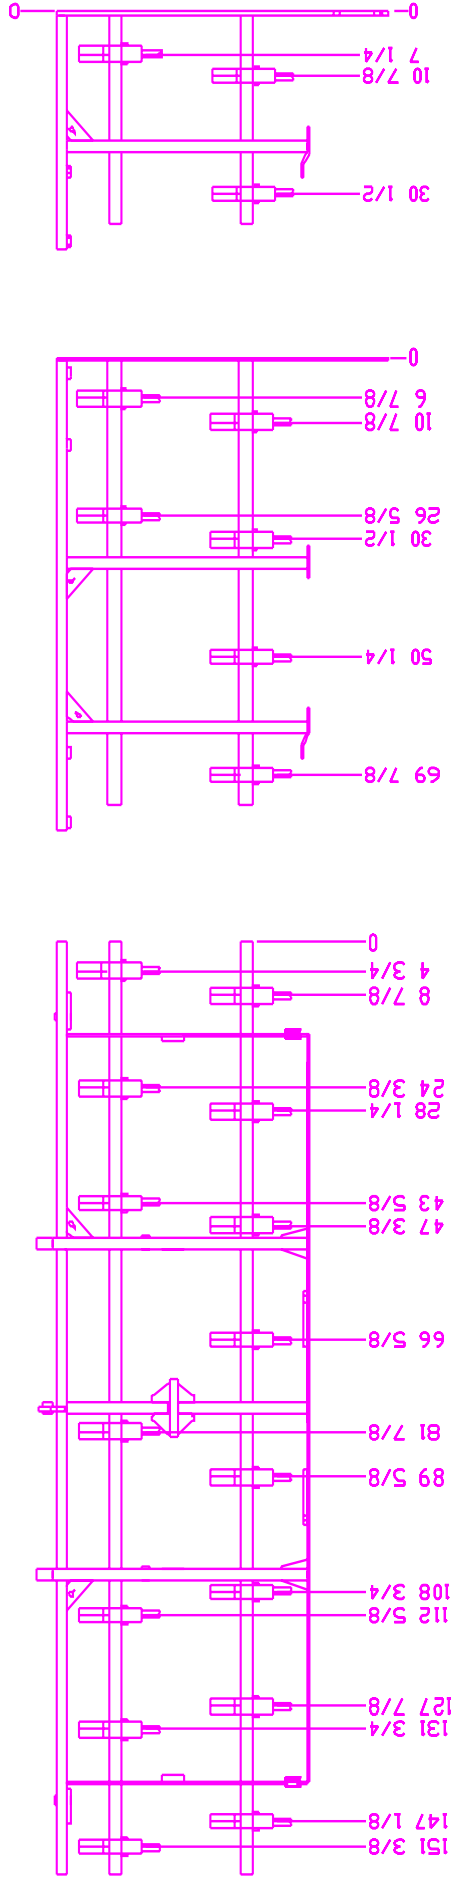







2800 Double-Fold 33' (10M) 6" Tine Spacing Layout

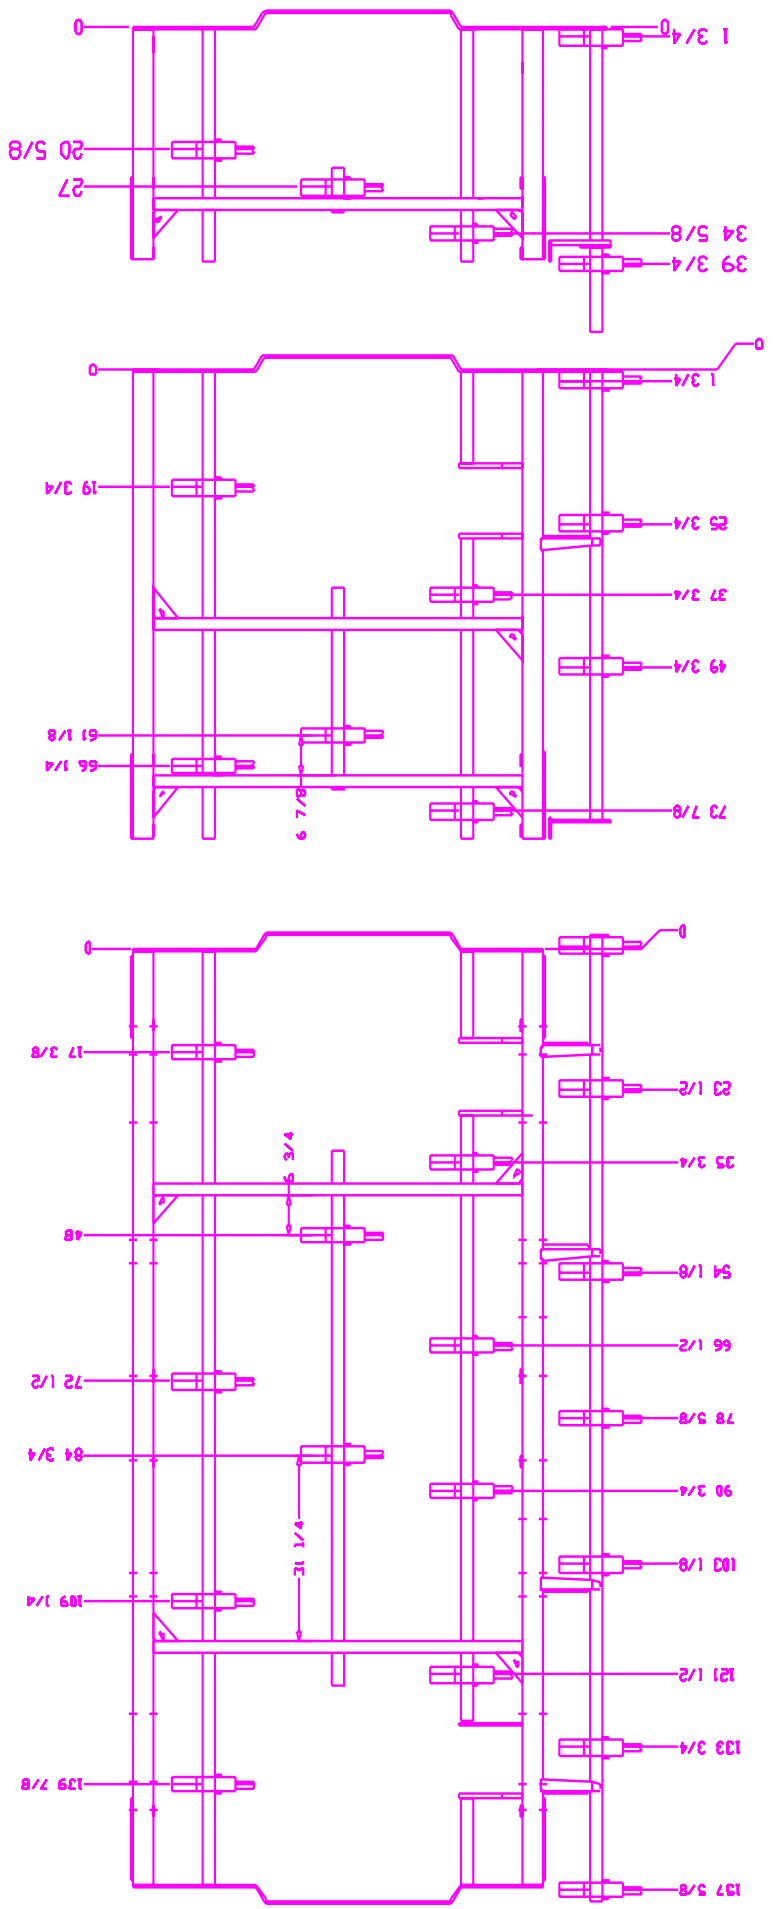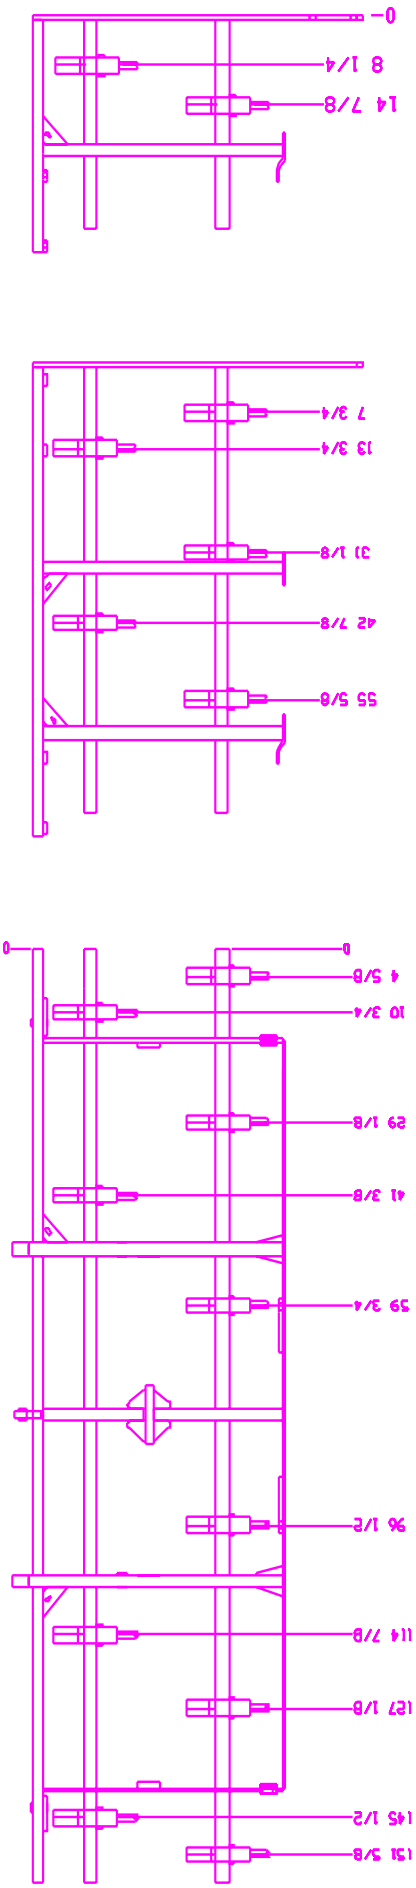

2800 Double-Fold 36' (11M) 4" Tine Spacing Layout

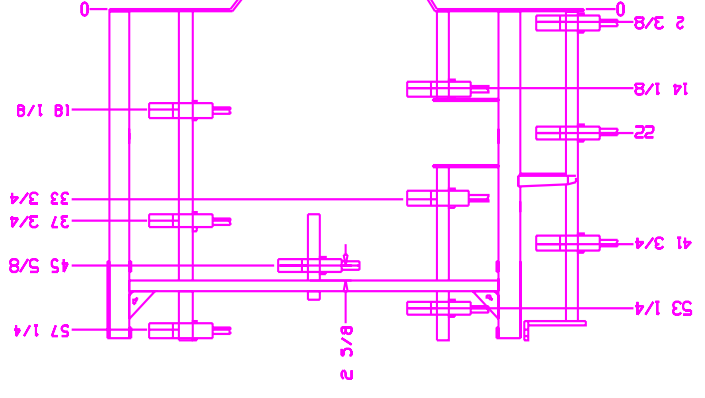
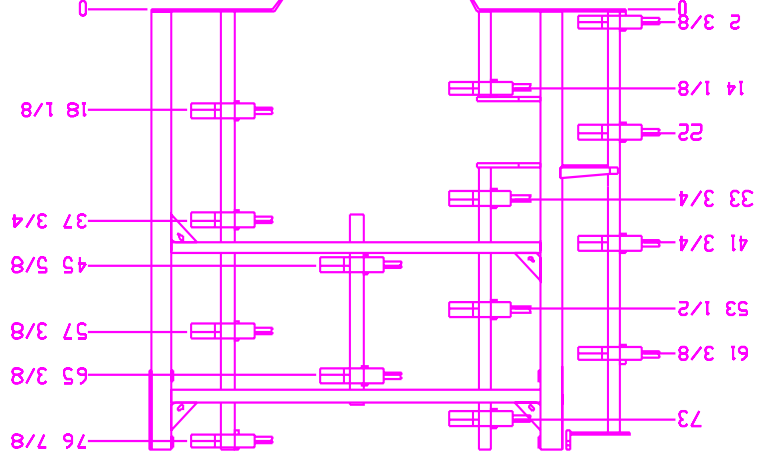
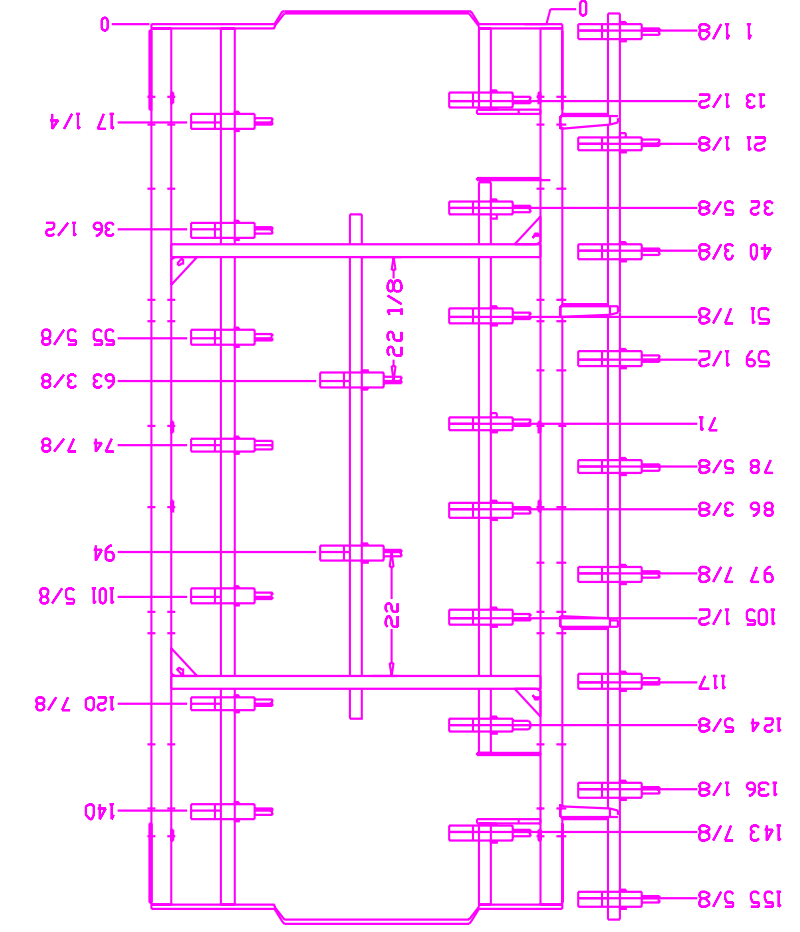
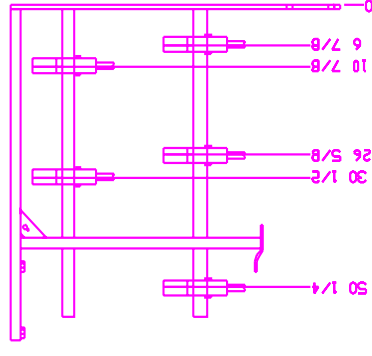
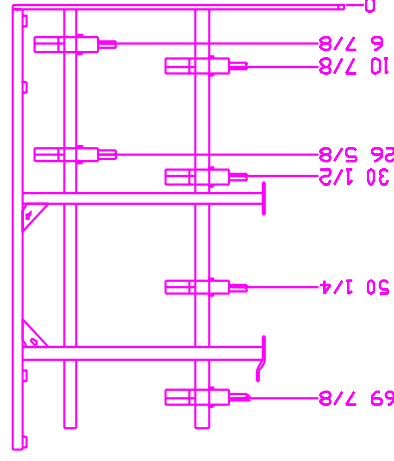
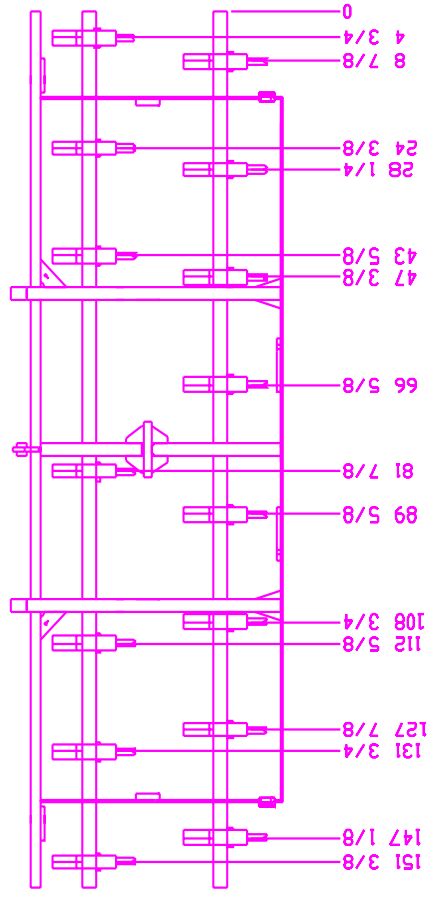


2800 Double-Fold 36' (11M) 6" Tine Spacing Layout

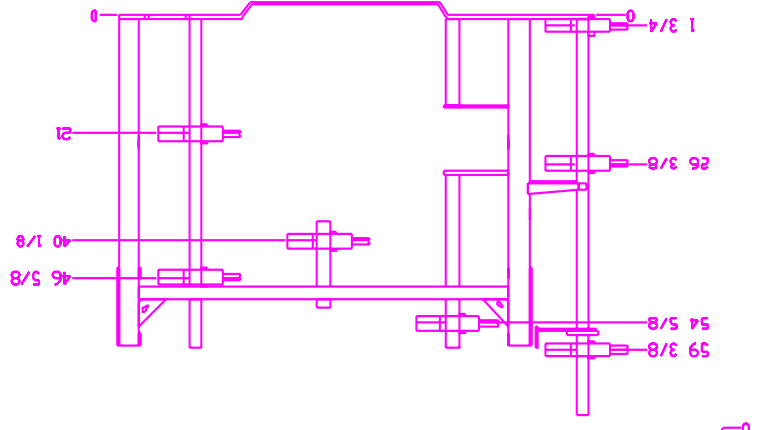
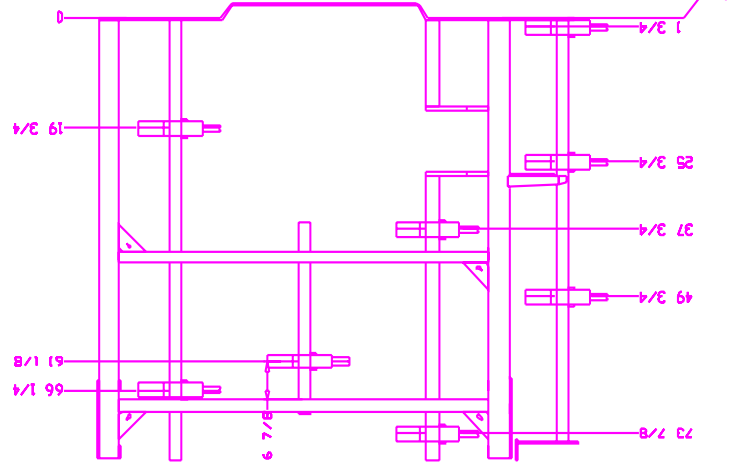
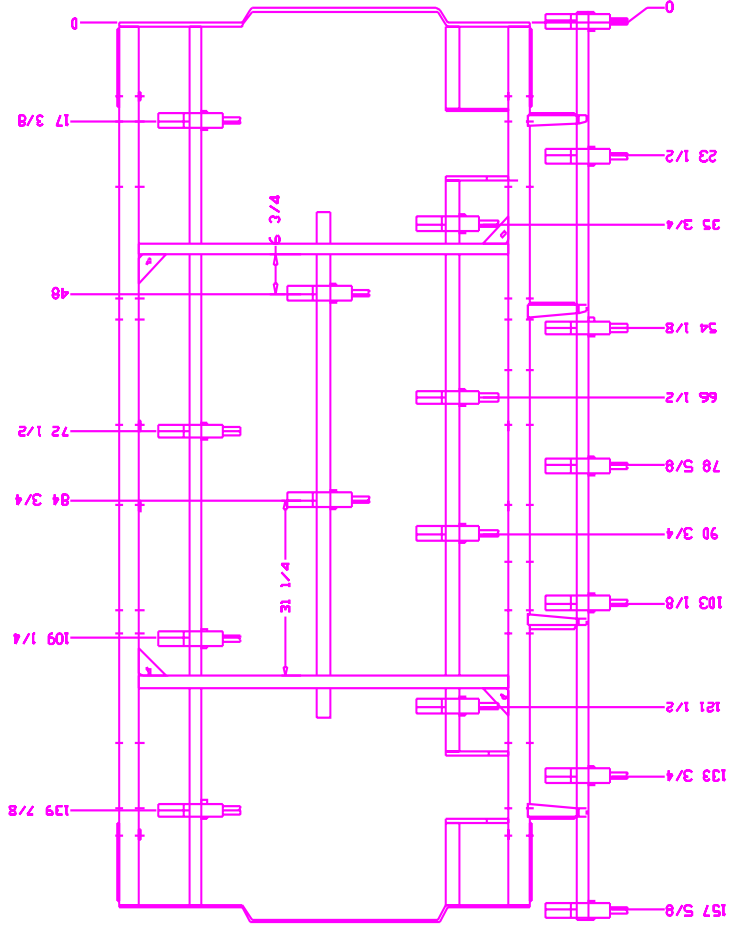
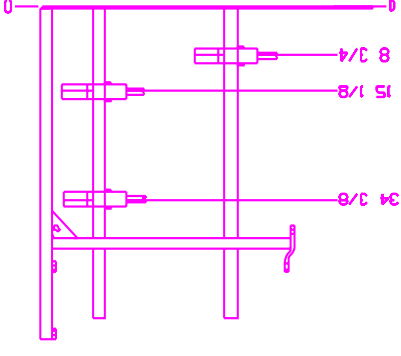
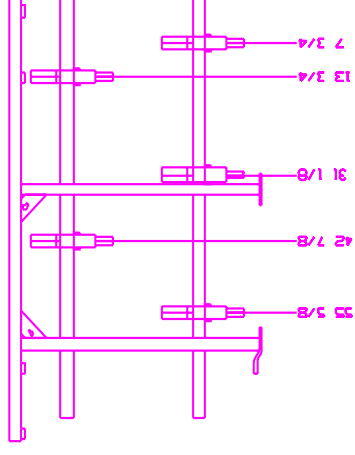
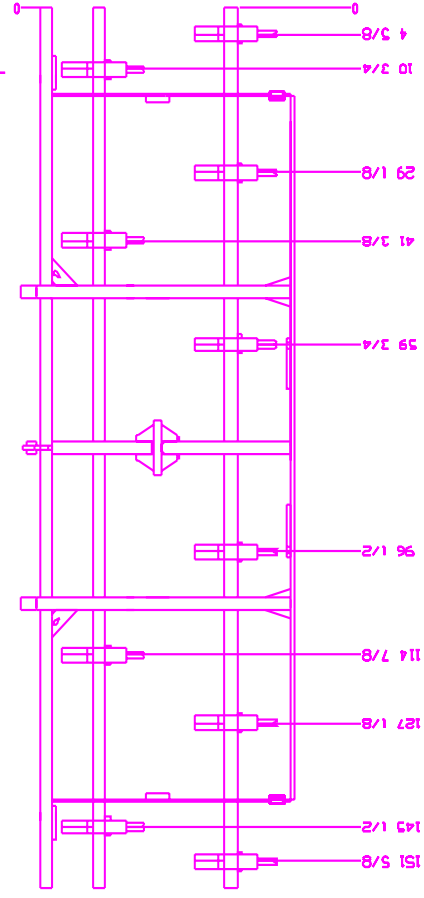


2800 Double-Fold 40' (12M)







4" Tine Spacing Layout

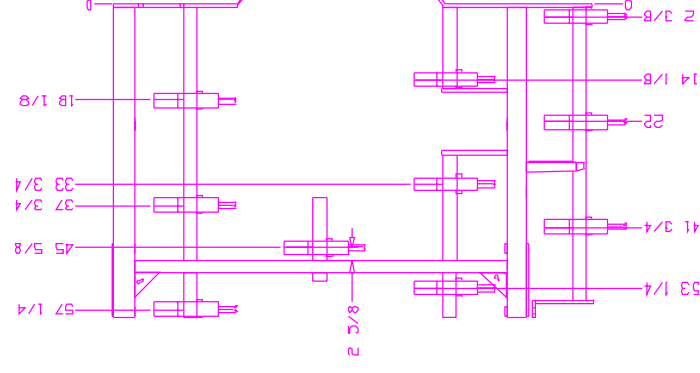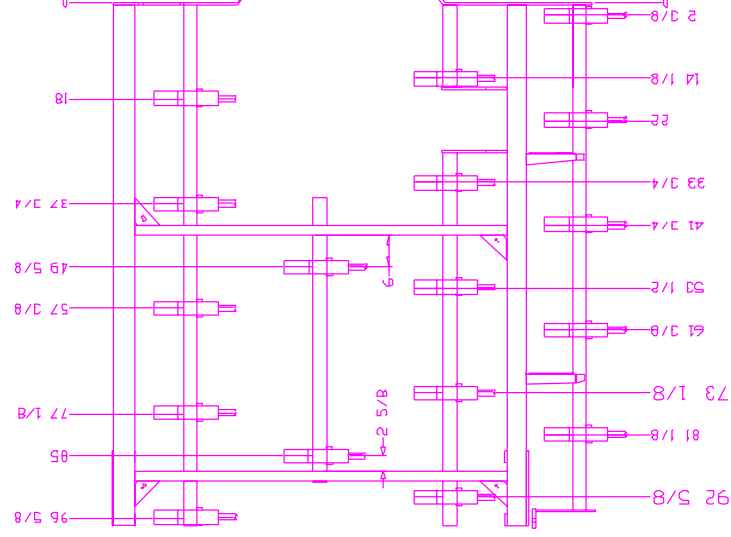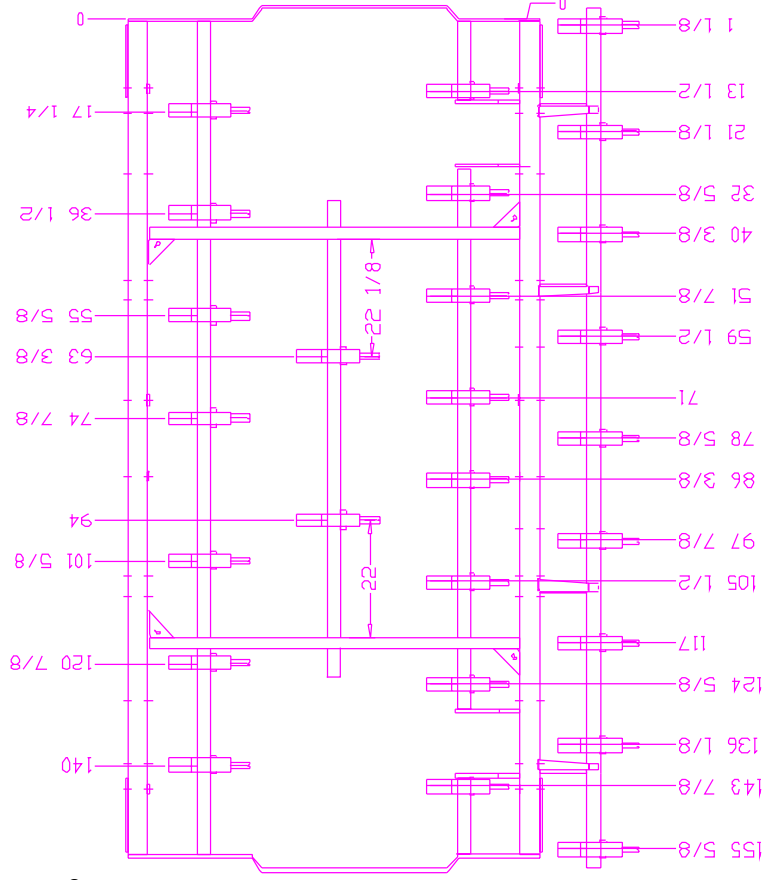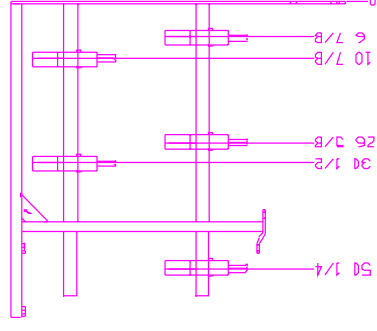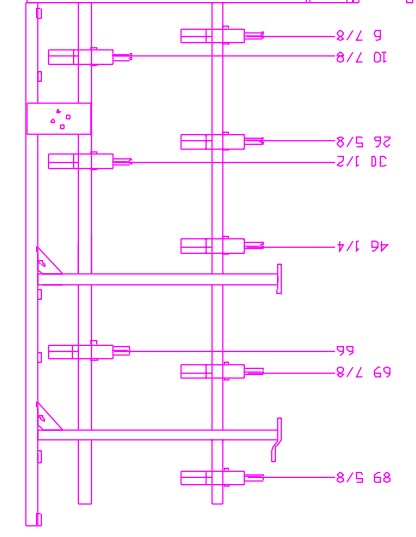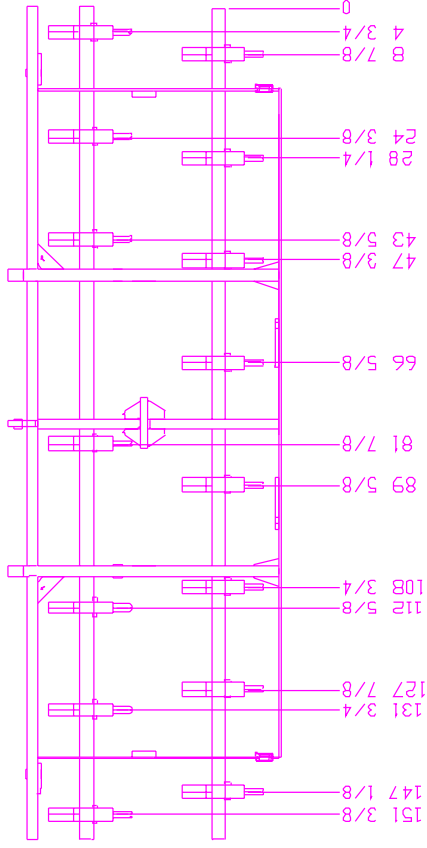







2800 Double-Fold 40' (12M) 6" Tine Spacing Layout

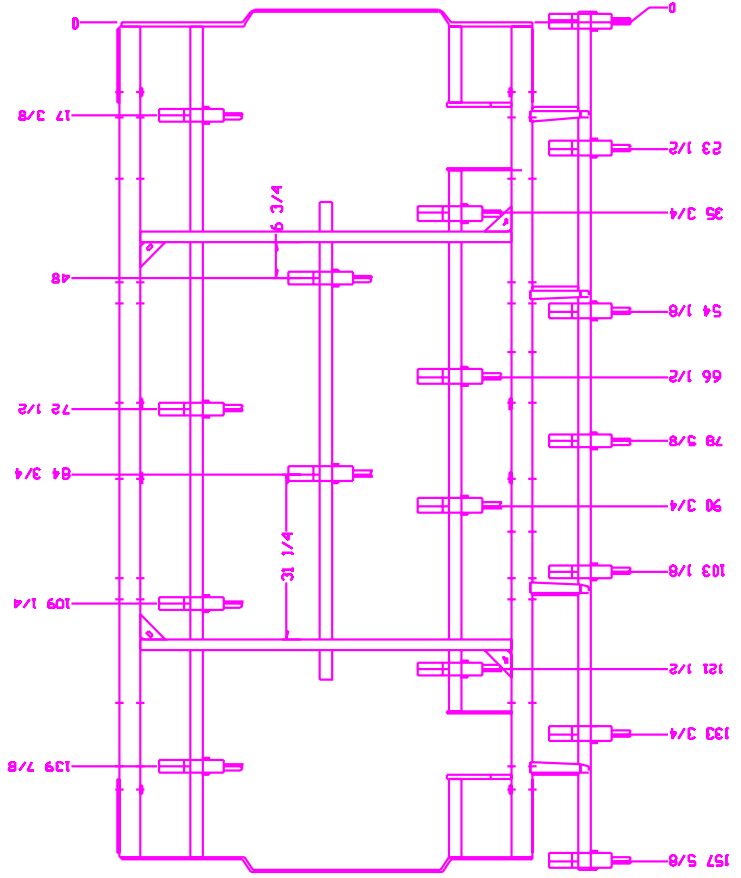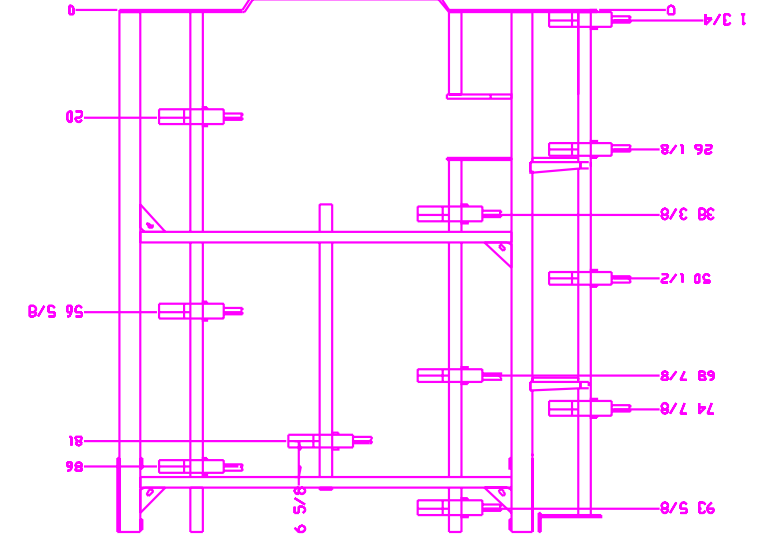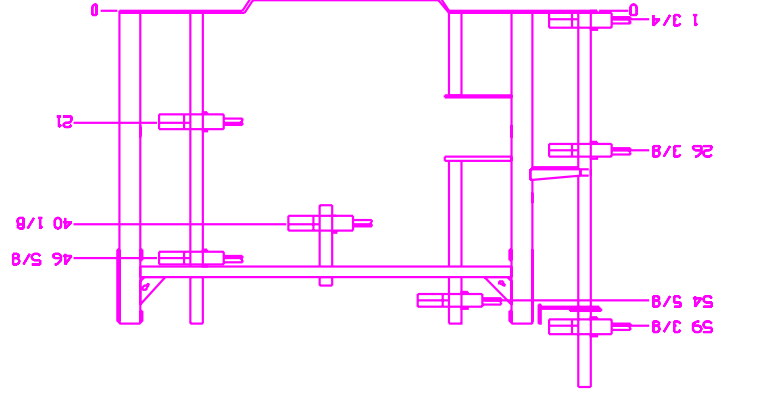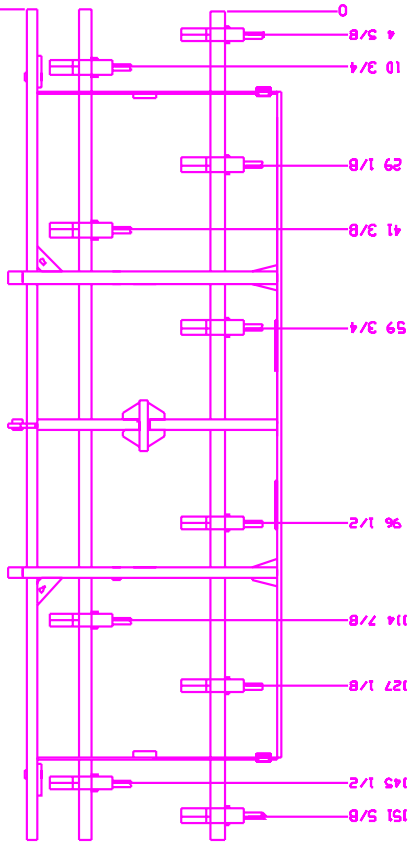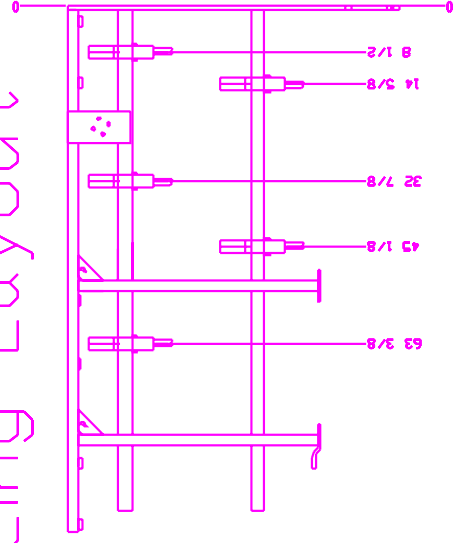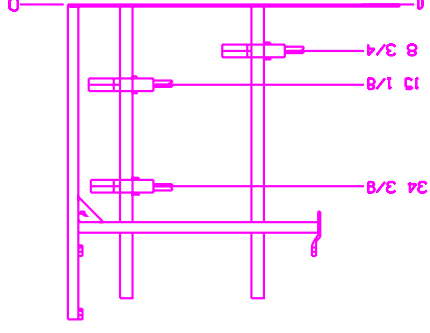







2800 Double-Fold 43' (13M) 4" Tine Spacing Layout

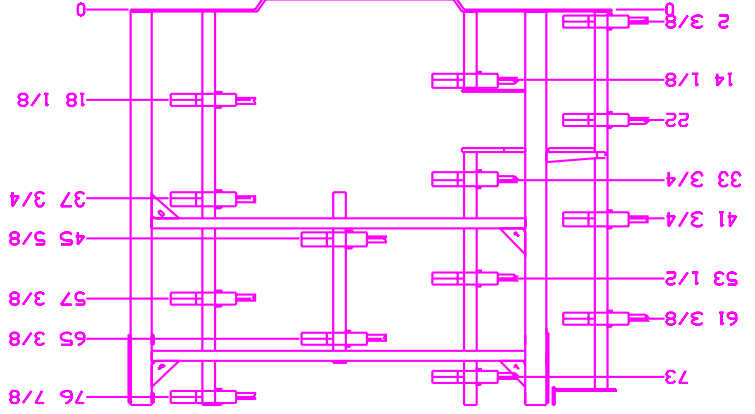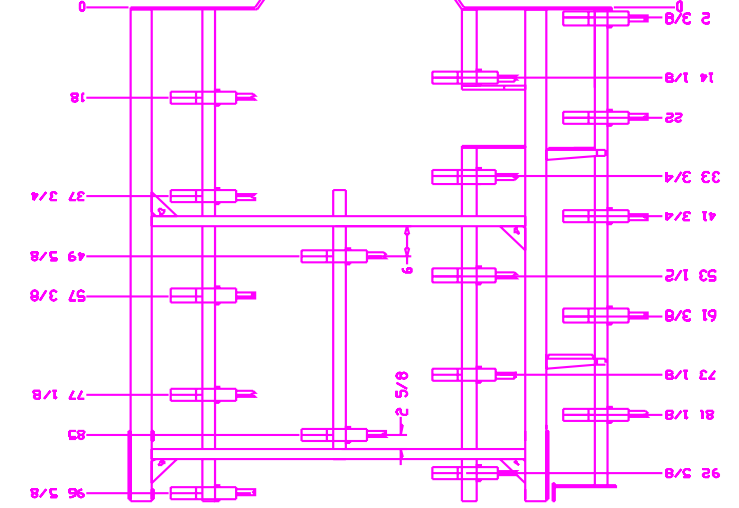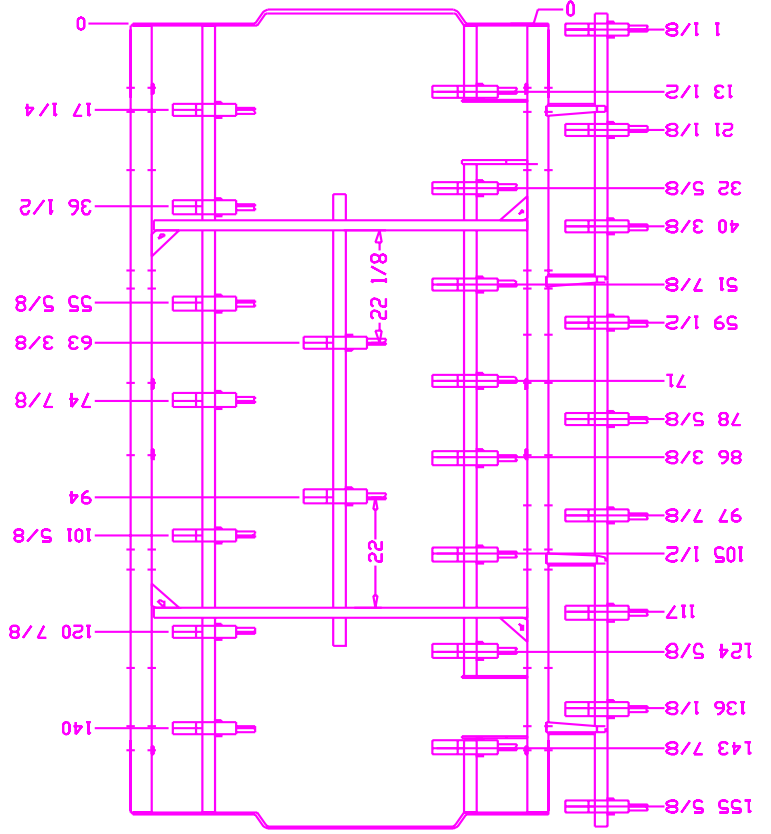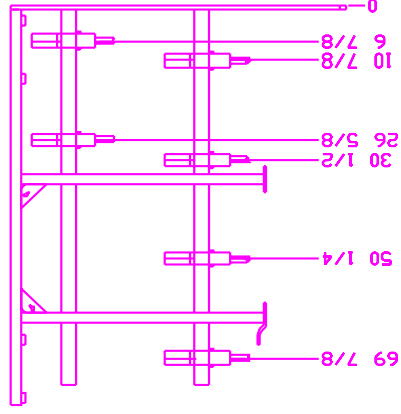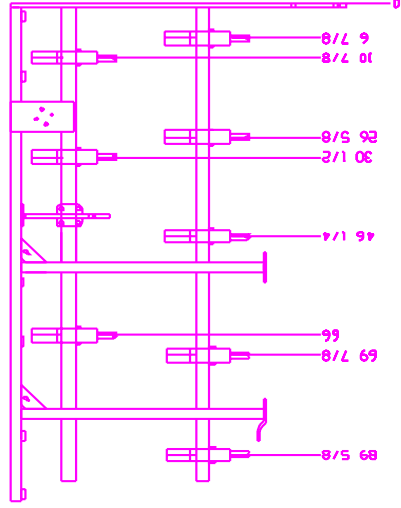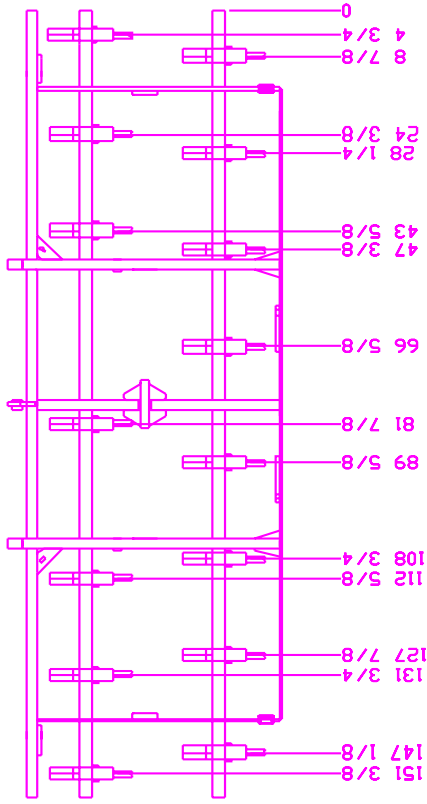







2800 Double-Fold 43' (13M) 6" Tine Spacing Layout

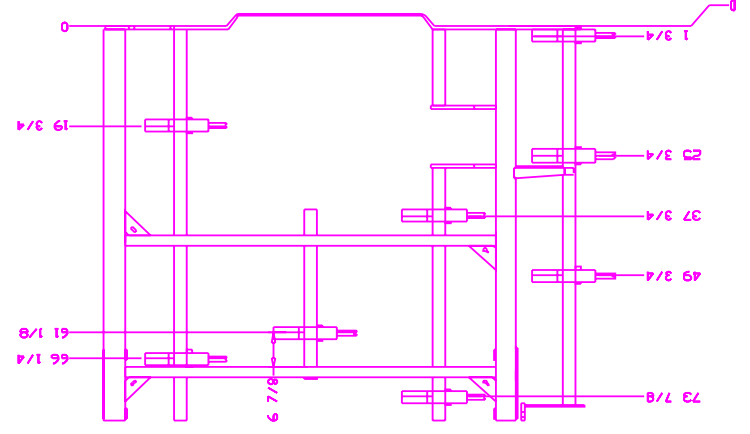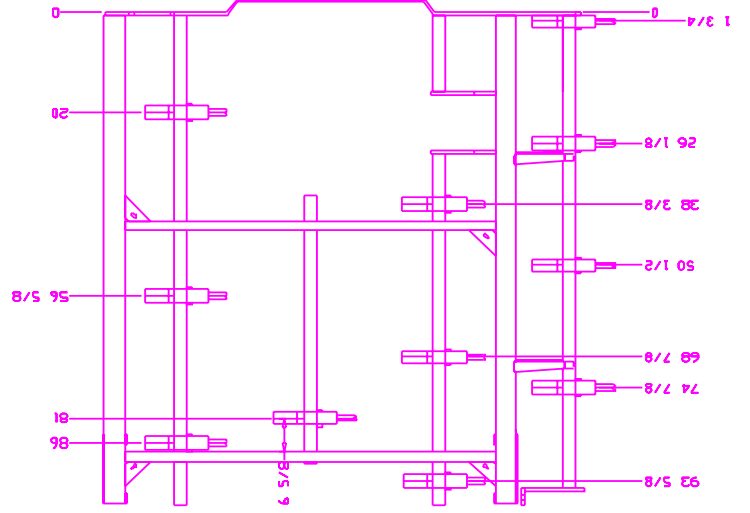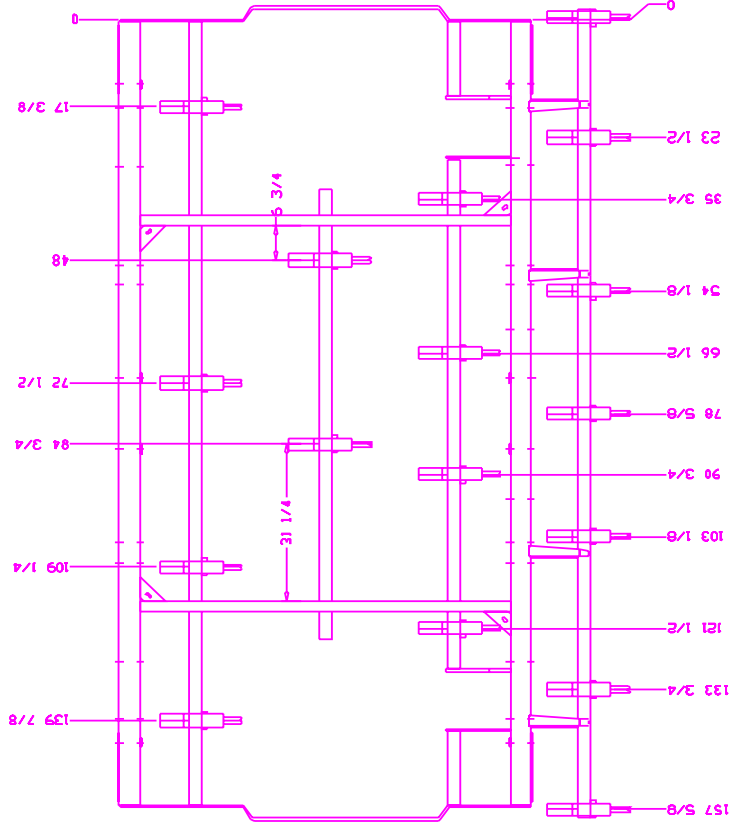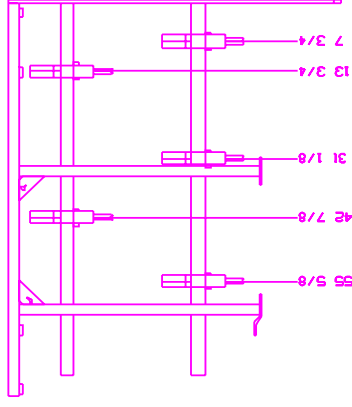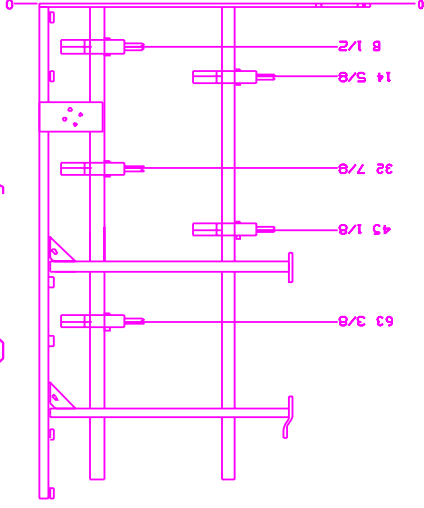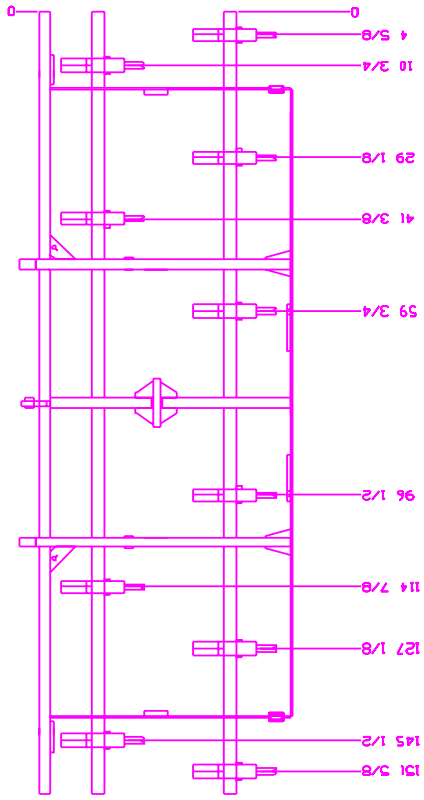







2800 Double-Fold 46' (14M) 4" Tine Spacing Layout

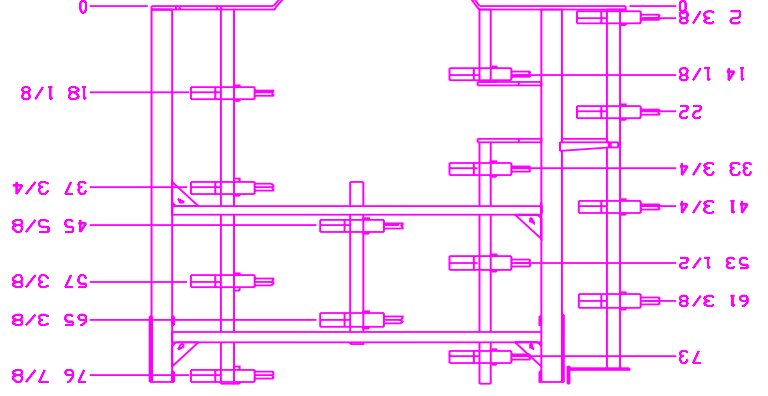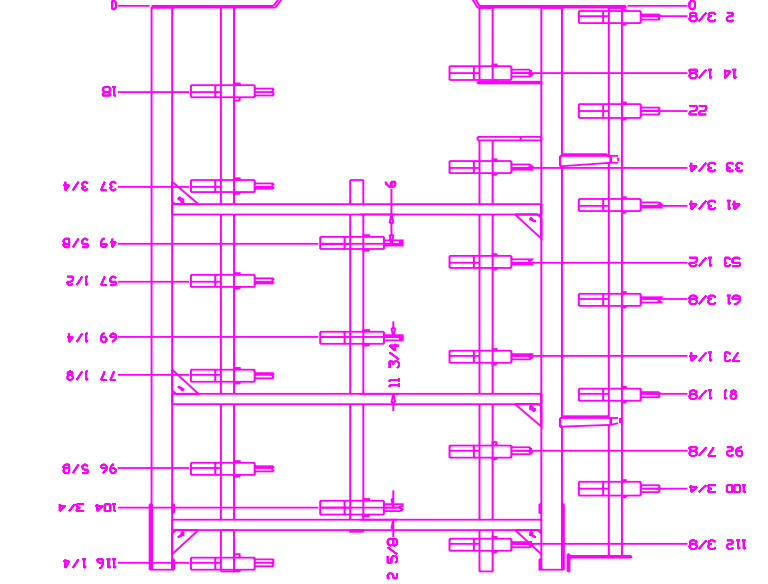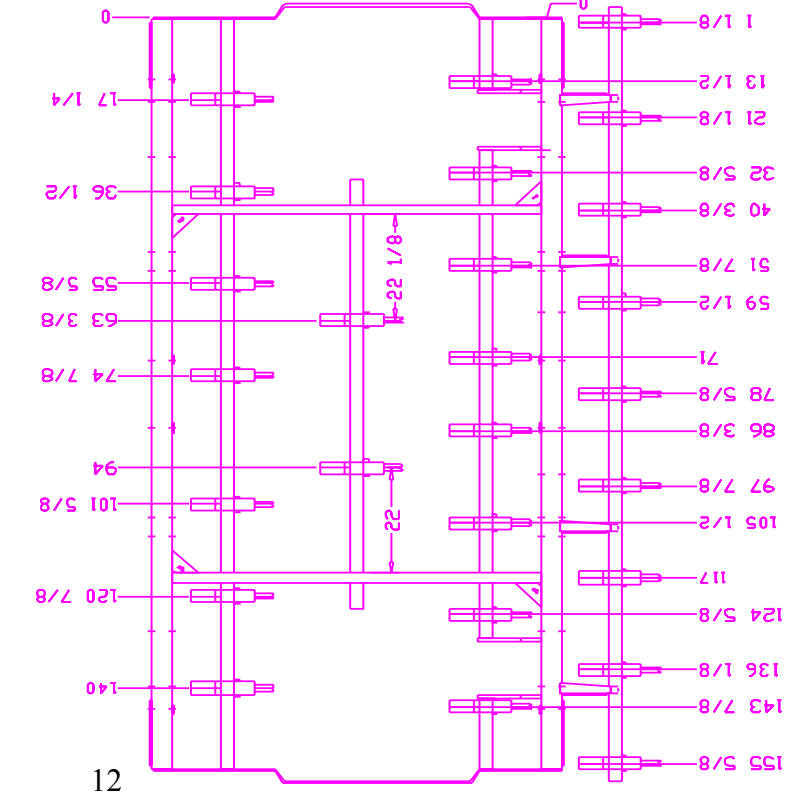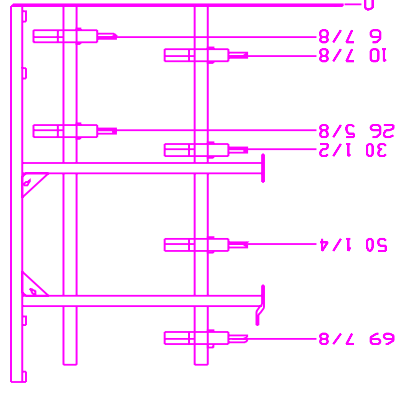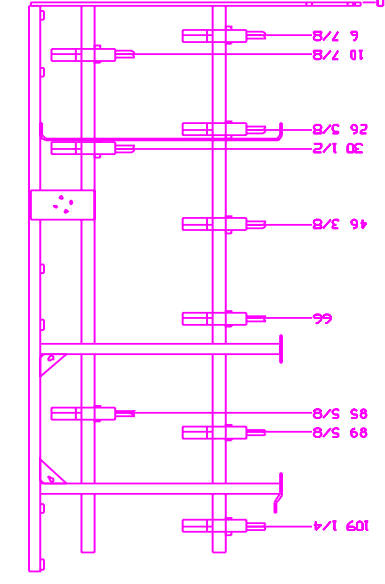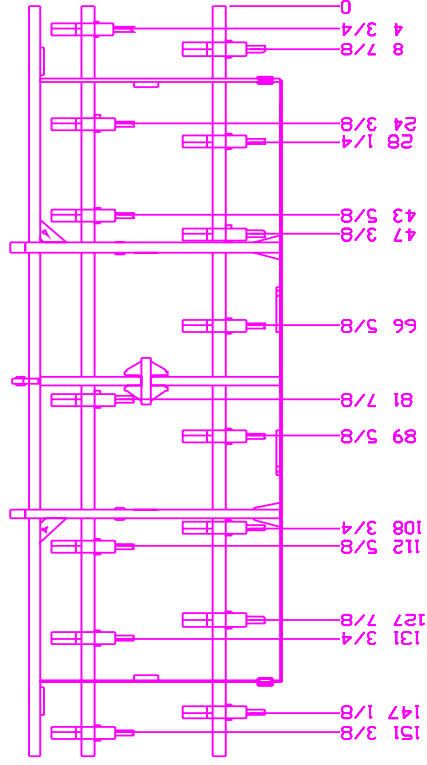







2800 Double-Fold 46' (14M) 6" Tine Spacing Layout

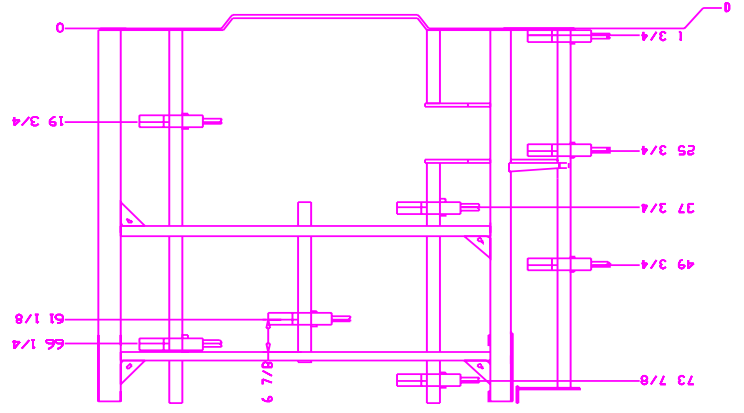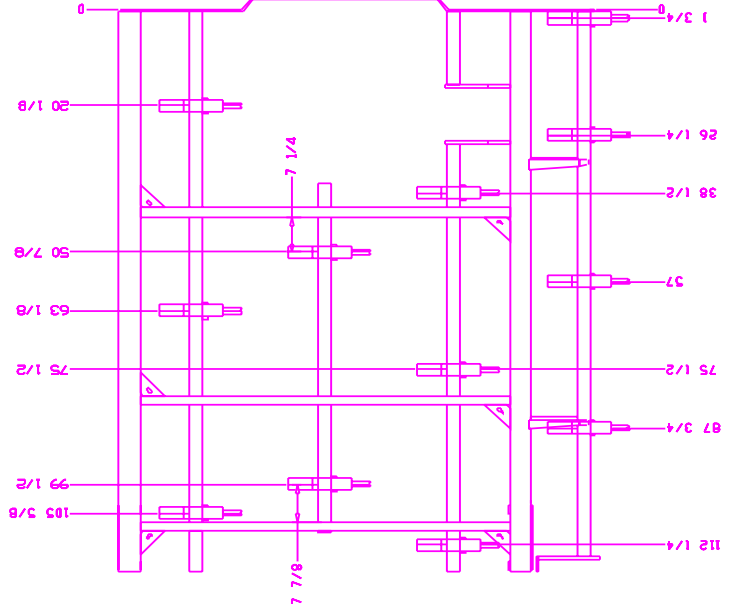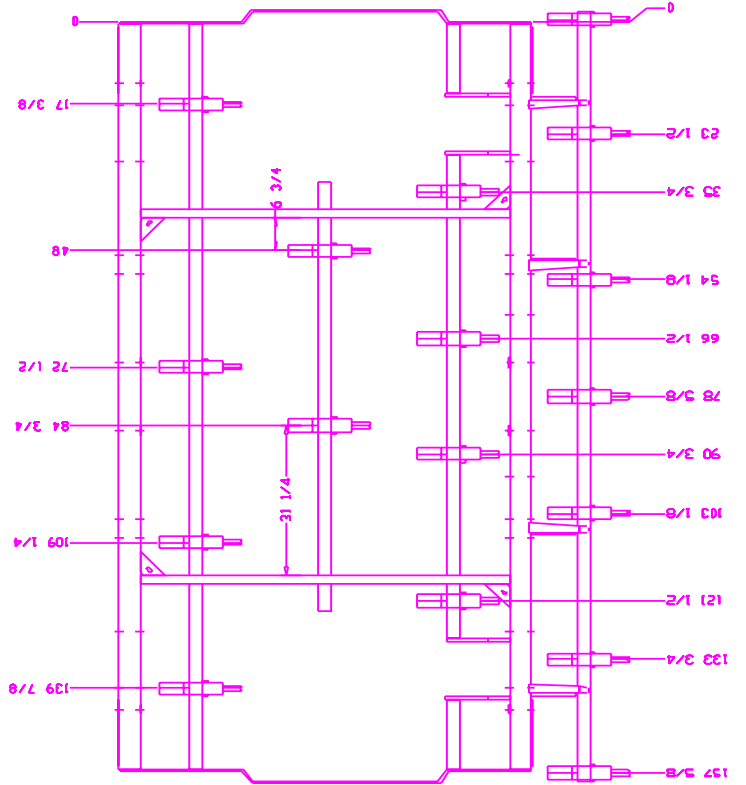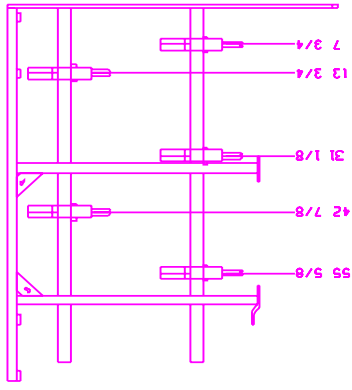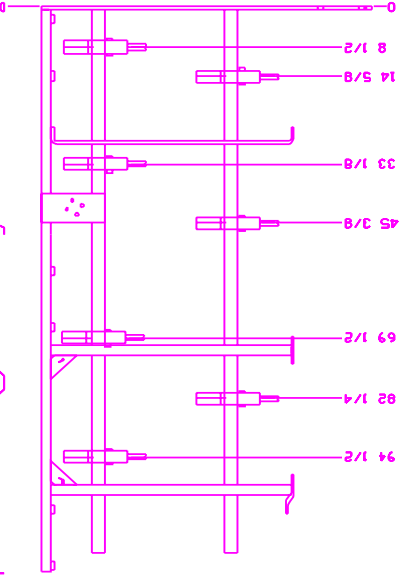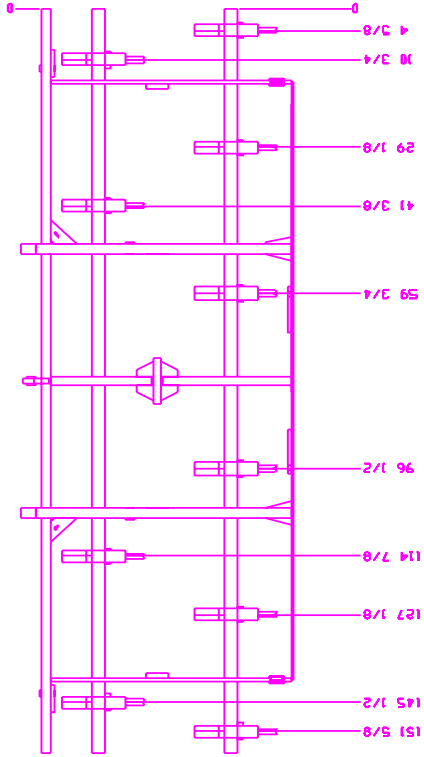

2800 Double-Fold 50' (15M) 4" Tine Spacing Layout

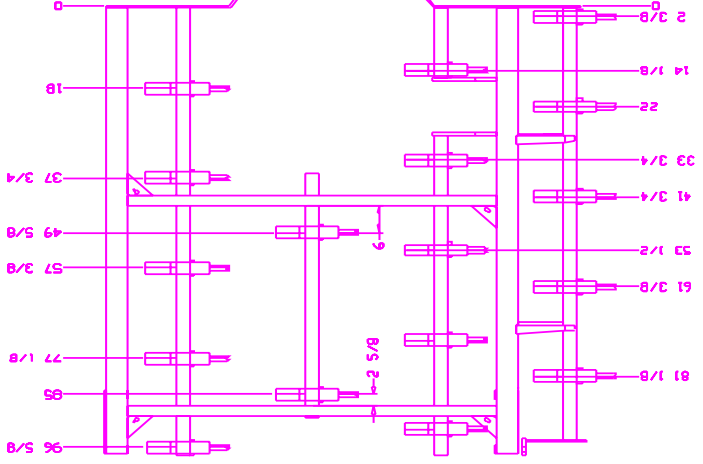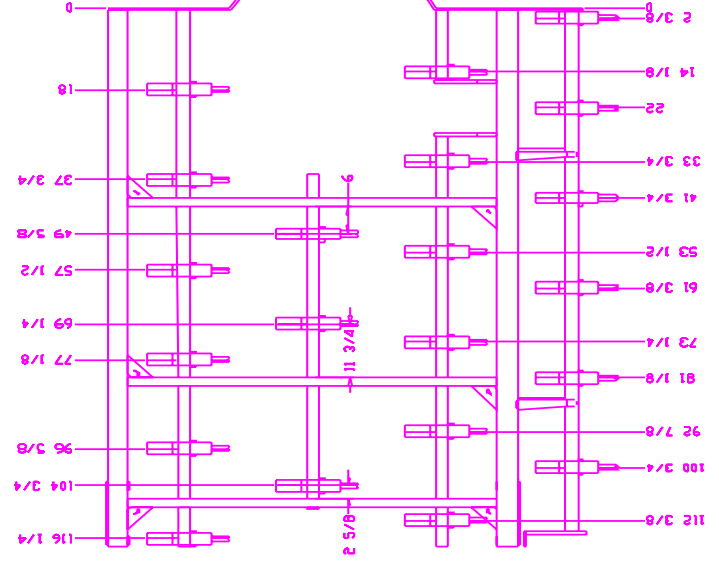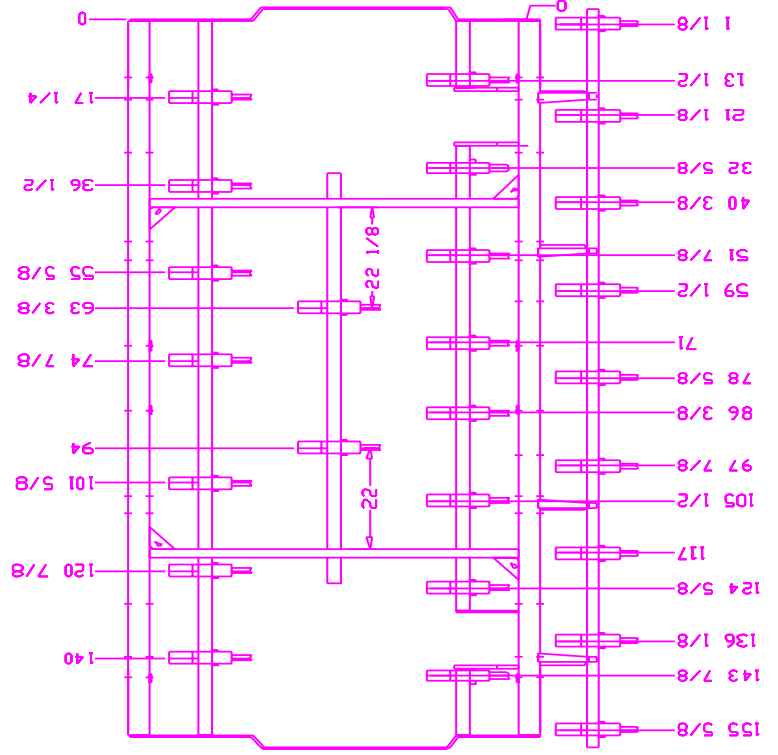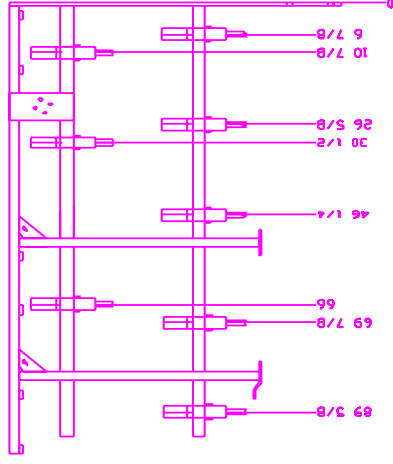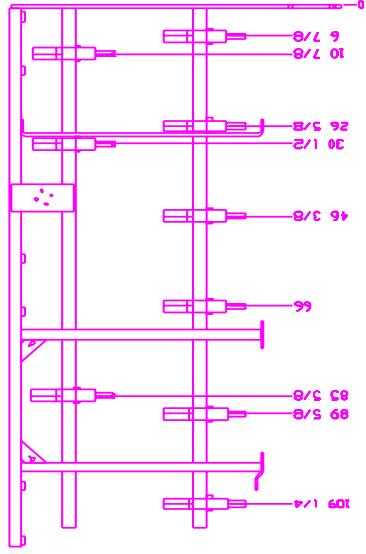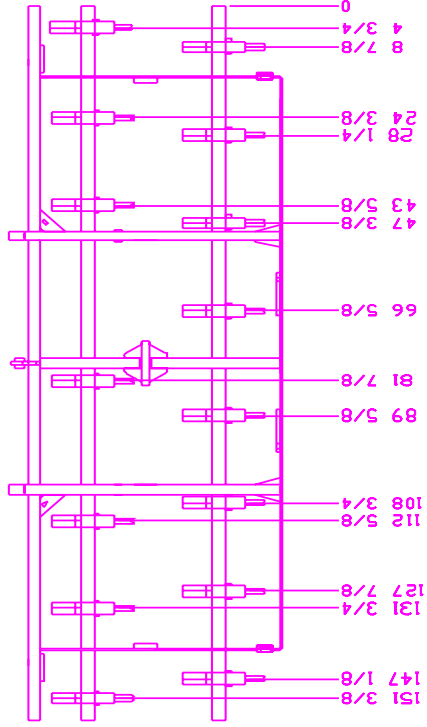

2800 Double-Fold 50' (15M) 6" Tine Spacing Layout

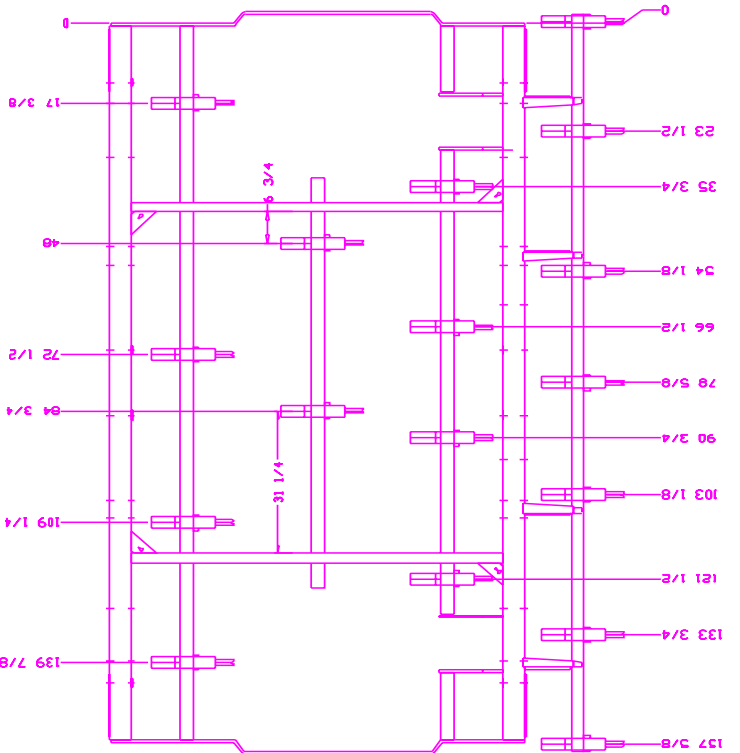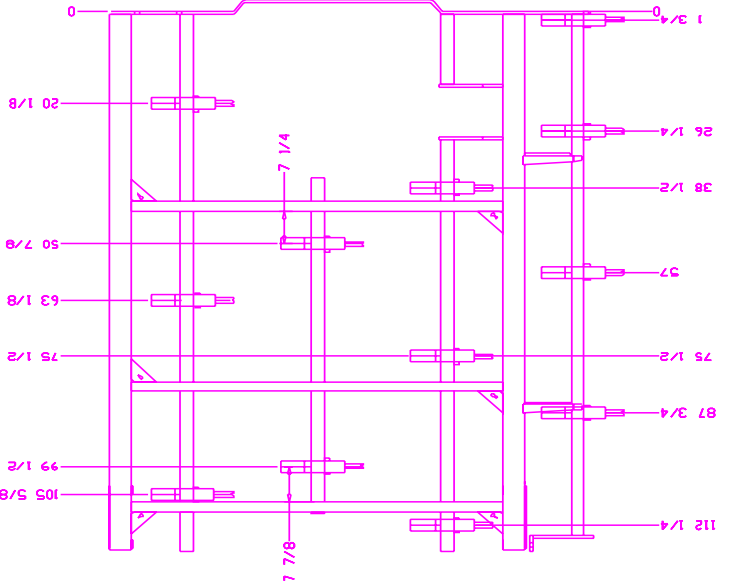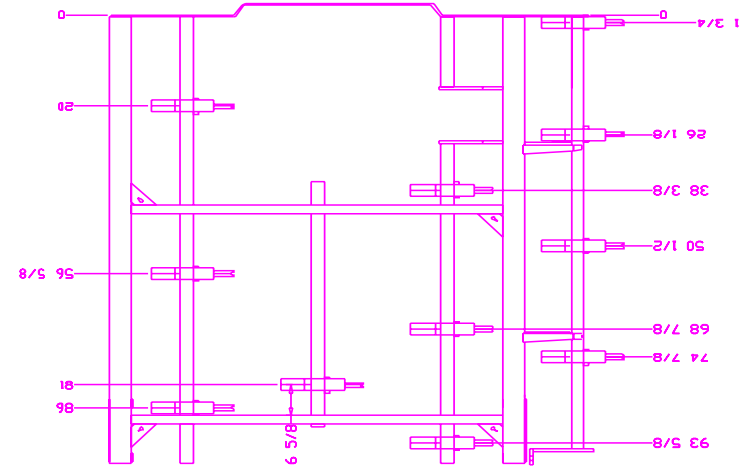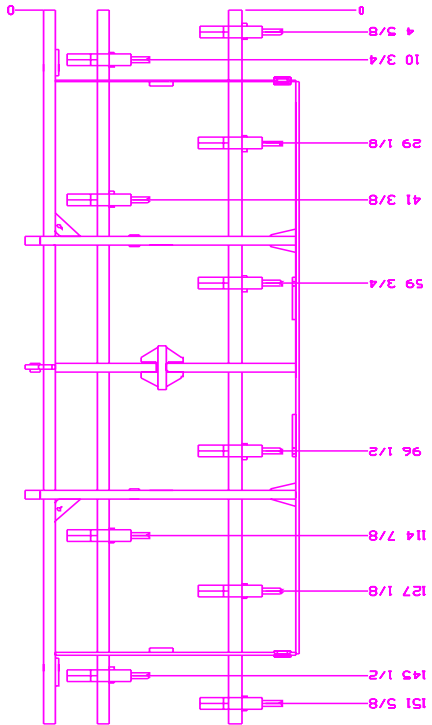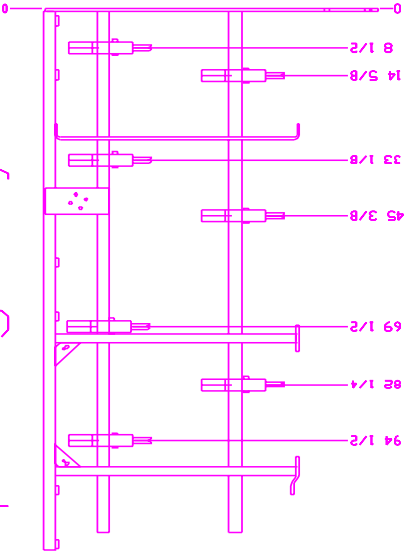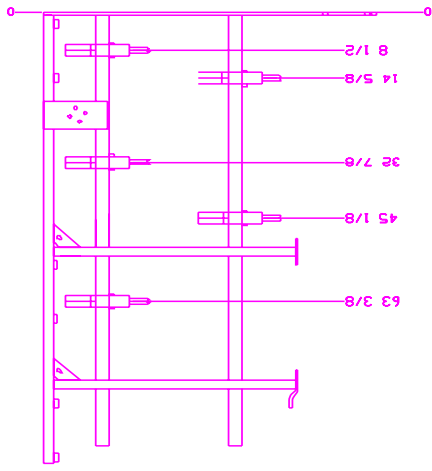

This image shows a blank sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.