



2900 Double-Fold

Tine Pattern Layouts

Kongsilde
2900




Index

General Notes:	3
33' Double-Fold 4''Tine Spacing:	4
33' Double-Fold 6''Tine Spacing:	5
36' Double-Fold 4''Tine Spacing:	6
36' Double-Fold 6''Tine Spacing:	7
40' Double-Fold 4''Tine Spacing:	8
40' Double-Fold 6''Tine Spacing:	9
43' Double-Fold 4''Tine Spacing:	10
43' Double-Fold 6''Tine Spacing:	11
46' Double-Fold 4''Tine Spacing:	12
46' Double-Fold 6''Tine Spacing:	13
50' Double-Fold 4''Tine Spacing:	14
50' Double-Fold 6''Tine Spacing:	15

General Notes:





This cultivator has three hinges on each wing. Pin the front hinge first, followed by the middle and then the rear. Leave all of the hinge bolts loose until all 3 hinge pins have been installed.

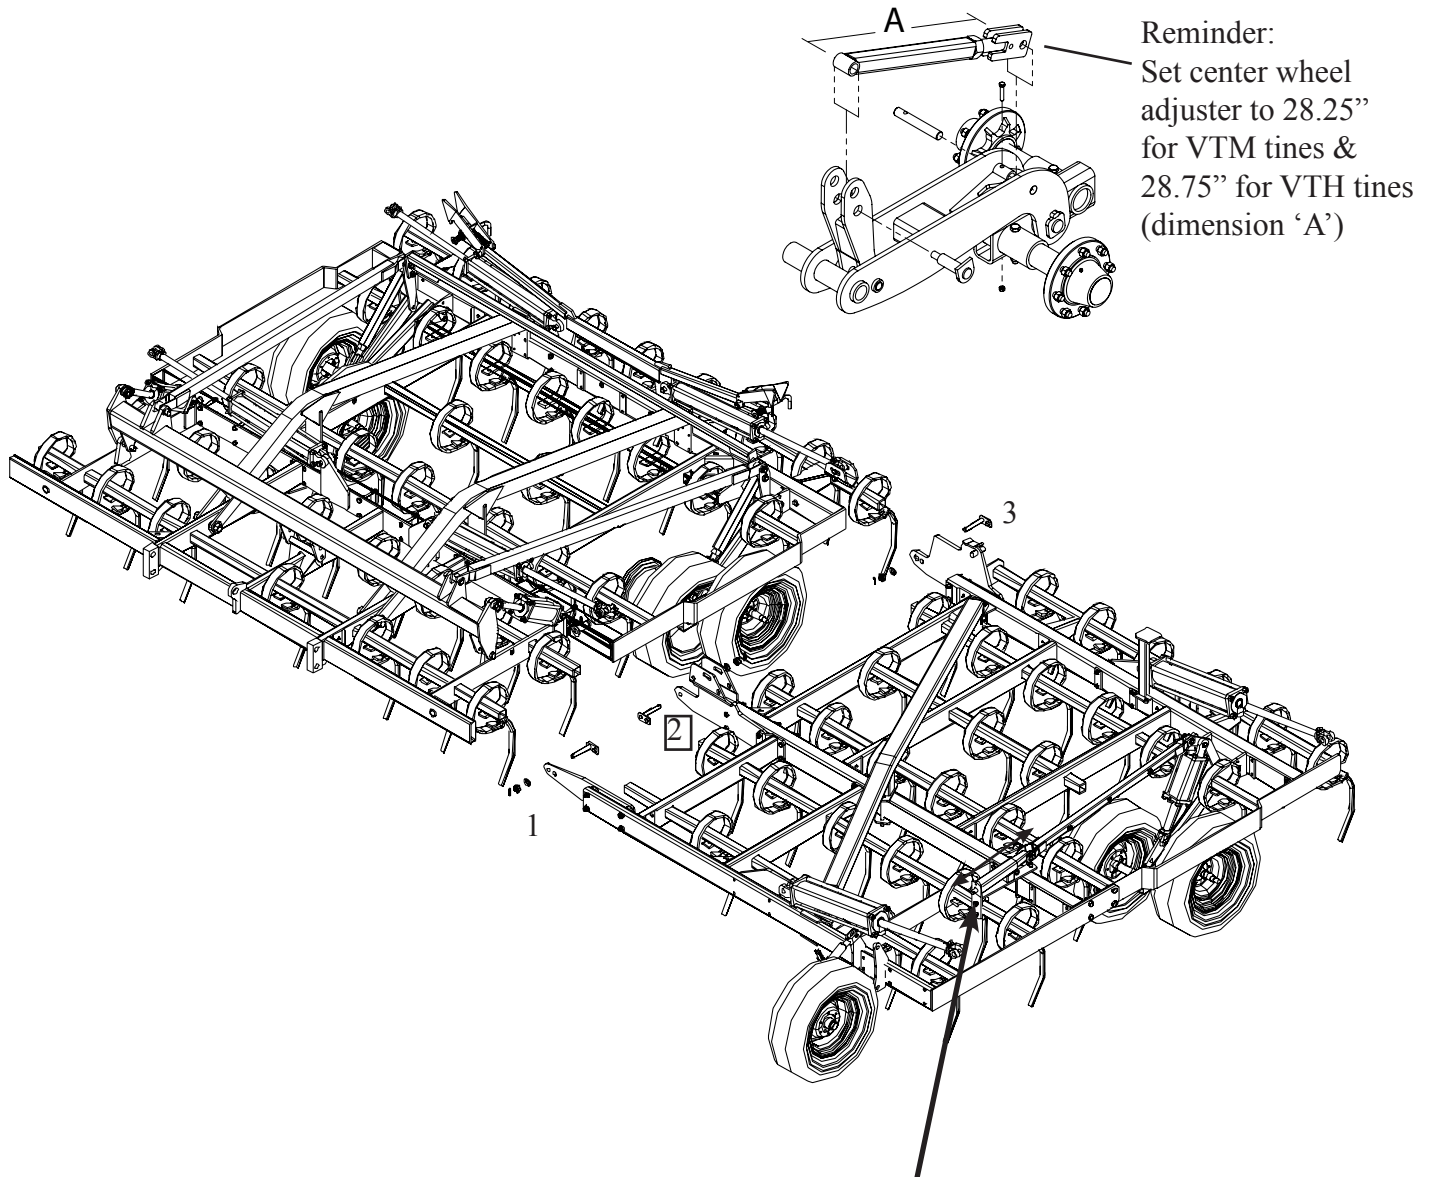







Make sure the wing adjustment slider is cranked out to 7 - 8" *before* raising the machine with the cylinder. If not, a tine could hook itself over the wheel axle, requiring you to remove the tine to unhook it.

This is due to the fact that the Double-Fold has high lift when turning in the field.







2900 Double-Fold 33' (10M) 4" Tine Spacing Layout

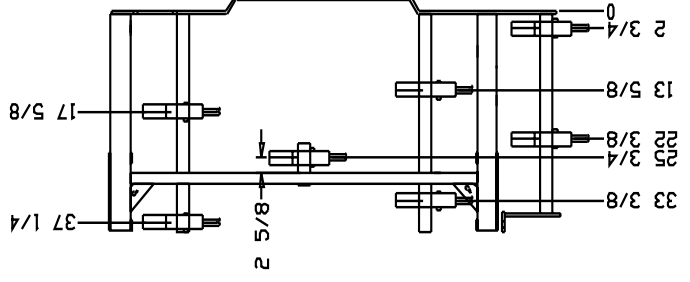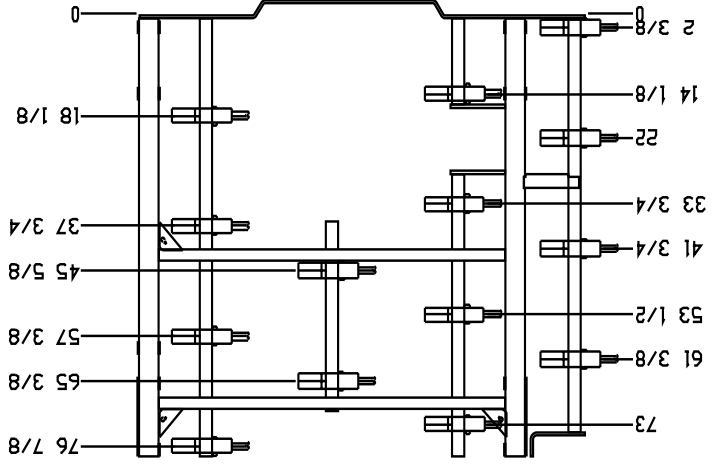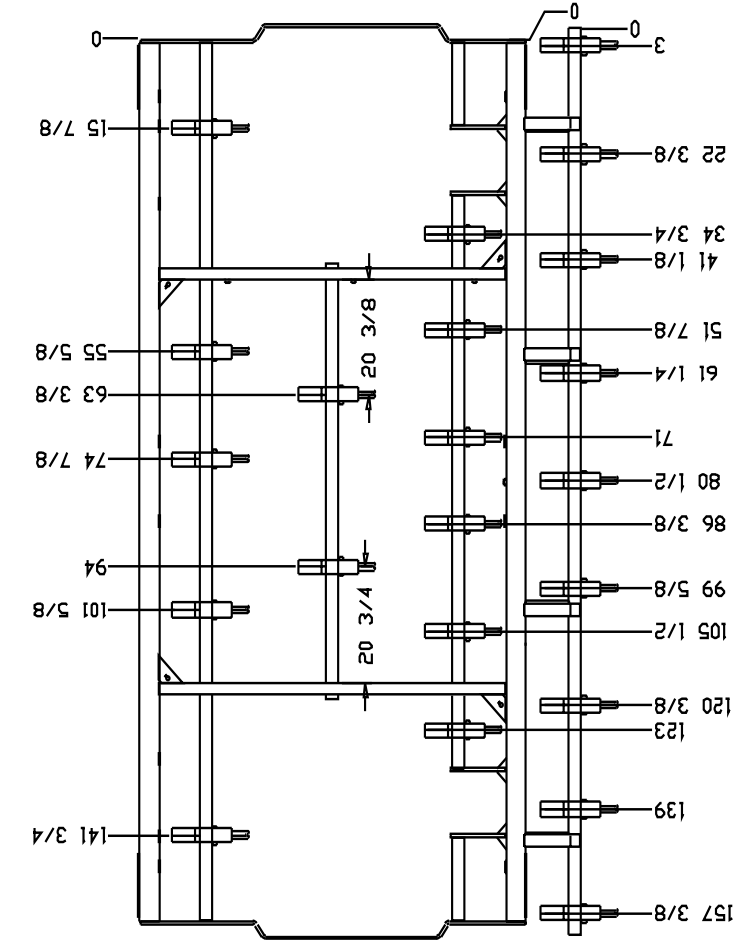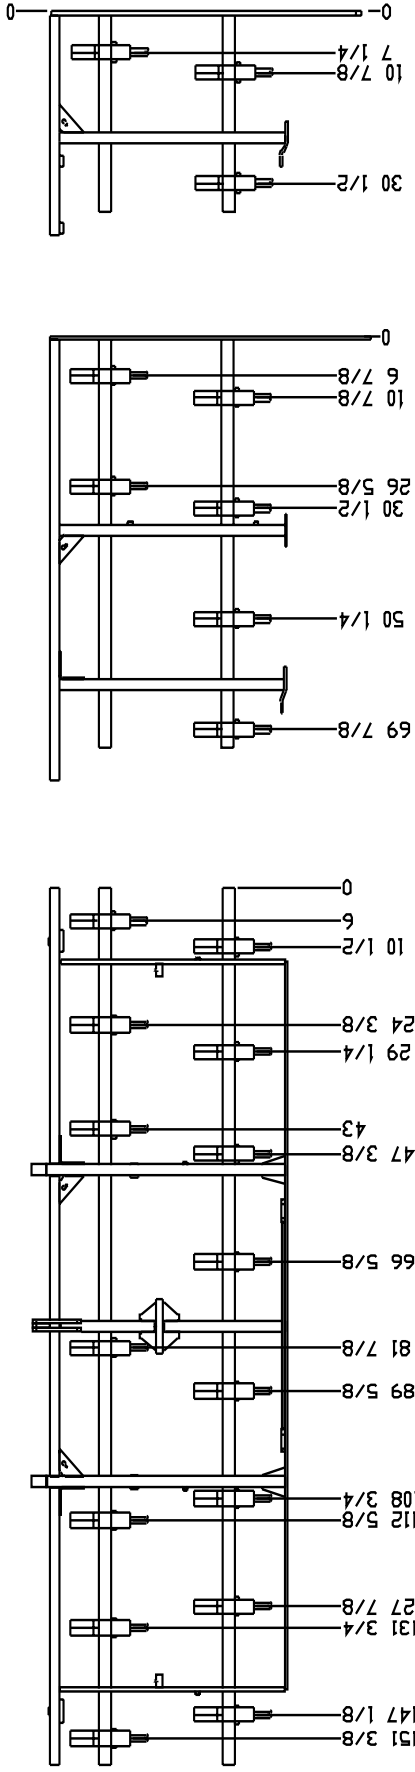







2900 Double-Fold 33' (10M) 6" Tine Spacing Layout

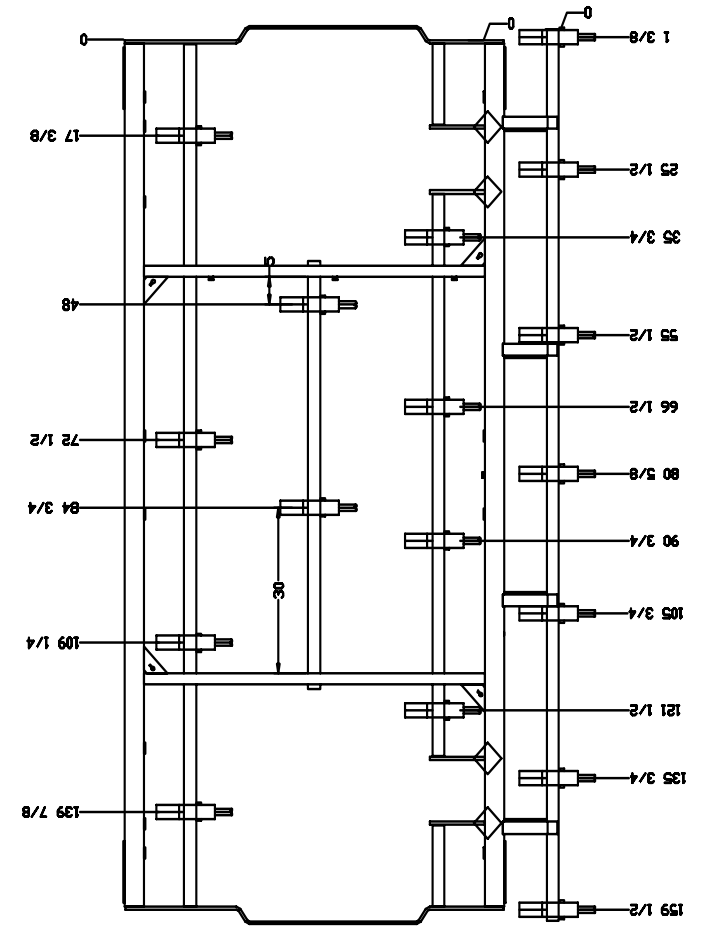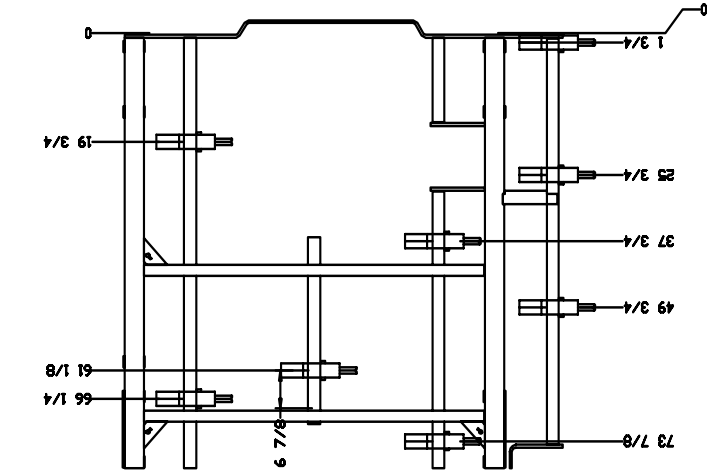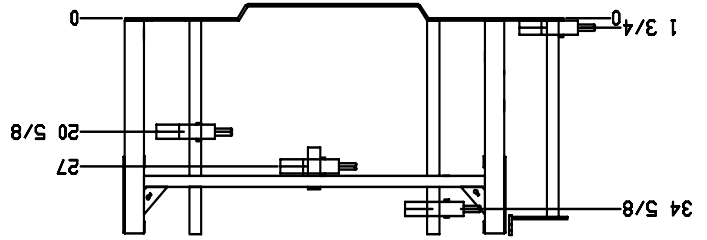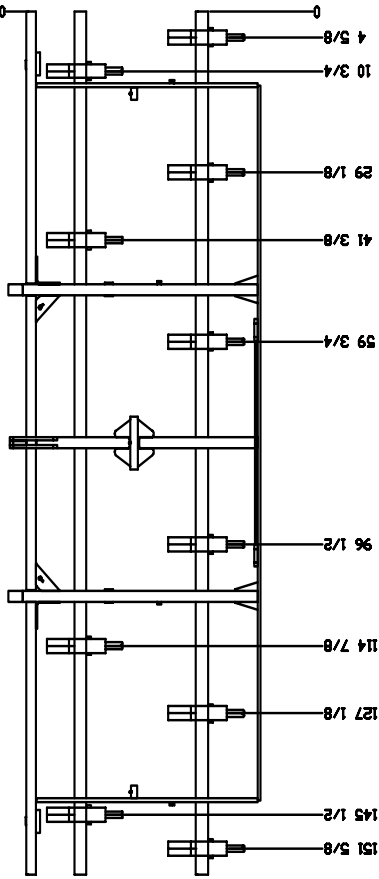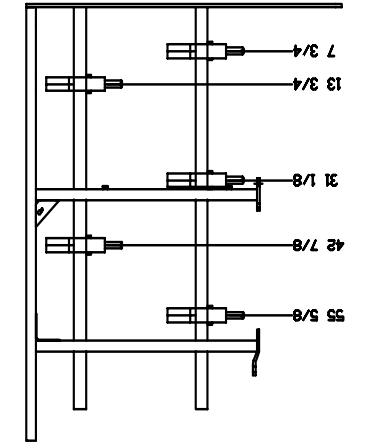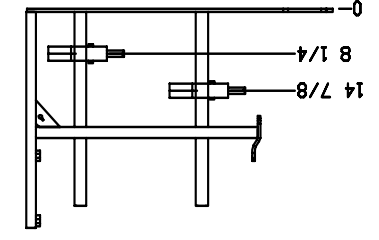







2900 Double-Fold 36' (11M) 4" Tine Spacing Layout

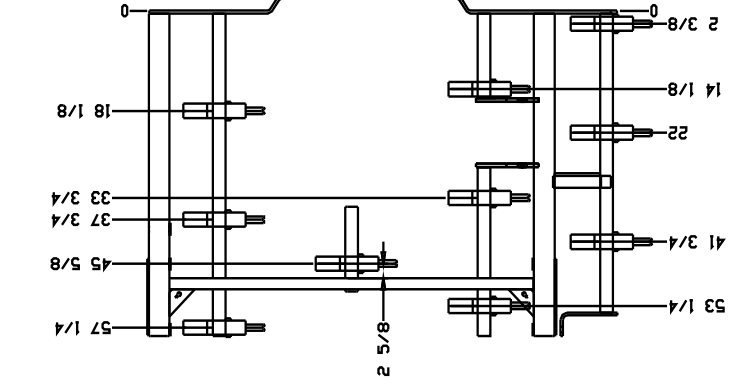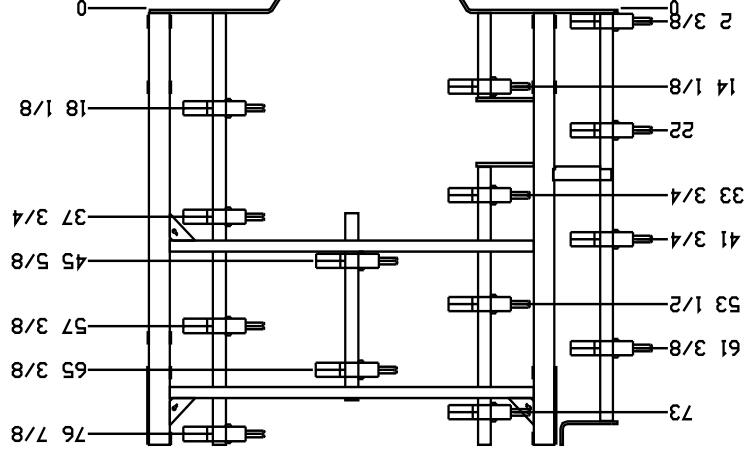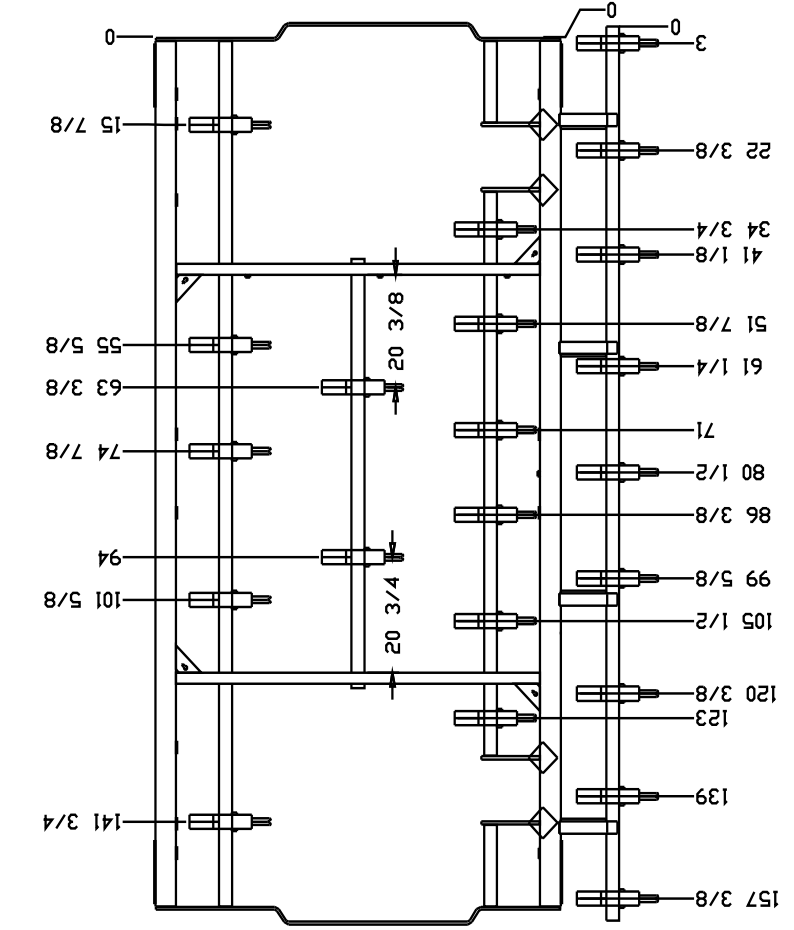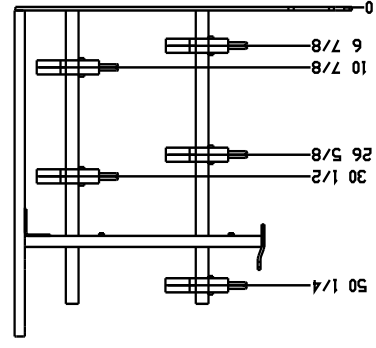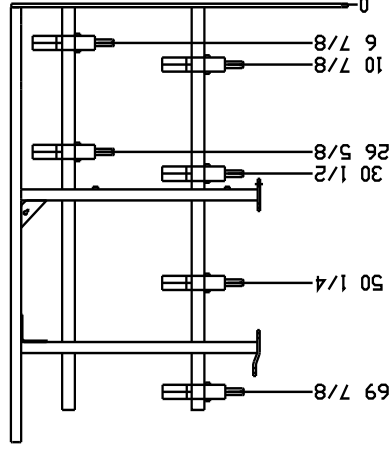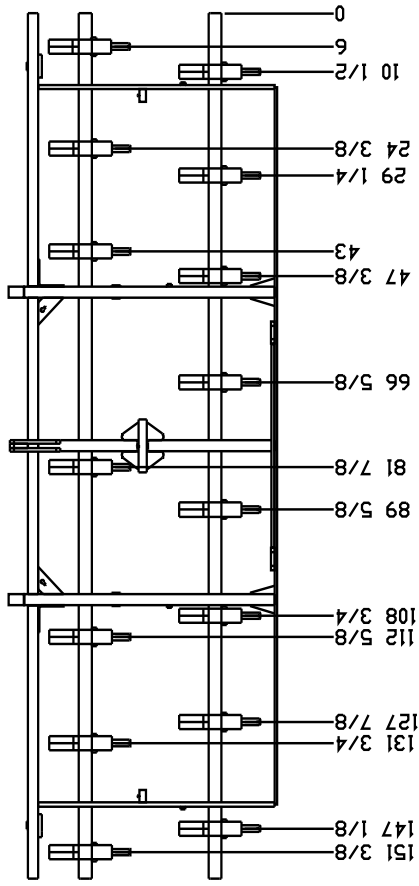







2900 Double-Fold 36' (11M) 6" Tine Spacing Layout

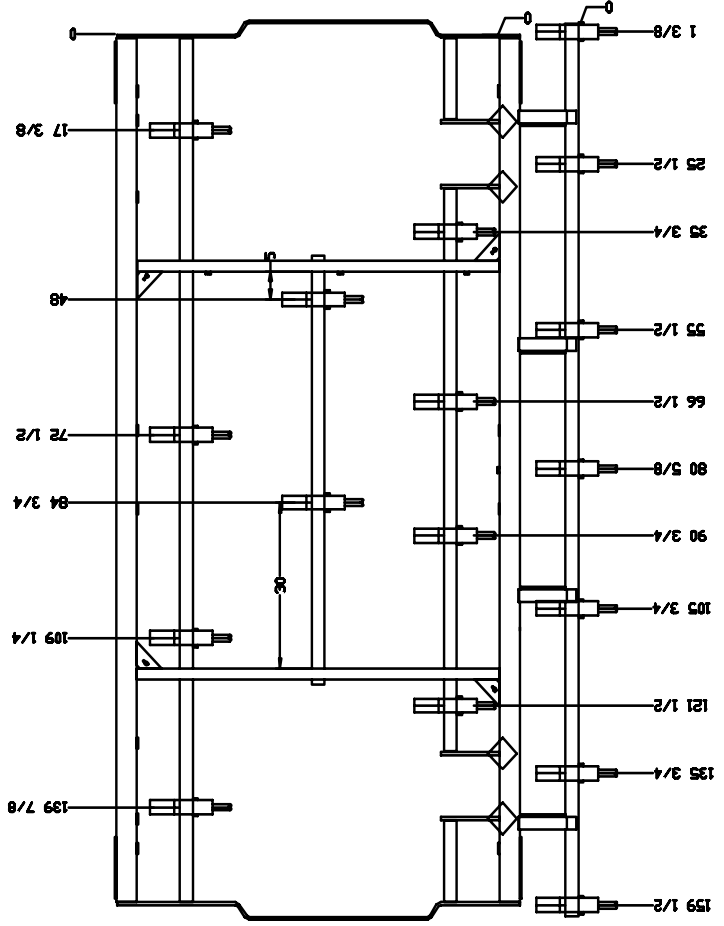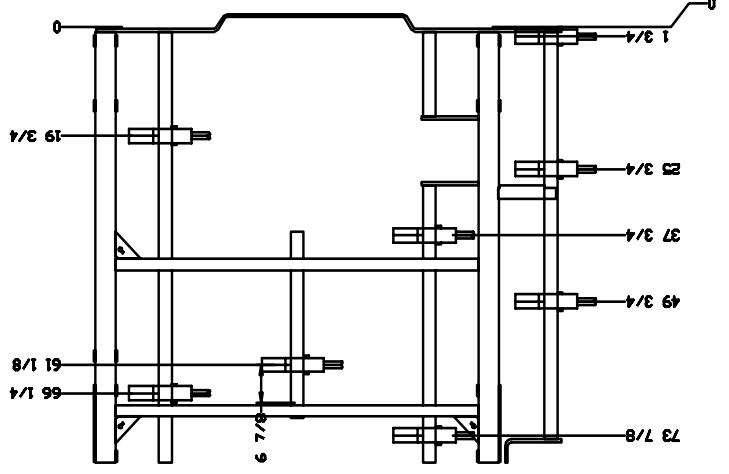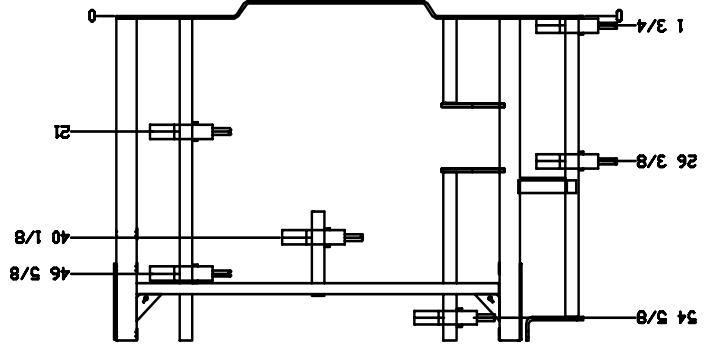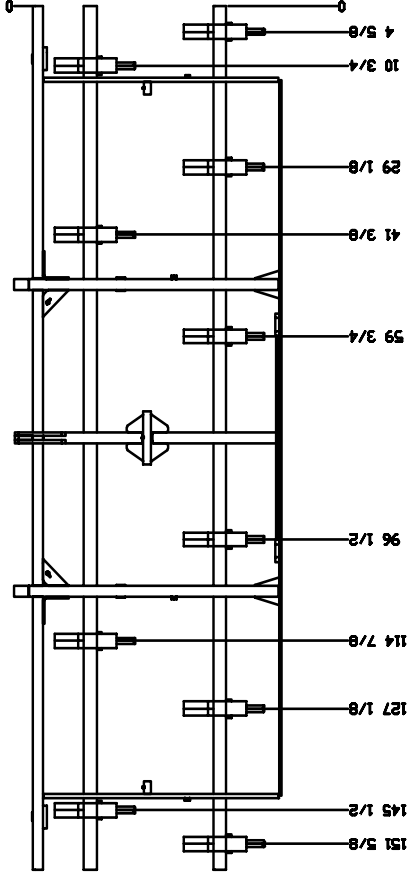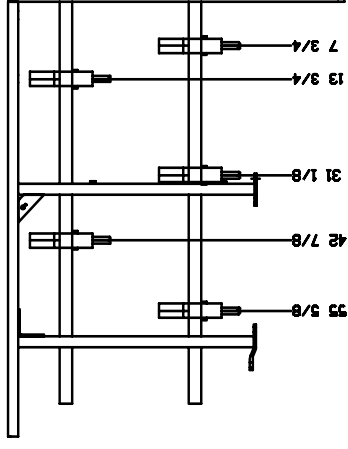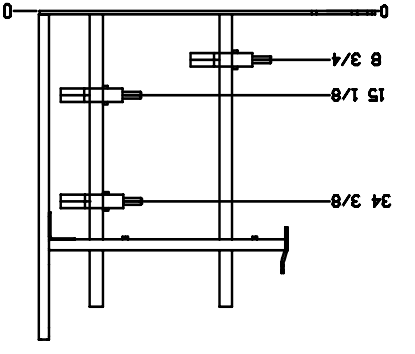







2900 Double-Fold 40' (12M) 4" Tine Spacing Layout

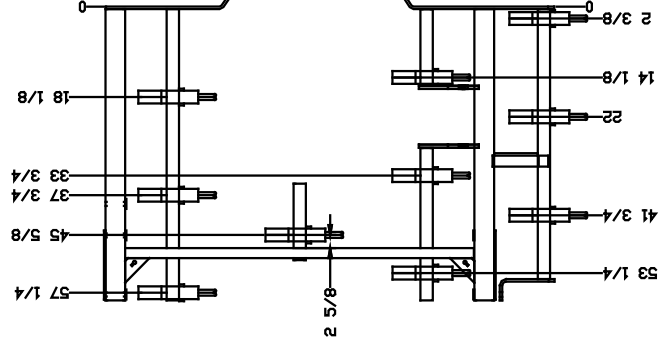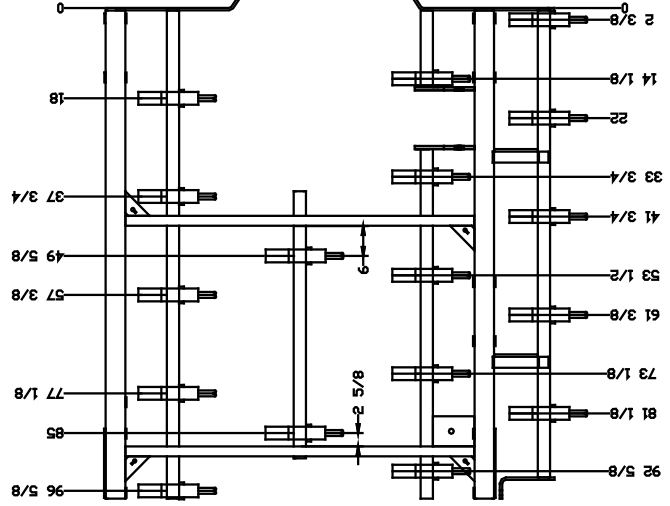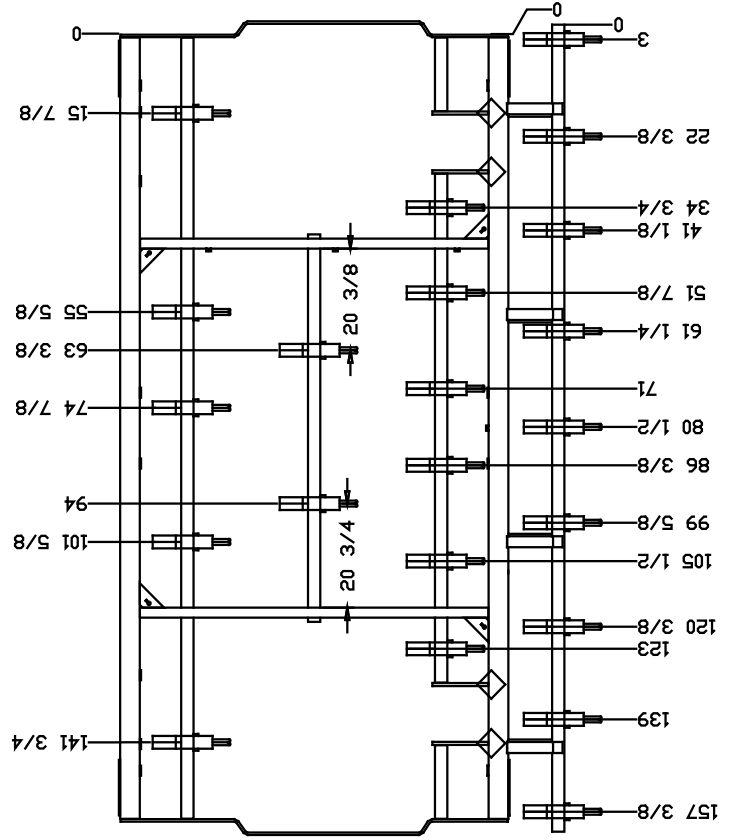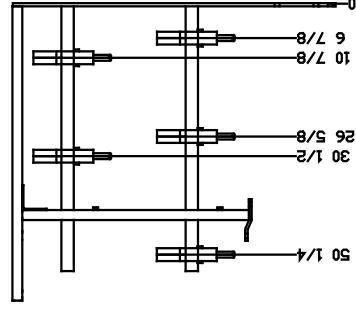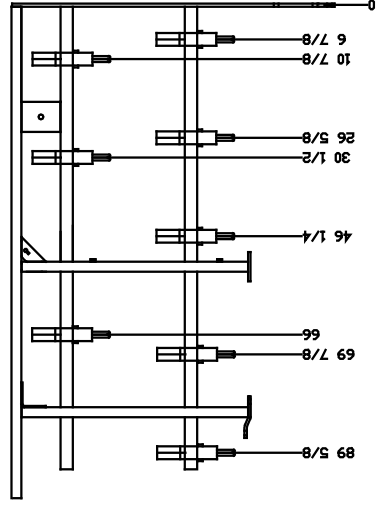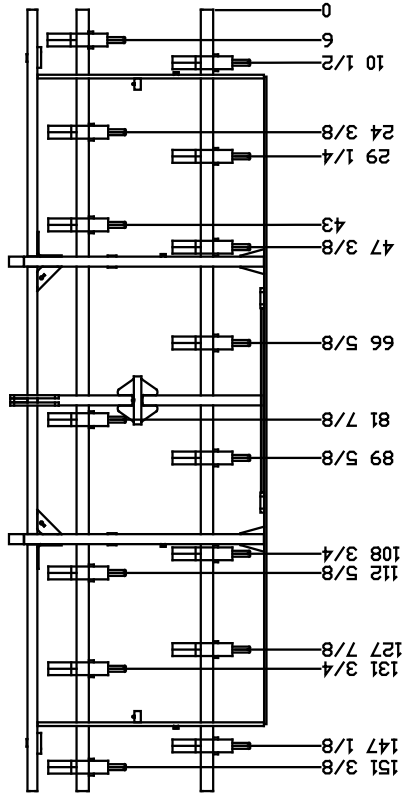







2900 Double-Fold 40' (12M) 6" Tine Spacing Layout

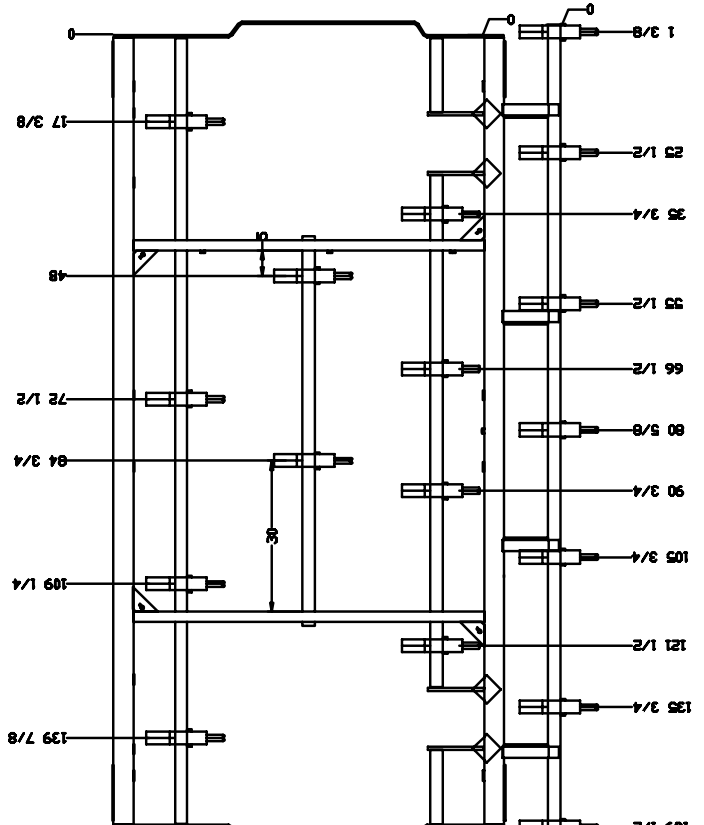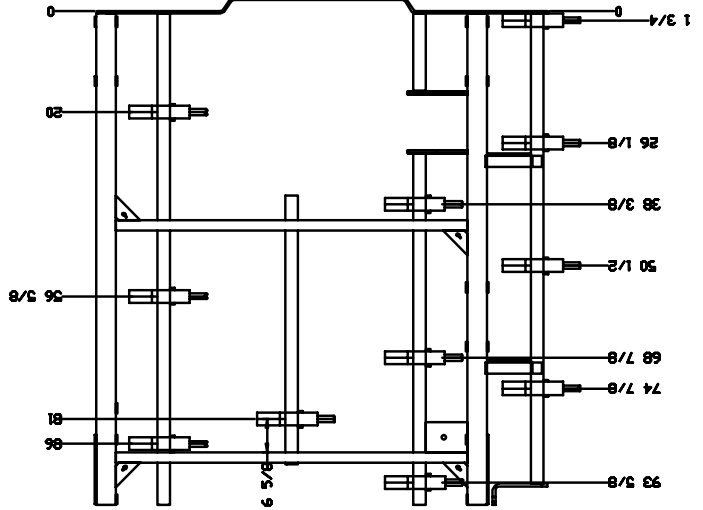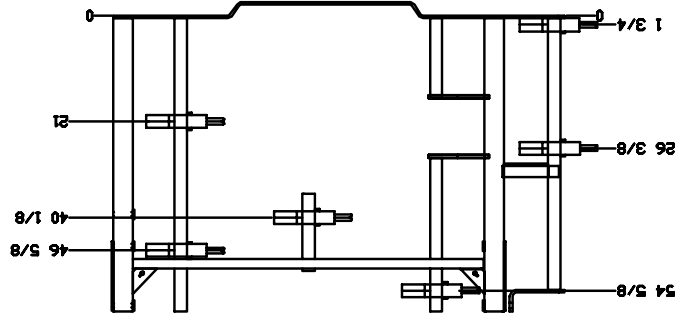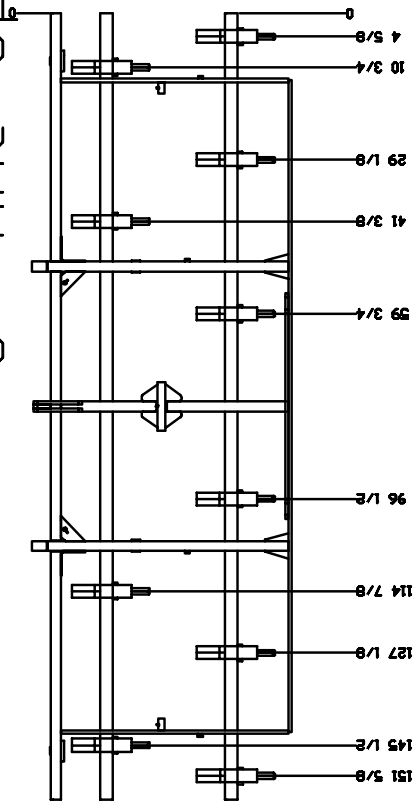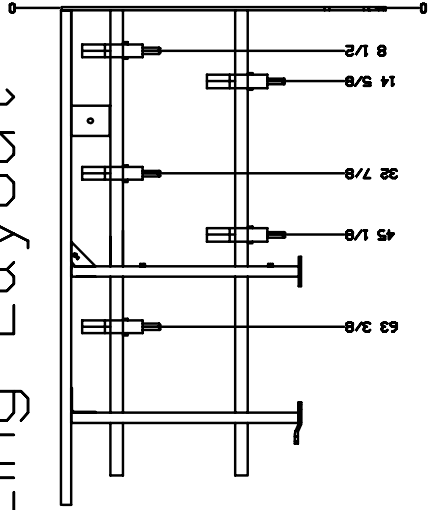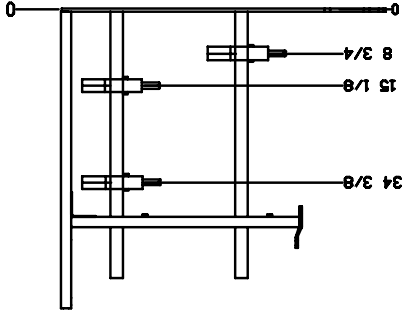







2900 Double-Fold 43' (13M) 4" Tine Spacing Layout

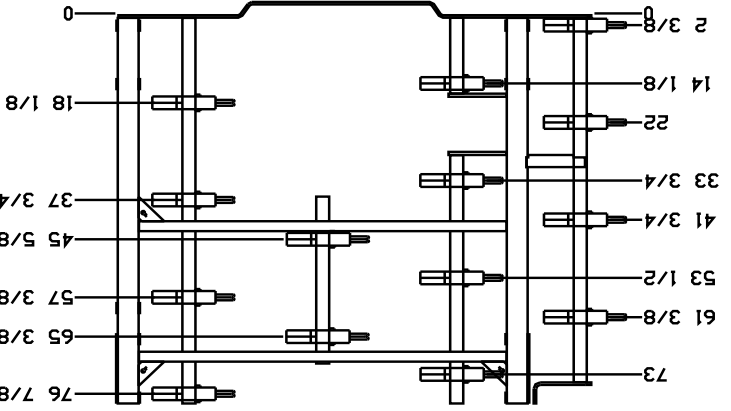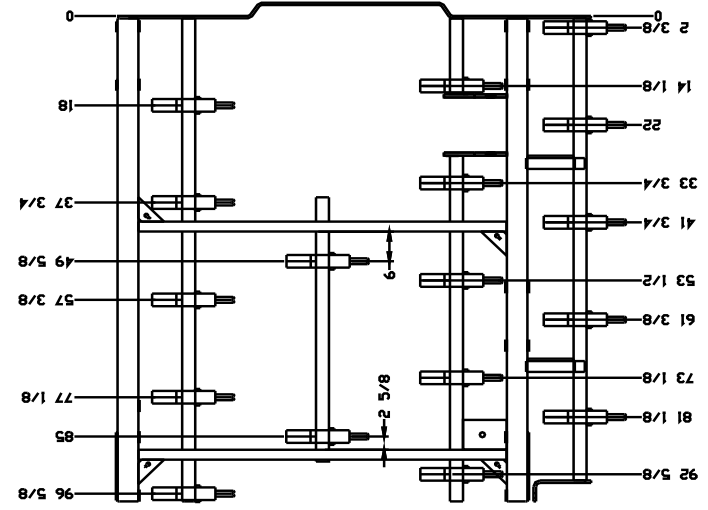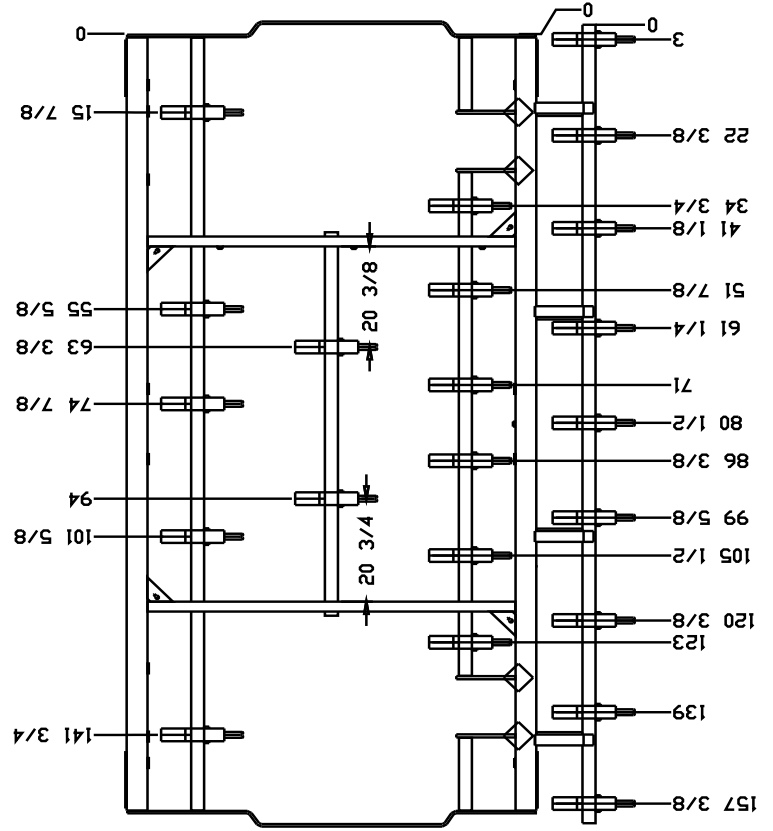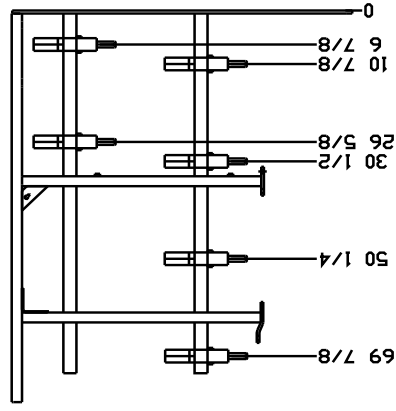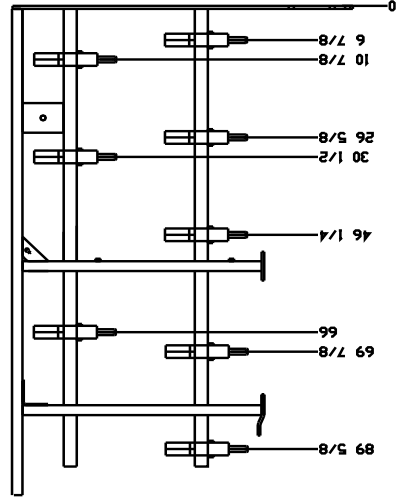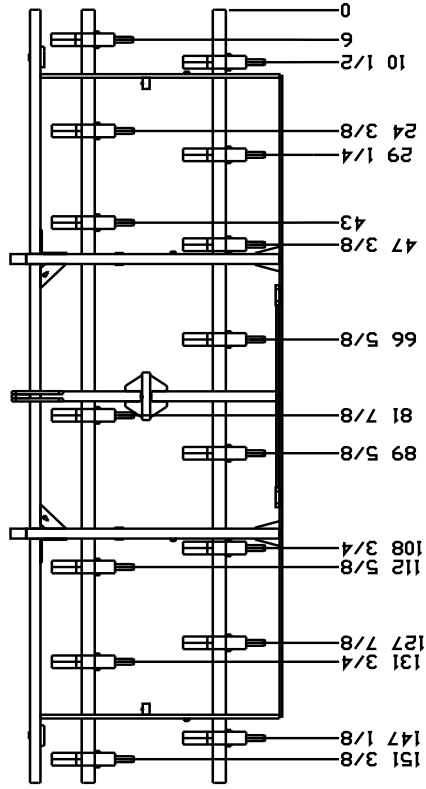







2900 Double-Fold 43' (13M) 6" Tine Spacing Layout

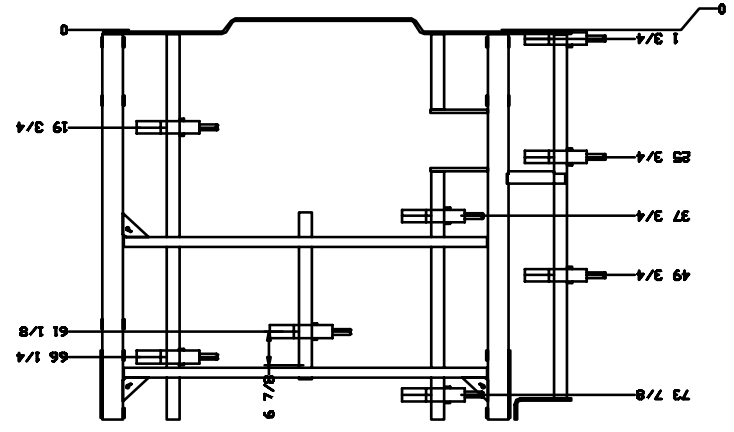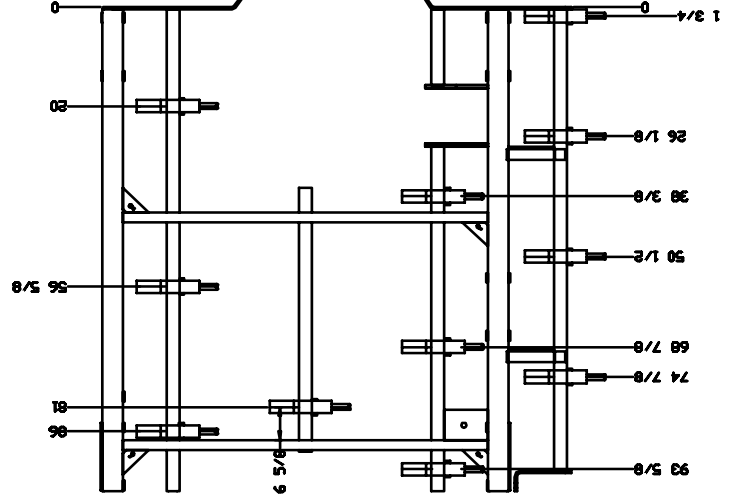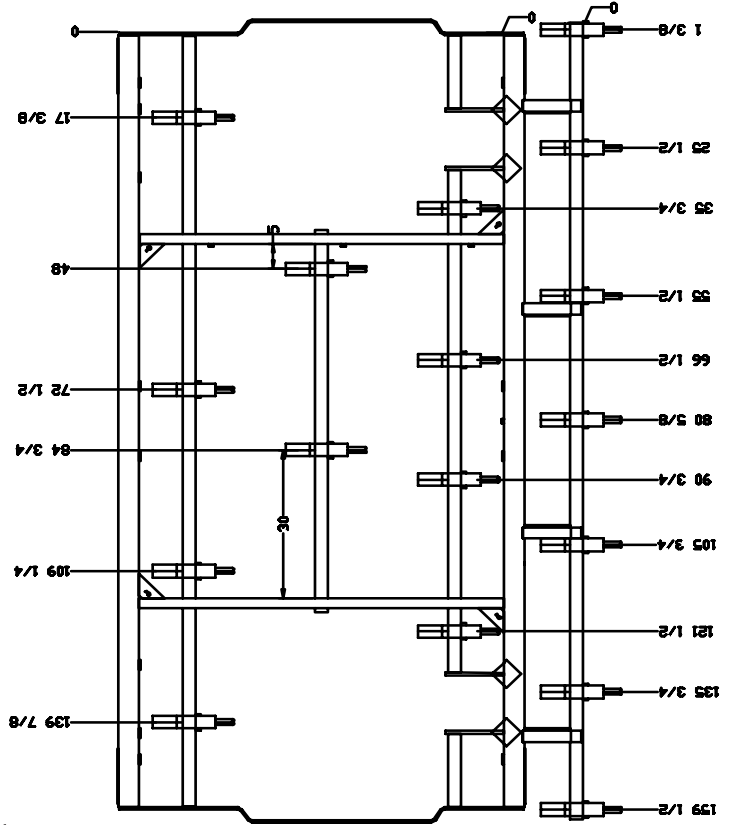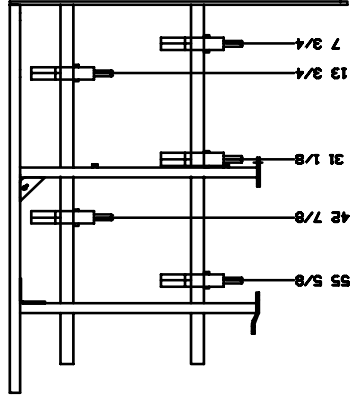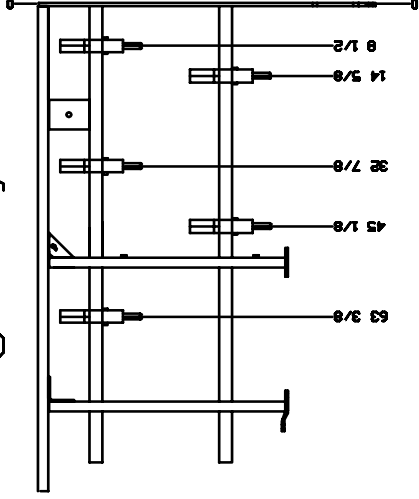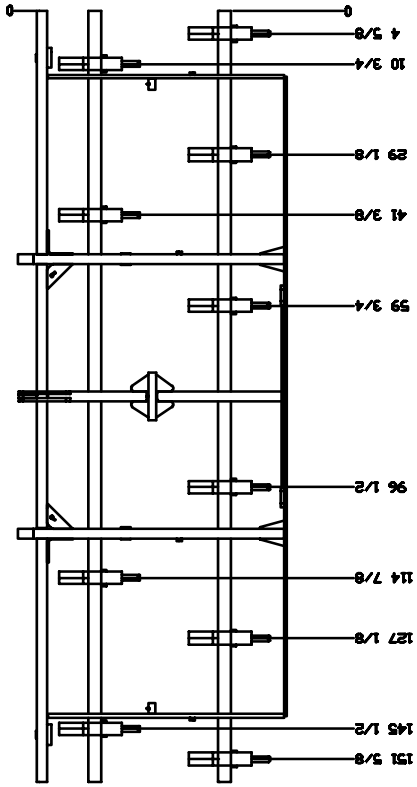







2900 Double-Fold 46' (14M) 4" Tine Spacing Layout

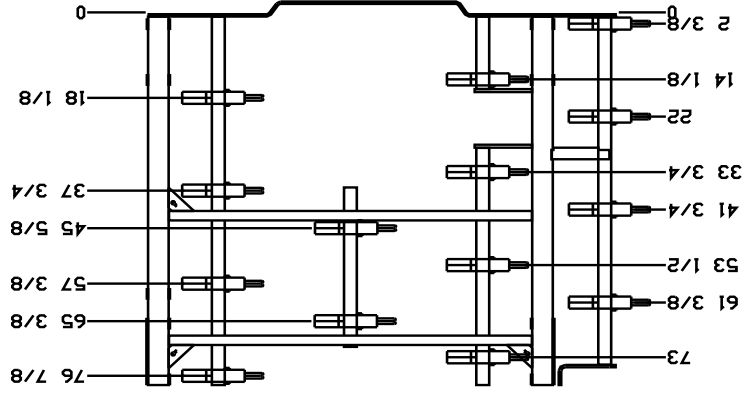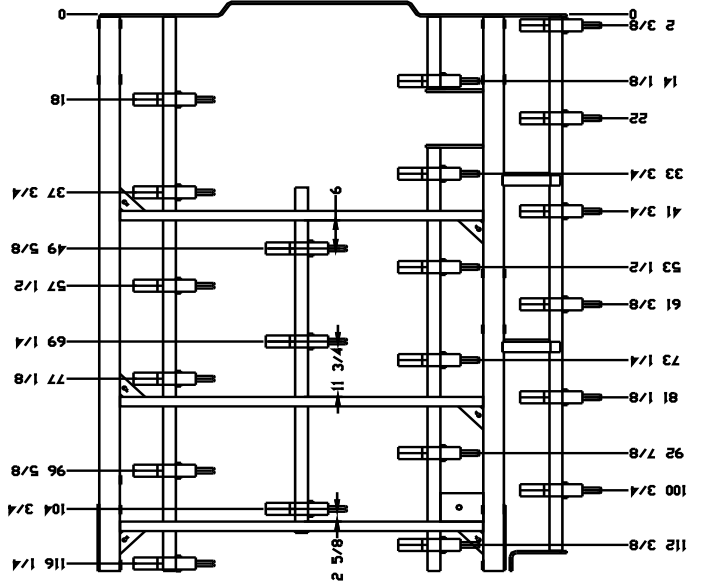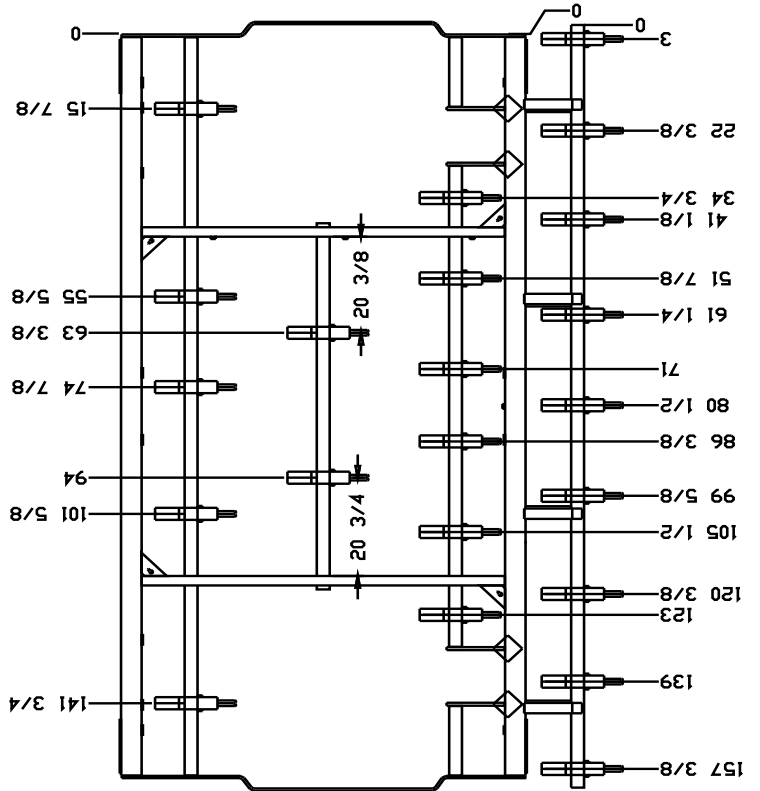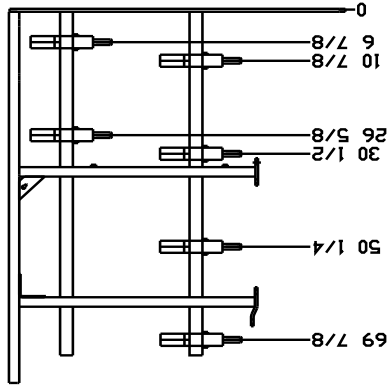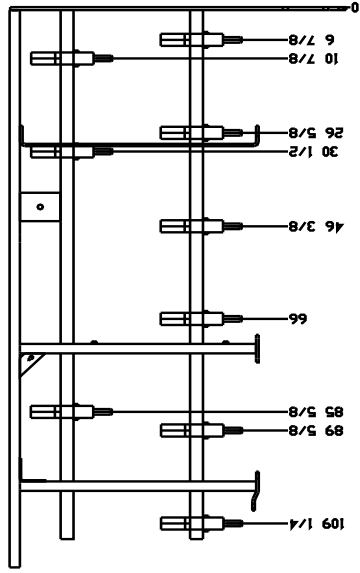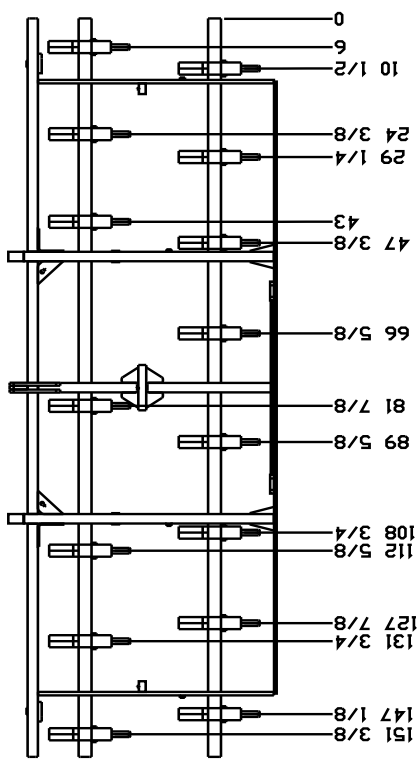







2900 Double-Fold 46' (14M) 6" Tine Spacing Layout

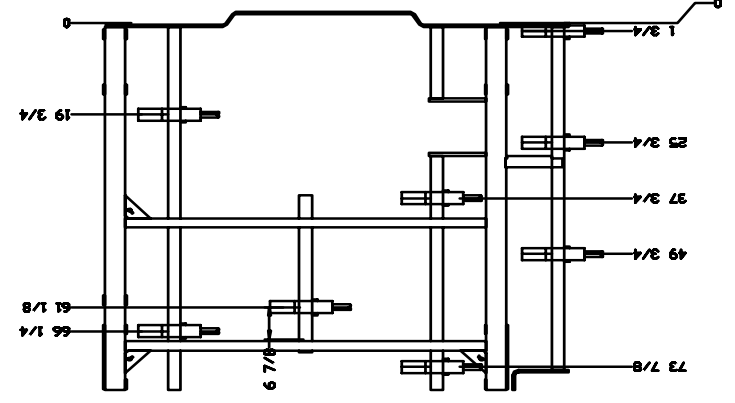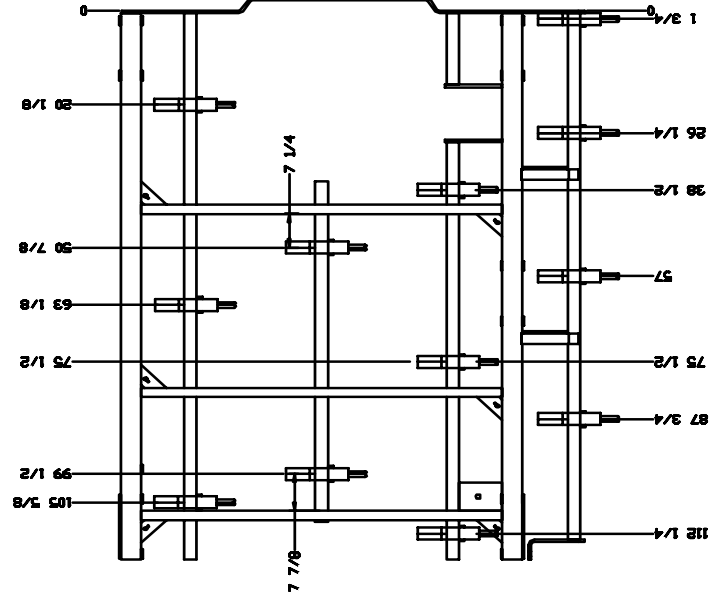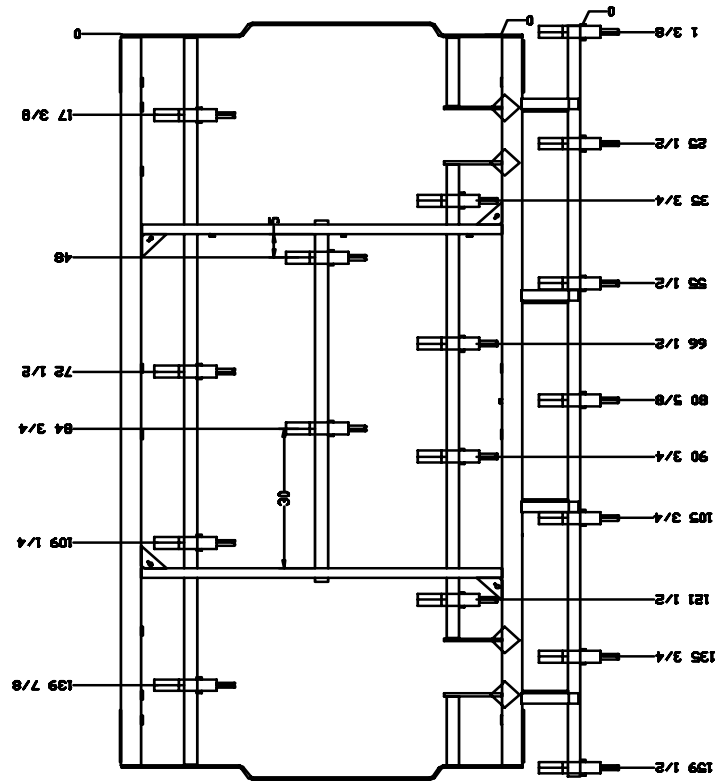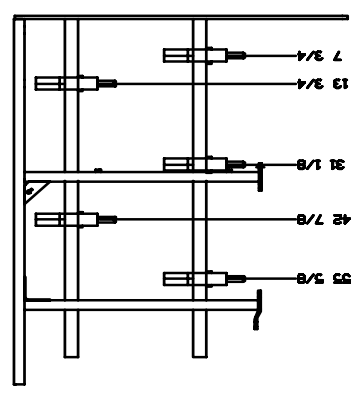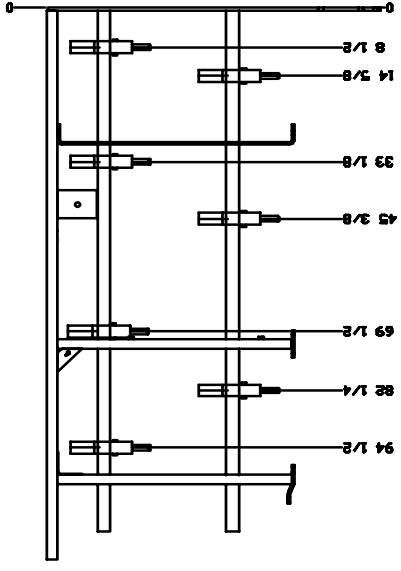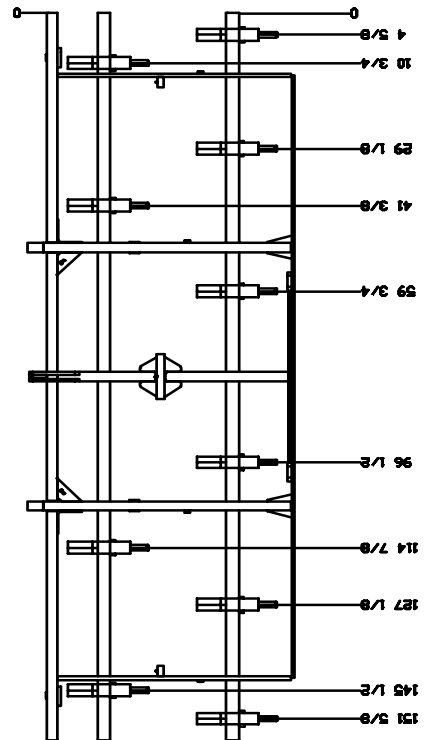

2900 Double-Fold 50' (15M) 4" Tine Spacing Layout

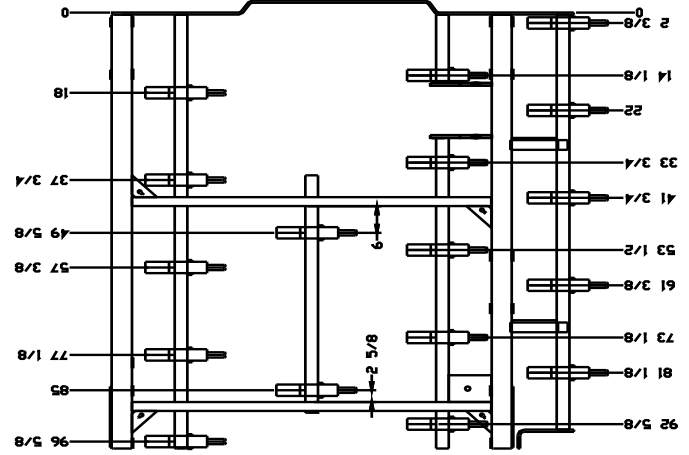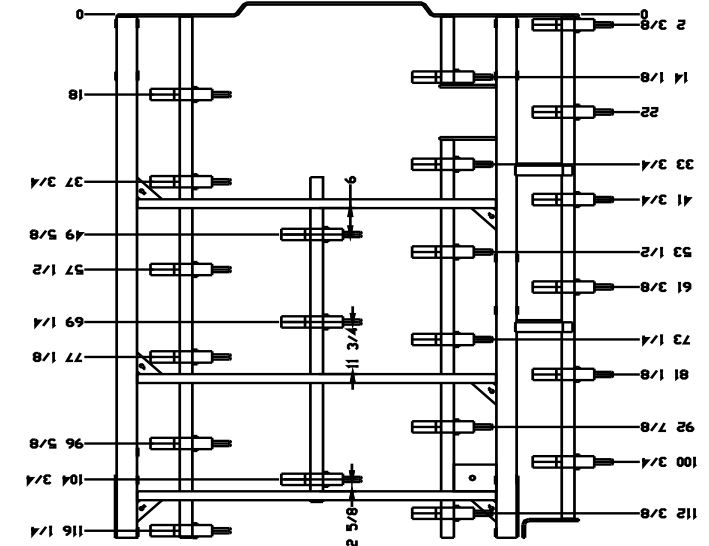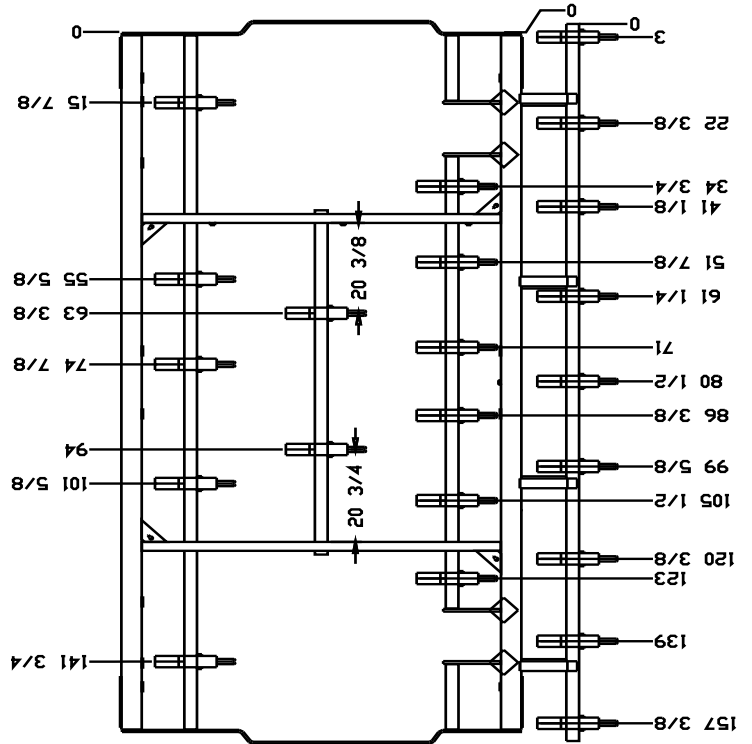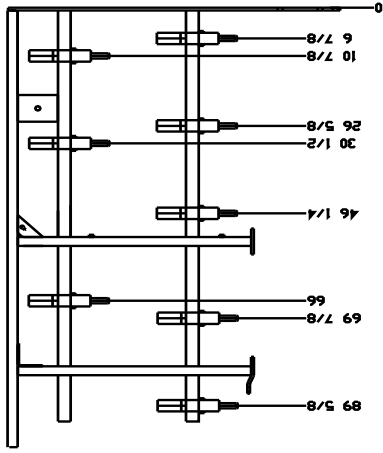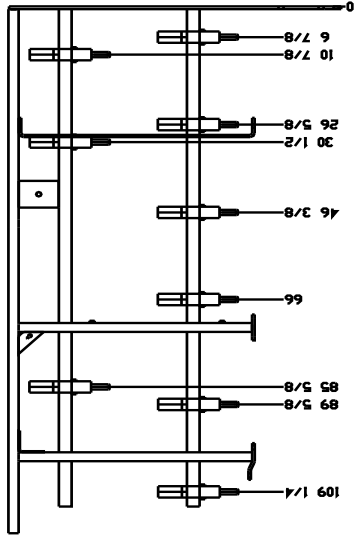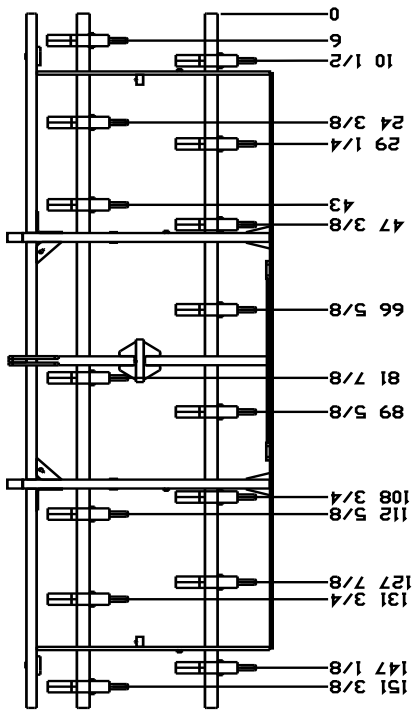

2900 Double-Fold 50' (15M) 6" Tine Spacing Layout

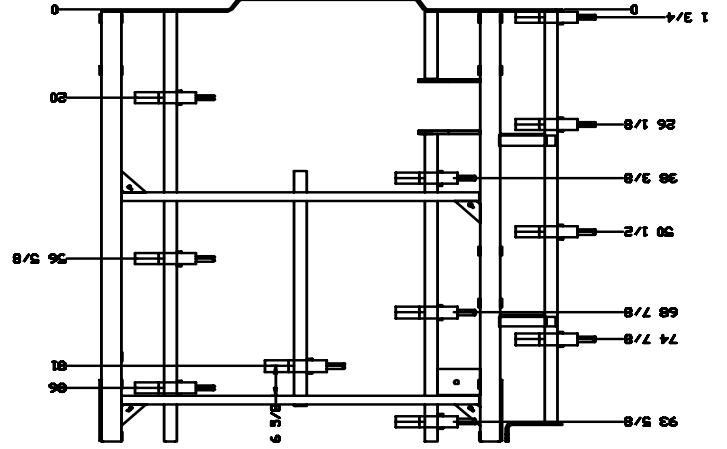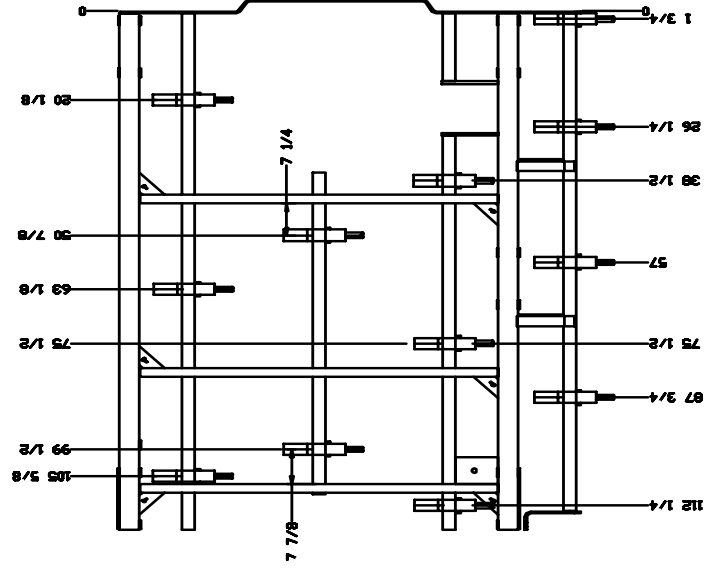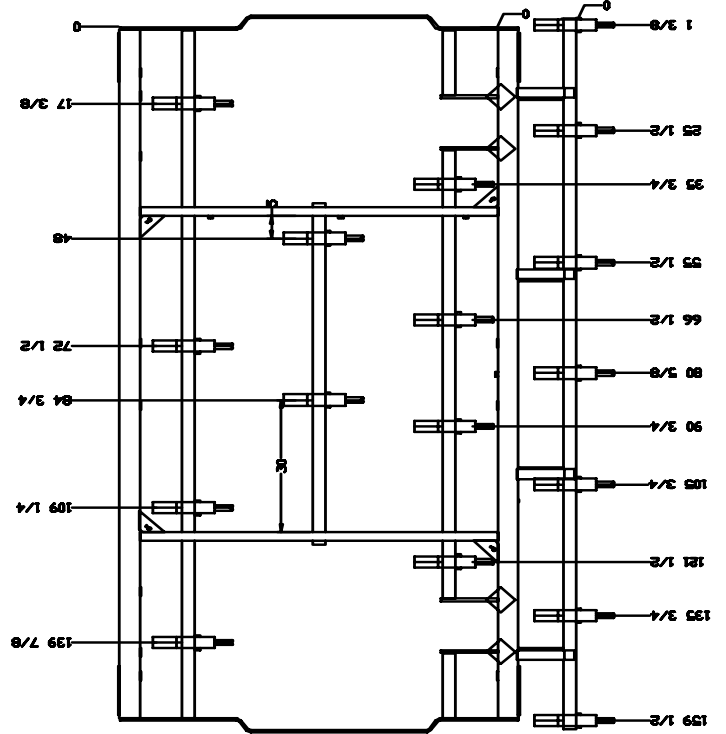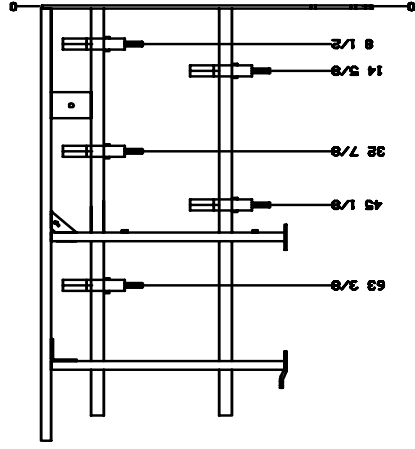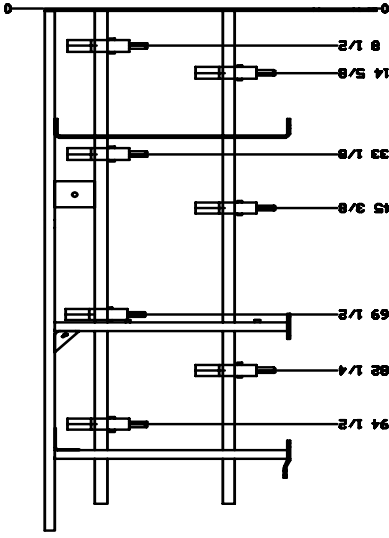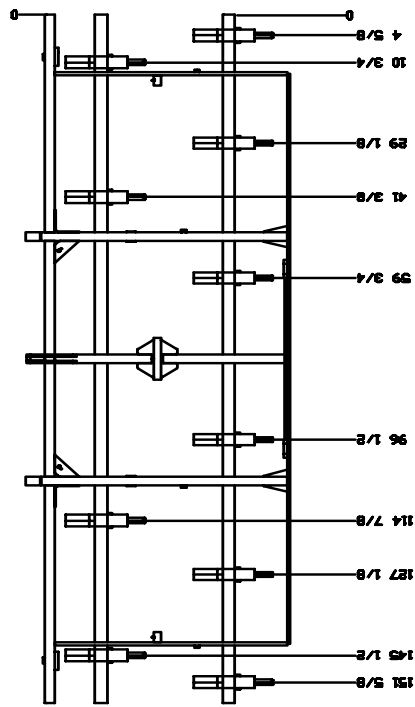

NOTES: